

## EagleStone ES11

# EagleStone Kids Tent Instruction Manual

Model: ES11

## 1. PRODUCT OVERVIEW

The EagleStone Kids Tent ES11 is designed to provide a fun and safe play space for children, both indoors and outdoors. It features a unique 'Snow Castle' design, complete with colorful LED cloud lights to create an enchanting atmosphere. The tent is constructed with child-friendly, non-toxic materials and a sturdy, stable structure. It is also designed for easy assembly and convenient storage.



Figure 1: The EagleStone Kids Tent ES11, showcasing its blue 'Snow Castle' design and integrated LED lights.

## 2. SAFETY GUIDELINES

Your child's safety is our top priority. Please adhere to the following guidelines:

- Ensure the tent is assembled on a flat, stable surface to prevent tipping.
- The tent is supported by smooth, sturdy poles to minimize the risk of injury during play.
- The tent fabric is made from non-toxic, soft polyester material, safe for children.
- The tent includes a well-ventilated window to ensure proper airflow and allow supervision.
- Keep the tent away from open flames, heaters, or any heat sources.
- Do not allow children to hang or climb on the tent structure.



Figure 2: Detail of the tent's ventilated window, designed for safety and interaction.



# 子供に優しい材質

無毒、柔らかい材質で作られたので、子供に優しい  
また、洗いやすく、アイロンできれいになれる



Figure 3: Illustration of the tent's child-friendly, non-toxic, and washable material.

## 3. ASSEMBLY INSTRUCTIONS

The EagleStone Kids Tent is designed for easy and quick assembly, typically taking about 10 minutes, even with a child's help. No excessive force is required.

1. **Unpack Components:** Carefully remove all tent components from the storage bag. You should have the tent fabric, poles, and LED light string.
2. **Assemble Poles:** Connect the pole segments to form the full support poles. The poles are designed to fit together easily.
3. **Insert Poles into Tent:** Guide the assembled poles through the designated sleeves or pockets on the tent fabric. Ensure they are securely seated at the base and top.
4. **Secure Tent Structure:** Once all poles are in place, secure the tent fabric to the poles using the ties or fasteners provided. This ensures the tent is stable and upright.
5. **Install LED Lights:** Attach the LED cloud light string along the roofline or inside the tent as desired.

Refer to the 'Operating the LED Lights' section for battery installation.

# 安全で、しっかりした構造

しっかりしたポールで支えられ、ベースも本体と繋がっているので倒れにくく、子供が思いっきり遊べる安全な空間となる



Figure 4: Detail of the tent's sturdy pole support system.



# 余分な収納スペースが不要!

収納バッグに入れると43\*43cmのサイズで  
どこに収納しても邪魔しない



Figure 5: Visual guide for the tent assembly process.

**Note:** While a reference video for assembly is mentioned in product descriptions, specific video URLs are not available in the provided data. Please follow the detailed steps above for assembly.

## 4. OPERATING THE LED LIGHTS

The tent comes with colorful LED cloud lights to enhance the play experience, especially in low-light conditions.

- **Battery Installation:** The LED cloud lights require 1.5V AA batteries. Locate the battery compartment on the light string, insert the batteries according to the polarity markings (+/-), and close the compartment securely.
- **Power On/Off:** There is a switch on the battery compartment or light string to turn the lights on and off.
- **Placement:** Once assembled, the light string can be draped along the top edges of the tent or secured to the interior loops to create the desired lighting effect.

# 雲ライト付き

暗い空間でも素晴らしい  
雰囲気を作り出す



Figure 6: The tent with its LED cloud lights creating a vibrant ambiance.

## 5. CARE AND MAINTENANCE

To ensure the longevity and cleanliness of your tent, follow these care instructions:

- **Cleaning:** The tent is made of soft material that is easy to wash. For minor dirt, wipe with a damp cloth and mild soap. For more thorough cleaning, the fabric can be hand-washed with cold water and air-dried. Do not machine wash or tumble dry.
- **Drying:** Ensure the tent fabric is completely dry before folding and storing to prevent mold or mildew.
- **Storage:** When not in use, disassemble the tent and store it in its provided storage bag in a cool, dry place away from direct sunlight.



## 6. STORAGE

The tent is designed for compact storage, making it ideal for homes with limited space or for transport.

- **Disassembly:** Reverse the assembly steps to carefully dismantle the tent. Remove the LED lights, then the poles, and finally fold the tent fabric.
- **Storage Bag:** The main body, LED lights, and poles can be easily stored in the included storage bag, which measures approximately 42.9 cm x 42.9 cm (16.9 inches x 16.9 inches).
- **Portability:** The compact size when stored makes it convenient to carry for outdoor activities or to simply put away when not in use.



# 想像力を豊かにする

大人気の「雪の城」デザインで  
子供の創造力を豊かに育てながら、家遊びも好きになります。

Figure 7: The tent's compact storage bag with dimensions.

## 7. TROUBLESHOOTING



If you encounter any issues with your EagleStone Kids Tent, please refer to the following common problems and solutions:

Problem	Possible Cause / Solution
Tent is unstable or collapses easily.	Ensure all poles are fully assembled and securely inserted into their designated sleeves/pockets. Verify that the tent fabric is properly tied or fastened to the poles. Assemble on a flat, level surface.
LED lights are not working.	Check if 1.5V AA batteries are correctly installed with the correct polarity. Ensure the battery compartment is closed. Turn the power switch to the 'On' position. Replace old batteries with new ones.
Missing parts or defective components upon arrival (e.g., broken pole).	Please contact our customer support immediately. Do not attempt to force assembly with damaged parts.

## 8. PRODUCT SPECIFICATIONS

Feature	Specification
Model Number	ES11
Product Dimensions	101 x 101 x 134 cm (40 x 40 x 53 inches)
Item Weight	1.1 kg (2.4 lbs)
Main Material	Polyester
Target Gender	Unisex
Manufacturer Recommended Age	6 years and up (Note: Product description also mentions 'infant' as target age, please refer to product packaging for precise age guidance.)
Batteries Required	Yes (for LED lights)
Batteries Included	No
Assembly Required	Yes
UPC	639510697433






## 9. CUSTOMER SUPPORT

For any inquiries, missing parts, or product defects, please do not hesitate to contact our store directly. We are committed to providing appropriate support and ensuring your satisfaction.

Please refer to your purchase platform or packaging for specific contact details for EagleStone Toys customer service.


© 2025 EagleStone. All rights reserved.
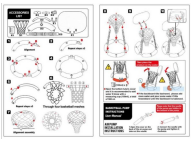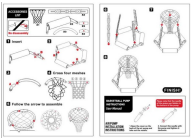
### Related Documents - ES11

	<p><a href="#">EagleStone Pool Basketball Hoop: Assembly and User Manual</a></p> <p>Detailed instructions for assembling and using the EagleStone Pool Basketball Hoop, including accessory list, step-by-step assembly guide, and air pump installation. Suitable for kids and adults.</p>
	<p><a href="#">EagleStone Pool Basketball Hoop Installation Guide</a></p> <p>Step-by-step instructions for assembling the EagleStone Pool Basketball Hoop and installing the air pump. Includes accessories list and assembly diagrams.</p>
	<p><a href="#">EagleStone Dinosaur Shooting Toy Assembly Instructions</a></p> <p>Comprehensive assembly and operation guide for the EagleStone Dinosaur Shooting Toy, detailing package contents, battery installation, gun assembly, shooting mechanics, and product modes.</p>
	<p><a href="#">Tranya ES11 Smart Band User Manual</a></p> <p>User manual for the Tranya ES11 Smart Band, covering product introduction, connection, operation, functions, charging, FAQs, and safety instructions.</p>
	



## REPLACE THE BAND

 

### Adjustment Ring (S)

If you have new hands and want to replace only the band, you can use the adjustment ring (S) to adjust the band length. The adjustment ring (S) is located on the back of the watch case. You can adjust the band length by turning the adjustment ring (S) clockwise or counter-clockwise.

Note: Pay attention to the position of the band and the adjustment ring (S) when you adjust the band length. Do not adjust the band length when the watch is on your wrist.

## CHARGE YOUR WATCH

Connect the USB charging cable with the watch and plug it into the power source.



## WEARING

When the device is connected to the USB cable, you can adjust the tightness of the band to fit your wrist.



## POWER ON/OFF

Long press the button on the upper right for 5 seconds to power on/off.

## INSTALL THE APP




## PERSONAL INFORMATION AND EXERCISE GOALS




## DEVICE CONNECTION

When connecting, please follow the following steps:

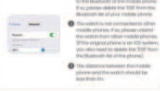

## DEVICE CONNECTION

Open the app and follow the steps to connect your smart watch.

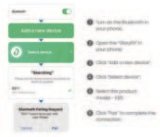

Note: If you don't see the TSP in the app, please check whether the phone has been authorized to the Bluetooth of your mobile phone. You can check the 'System' and 'Security' settings.

## BLUETOOTH CALL FUNCTION CONNECTION

1. Connect the phone. After pairing the app with the watch, you will find the connection status in the app. Bluetooth will be connected. The connection status will be 'Connected'.

2. Call Phone. (This is the default call function. Please note: The call function will only work when the phone is connected to the watch. The call function will not work when the phone is not connected to the watch.)

3. Call Phone. (This is the default call function. Please note: The call function will only work when the phone is connected to the watch. The call function will not work when the phone is not connected to the watch.)

## TIPS

1. During pairing, please ensure your phone's Bluetooth, GPS, and Location services are turned on. A stable connection between the watch and phone is required.

2. If you don't find the device in the app, please check whether the phone has been authorized to the Bluetooth of your mobile phone. You can check the 'System' and 'Security' settings.

3. The watch will turn off when the battery is low. Please charge the watch when the battery is low. The watch will turn on when the battery is full.

## OPERATION


1. Press the button on the upper right to turn the screen on/off.

2. Press the button on the upper right to turn the screen on/off.

3. Press the button on the upper right to turn the screen on/off.

## CHANGING AND DOWNLOADING WATCH FACES

Click on the watch face in the middle of the app to change the watch face.

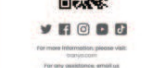

# ES11

Tranya ES11  
Banda Inteligente

V02040026

 
[tranya.support@tranya.com](mailto:tranya.support@tranya.com)  
[www.tranya.com](http://www.tranya.com)



## CONTEÚDO DA CAIXA



## SUBSTITUA A PULSERA




Atenção: substitua corretamente.

Se quiser trocar a cor ou o tamanho da pulseira, basta deslizar o botão de substituição e inserir a nova pulseira. A pulseira é compatível com a maioria dos relógios de pulso. Não é necessário usar a pulseira de substituição.

Nota: a pulseira é feita de plástico e pode ser danificada se não for usada corretamente. Não a use para bater ou para jogar.

## CARREGUE SEU RELÓGIO

 

## USO

Use o relógio como um relógio comum. Não o use para atividades físicas ou esportes.



## USAR/DESUSAR

Antes de usar o relógio, certifique-se de que a bateria esteja totalmente carregada.

 
## INSTALAR O APLICATIVO



## CONEXÃO DO DISPOSITIVO



## CONEXÃO DO DISPOSITIVO



## DICA



## DICA


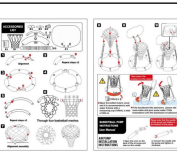 


## OPERAÇÃO



Comprehensive user manual for the Tranya ES11 Smart Band, covering setup, device connection, app installation, operation, and features. Learn how to pair your device, manage settings, and use its functions.



	
	<p><a href="#">EagleStone Pool Basketball Hoop: Assembly and User Manual</a></p> <p>Detailed instructions for assembling and using the EagleStone Pool Basketball Hoop, including accessory list, step-by-step assembly guide, and air pump installation. Suitable for kids and adults.</p>