

Sharper Image CERAMIC 3

Sharper Image CERAMIC 3 Personal Tower Space Heater User Manual

Model: CERAMIC 3 | Brand: Sharper Image

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using this heater. Failure to follow these instructions may result in fire, electric shock, injury to persons, or property damage. Keep this manual for future reference.

- Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Use handles when moving this heater.
- Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the heater and keep them away from the sides and rear.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Discard heater or return to authorized service facility for examination and/or repair.
- Do not use outdoors.
- To disconnect heater, turn controls to OFF, then remove plug from outlet.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable vapors or liquids are used or stored.
- Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).

- This product is equipped with a **Tip-Over Protection** switch that automatically shuts off the heater if it is accidentally tipped over.
- The heater also features a **2-Stage Auto Shut-Off Safety System** to prevent overheating.
- The **Cool-Touch Case** helps prevent accidental burns during operation.

IMPORTANT INTERNATIONAL DISCLAIMER: This item is built to meet U.S. voltage requirements and may not function properly when used in conjunction with external devices that alter or convert voltage or frequency of electricity. Improper use or shipping the product outside the U.S. will void all warranties.

2. PRODUCT OVERVIEW

The Sharper Image CERAMIC 3 Personal Tower Space Heater is designed to provide targeted warmth with a compact and modern design. It features intuitive touch controls and multiple safety mechanisms for reliable operation.

Package Contents:

- Sharper Image CERAMIC 3 Personal Tower Space Heater
- Owner's Guide (this manual)

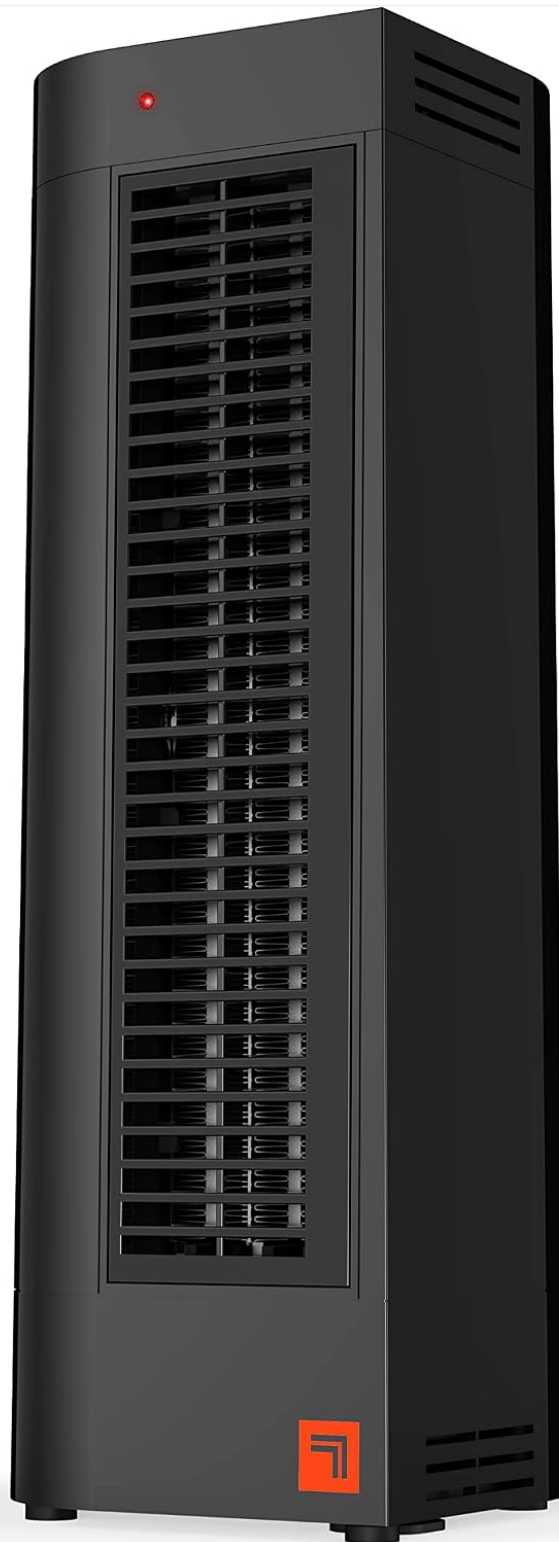


Figure 1: Front view of the Sharper Image CERAMIC 3 Personal Tower Space Heater. This image shows the sleek, black tower design with a vertical grille and a red indicator light at the top.

3. SETUP

Follow these steps to set up your Sharper Image CERAMIC 3 heater for first use.

1. **Unpack the Heater:** Carefully remove the heater from its packaging. Retain the packaging for off-season storage.
2. **Placement:** Place the heater on a firm, level surface. Ensure there are no obstructions within 3 feet (0.9 m) of the front, sides, and rear of the heater to allow for proper airflow and prevent fire hazards. Do not place the heater on soft surfaces like rugs or carpets that could block the air intake.
3. **Power Connection:** Plug the power cord directly into a standard 120V AC wall outlet. Do not use extension cords

or power strips.



Figure 2: The compact Sharper Image CERAMIC 3 heater positioned discreetly under a wooden desk, demonstrating its suitability for personal spaces like home offices.

4. OPERATING INSTRUCTIONS

The CERAMIC 3 heater features simple touch controls for easy operation.



TOUCH-SENSITIVE
CONTROLS



2 HEAT SETTINGS
(LOW/HIGH)



Figure 3: Close-up of the touch-sensitive control panel located on the top of the heater, showing the Power button and two heat setting buttons.

1. **Power On/Off:** Press the **Power button** (circle with vertical line) once to turn the heater ON. The red indicator light at the top of the heater will illuminate. Press the Power button again to turn the heater OFF.
2. **Select Heat Setting:** The heater offers two heat settings:
 - Press the **I button** for Low Heat.
 - Press the **II button** for High Heat.

You can switch between Low and High heat settings by pressing the respective buttons.

The heater will begin to distribute warmth quickly and evenly into your personal space.

5. MAINTENANCE

Proper maintenance ensures the longevity and efficient operation of your heater.

- 1. **Cleaning:** Always unplug the heater before cleaning. Use a soft, damp cloth to wipe the exterior surfaces. Do not use abrasive cleaners or solvents. The manufacturer recommends **Hand Wipe Clean** for care.
- 2. **Storage:** When not in use, store the heater in a cool, dry place. It is recommended to store it in its original packaging to protect it from dust and damage.
- 3. **Air Intake/Exhaust:** Periodically check the air intake and exhaust vents for dust or debris accumulation. Use a vacuum cleaner with a brush attachment to gently clean these areas. Do not attempt to disassemble the heater for cleaning.

6. TROUBLESHOOTING

If your Sharper Image CERAMIC 3 heater is not operating as expected, refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Heater does not turn on.	No power to the unit.	Ensure the power cord is securely plugged into a working 120V AC outlet. Check the circuit breaker.
Heater turns off unexpectedly.	Tip-Over Protection activated.	Ensure the heater is on a stable, level surface. If tipped, place it upright and restart.
Heater turns off unexpectedly.	Overheat Protection activated.	Unplug the heater and allow it to cool for 30 minutes. Check for any obstructions to air intake/exhaust. Restart the heater.
No heat output.	Incorrect heat setting selected.	Ensure either the 'I' or 'II' button is pressed for the desired heat level.



TIP-OVER
PROTECTION



2 STAGE AUTO
SHUT-OFF SAFETY



Figure 4: Visual representation of the heater's integrated safety features, including tip-over protection and a 2-stage automatic shut-off system for enhanced user safety.

7. SPECIFICATIONS

Detailed technical specifications for the Sharper Image CERAMIC 3 Personal Tower Space Heater.

Feature	Detail
Brand	Sharper Image
Model	CERAMIC 3
Product Dimensions (D x W x H)	4.75" x 4.63" x 13.38"
Item Weight	2.9 pounds

Feature	Detail
Voltage	120 Volts
Amperage	12.5 Amps
Number of Heat Settings	2 (Low, High)
Max Temperature Setting	320 Degrees Fahrenheit
Special Features	Corded, Overheat Protection, Tip-Over Protection, Cool Touch Case, Touch Controls
Indoor/Outdoor Usage	Indoor
Care Instructions	Hand Wipe Clean

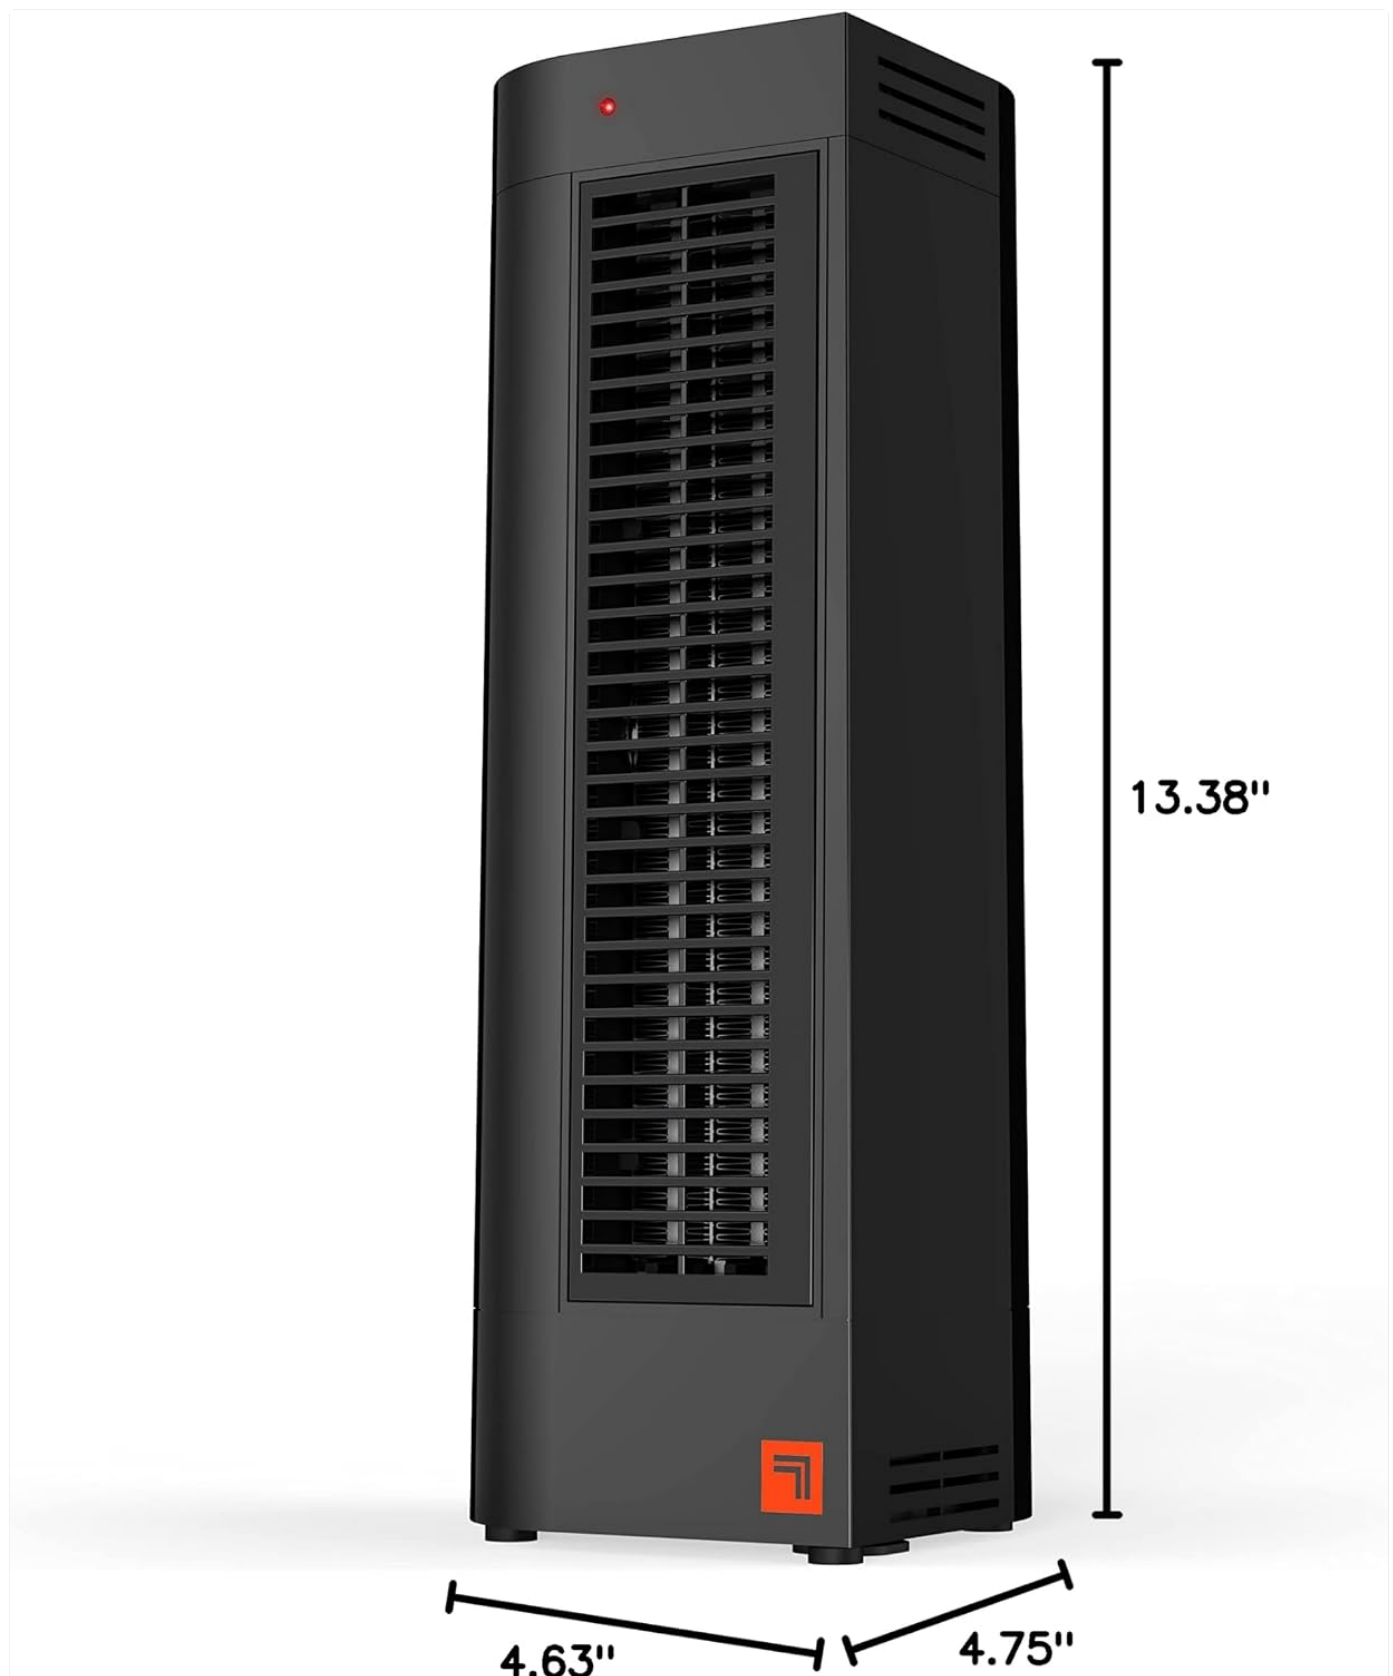


Figure 5: A diagram illustrating the precise dimensions of the CERAMIC 3 heater: 13.38 inches in height, 4.63 inches in width, and 4.75 inches in depth.

8. WARRANTY AND SUPPORT

Your Sharper Image CERAMIC 3 Personal Tower Space Heater is covered by a **3-year manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use.

For warranty claims, technical support, or further assistance, please refer to the official user guide or contact Sharper Image customer service.

You can also download the official User Guide (PDF) for more detailed information:[Download User Guide \(PDF\)](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question