

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [EZICLEAN](#) /

› [EZICLEAN Cyclosteam P310 Multifunction Vacuum Steam Mop Instruction Manual](#)

EZICLEAN Cyclosteam P310

EZICLEAN Cyclosteam P310 Multifunction Vacuum Steam Mop Instruction Manual

Model: Cyclosteam P310 | Brand: EZICLEAN

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, maintenance, and troubleshooting of your EZICLEAN Cyclosteam P310 Multifunction Vacuum Steam Mop. Please read this manual thoroughly before first use and keep it for future reference.





Image: The EZICLEAN Cyclosteam P310 Multifunction Vacuum Steam Mop, showcasing its upright design and blue accents.

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions when using an electrical appliance. Read all instructions before using this appliance.

- Always ensure the appliance is unplugged before assembly, disassembly, or maintenance.
- Do not immerse the appliance in water or other liquids.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with a damaged cord or plug. If the appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Keep cord away from heated surfaces.
- Do not allow children to operate the appliance. Close supervision is necessary when used near children.
- Use caution when cleaning stairs.

- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without dust bag and/or filters in place.
- Always turn off this appliance before connecting or disconnecting the hose.
- Store the appliance indoors in a cool, dry area.

PRODUCT OVERVIEW AND COMPONENTS

The EZICLEAN Cyclosteam P310 is a versatile cleaning appliance designed to vacuum, wash, and disinfect surfaces using steam. It features a detachable handheld unit for targeted cleaning.



Image: The EZICLEAN Cyclosteam P310 in its upright storage position, demonstrating its compact design.

Included Components:

- Main unit (vacuum and steam mop)
- Detachable handheld steam cleaner

- Water tank
- Dust collection bin
- Floor cleaning pads (3 included)
- Nylon round brush for deep cleaning
- Steam nozzle for powerful and precise jet
- Brush for cleaning tile joints
- Anti-calc filter (replacement included)

SETUP AND ASSEMBLY

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Handle Assembly:** Insert the handle into the main body of the appliance until it clicks securely into place.
3. **Water Tank Filling:**
 - Remove the water tank from the main unit.
 - Open the cap and fill the tank with distilled or demineralized water up to the MAX line. Do not add cleaning solutions or detergents to the water tank.
 - Close the cap securely and reinsert the water tank into the appliance.
4. **Dust Bin Installation:** Ensure the dust collection bin is correctly installed and empty before use.
5. **Floor Pad Attachment:** Attach a clean floor cleaning pad to the bottom of the steam mop head.

OPERATING INSTRUCTIONS

General Operation:

1. **Power Connection:** Plug the power cord into a suitable electrical outlet. The appliance has a long cable for extended reach.
2. **Power On:** Press the main power button, usually located on the side of the unit.
3. **Mode Selection:** Select your desired cleaning mode: vacuum only, steam only, or combined vacuum and steam.



Image: A user demonstrating the EZICLEAN Cyclosteam P310 in use on a hard floor, highlighting its maneuverability.

Vacuum Function:

To use the vacuum function, ensure the dust bin is empty and correctly installed. Select the vacuum mode. Guide the appliance over the floor to pick up dust, debris, and pet hair. The powerful suction effectively cleans various hard floor surfaces.



Image: The vacuum function of the EZICLEAN Cyclosteam P310 effectively collecting debris from a tiled surface.

Steam Mop Function:

1. **Water Tank:** Ensure the water tank is filled as described in the Setup section.
2. **Heat Up:** Turn on the appliance and select the steam mode. Allow approximately 30 seconds for the water to heat up and produce steam.
3. **Steam Intensity:** Adjust the steam intensity (low, medium, high) using the controls on the handle.
4. **Application:** Press the steam trigger on the handle to release steam. Move the mop slowly and steadily over the floor surface. The steam helps to disinfect and remove stubborn dirt.



Image: The steam mop function of the EZICLEAN Cyclosteam P310 effectively cleaning a liquid spill on a hard floor.

Detachable Handheld Steam Cleaner:

For targeted cleaning of various surfaces, the handheld steam cleaner can be detached from the main unit.

1. **Detachment:** Press the release button to detach the handheld unit.
2. **Accessory Attachment:** Attach the appropriate accessory (e.g., nylon brush for grout, steam nozzle for precise cleaning) to the handheld unit.
3. **Steam Application:** Ensure the water tank is filled. Press the steam trigger on the handheld unit to release steam. Direct the steam towards the area to be cleaned.



Image: The detachable handheld steam cleaner being used to clean the interior of an oven, demonstrating its versatility.



Image: A collage illustrating various applications of the handheld steam cleaner, such as cleaning car wheels, bathroom fixtures, and grill grates.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your appliance.

1. Emptying the Dust Bin:

- After each use, or when full, detach the dust bin.
- Open the bin and empty its contents into a waste receptacle.
- Clean the dust bin and filter with water if necessary, ensuring they are completely dry before reassembly.

2. Cleaning Floor Pads:

- Remove the floor pad after each use.
- The pads are machine washable (up to 40°C) or can be hand-washed. Allow to air dry completely.

3. **Water Tank Cleaning:** Periodically rinse the water tank with clean water. Do not use harsh chemicals.

4. **Anti-Calc Filter Replacement:** The appliance includes an anti-calc filter to prevent limescale buildup. Replace this filter as

needed, or approximately every 6 months, depending on water hardness and usage frequency. A replacement filter is provided.

5. **Storage:** Store the appliance in a cool, dry place, away from direct sunlight and extreme temperatures. Ensure the power cord is neatly wrapped.

TROUBLESHOOTING

If you encounter issues with your EZICLEAN Cyclosteam P310, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power button not pressed; circuit breaker tripped.	Ensure power cord is securely plugged in. Press the main power button. Check your household circuit breaker.
No steam or low steam output.	Water tank empty; appliance not heated up; steam nozzle blocked; anti-calc filter needs replacement.	Refill water tank. Allow 30 seconds for heating. Clean steam nozzle. Replace anti-calc filter.
Poor vacuum suction.	Dust bin full; filters clogged; obstruction in nozzle/hose.	Empty and clean dust bin. Clean or replace filters. Check for and remove any obstructions.
Water leaking from unit.	Water tank cap not secured; water tank not properly installed.	Ensure water tank cap is tightly closed. Reinstall water tank correctly.

If the problem persists after attempting these solutions, please contact customer support.

SPECIFICATIONS

- **Model:** EZIclean Cyclosteam P310
- **Brand:** EZICLEAN
- **Power:** 1200 Watts
- **Voltage:** 230 Volts
- **Dimensions (L x W x H):** 26 x 24 x 118 cm
- **Weight:** 6.4 Kilograms
- **Noise Level:** 84 Decibels
- **Heat-up Time:** 30 Seconds
- **Steam Autonomy:** Approximately 30 minutes
- **Special Feature:** Detachable handheld unit
- **Surface Recommendation:** Hard floors
- **Manufacturer:** E.ZICOM
- **Country of Origin:** China

WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your purchase or visit the official EZICLEAN website. For technical support, spare parts, or service inquiries, please contact EZICLEAN customer service.

Contact Information: Please refer to your product packaging or the EZICLEAN official website for the most up-to-date contact details.

Related Documents - Cyclosteam P310

	Indice de Réparabilité EZIclean Cycloboost FR8 Flex (8,2/10) Fiche d'information détaillée sur l'indice de réparabilité de l'aspirateur sans fil EZIclean Cycloboost FR8 Flex, incluant les critères, les notes et les informations du fournisseur.
	Manuel d'utilisation Eziclean Aqua Connect x1200 - Robot Aspirateur Laveur Connecté Ce manuel d'utilisation détaillé présente le robot aspirateur laveur connecté Eziclean Aqua Connect x1200. Il couvre l'installation, l'utilisation, la maintenance et les consignes de sécurité pour une performance optimale.
	Manuel d'utilisation Eziclean Aqua Connect x1200 - Robot Aspirateur Laveur Connecté Ce manuel d'utilisation détaillé présente le robot aspirateur laveur connecté Eziclean Aqua Connect x1200. Il couvre l'installation, l'utilisation, la maintenance et les consignes de sécurité pour une performance optimale.
	Totaline Basic 1H/1C & 2H/1C Non-Programmable Thermostats Operating Manual Operating manual for Totaline Basic 1H/1C and 2H/1C non-programmable thermostats, covering features, operation, troubleshooting, and warranty. Available in English, French, and Spanish.
	Totaline Basic 1H/1C & 2H/1C Non-Programmable Thermostat Operating Manual Operating manual for Totaline Basic 1H/1C and 2H/1C non-programmable thermostats, detailing features, operation, maintenance, and troubleshooting for efficient climate control.
	Crucial NVMe SSD Installation Guide for Laptops, Desktops, and PS5 Comprehensive guide on how to install your Crucial NVMe SSD in laptops, desktops, and PlayStation 5 consoles. Includes steps for installation with and without heatsinks, cloning data, and using Crucial Storage Executive.



[pdf]

JUSQU'À 100€ REMBOURSÉS* ManoMano ROBOTS LAVE VITRES eziclean® Hobot 368 50€

remboursés eziclean Cyclosteam P310 20€ P32030916106cdn manomano files 30916106 |||

JUSQU'À 100€ REMBOURSÉS* Du 1^{er} décembre 2021 au 16 janvier 2022 *Voir modalités

au verso Comment bénéficier ... TEURS LAVANTS SCHANT ET ASPIRATEURS

VAPEUR eziclean Cyclowash P410 eziclean Cyclowash P420 eziclean **Cyclosteam**

P310 eziclean Cyclosteam P320 ASPIRATEUR MAIN CONVERTIBLE eziclean

Blaster F130 PURIFICA...

lang:fr score:48 filesize: 8.84 M page_count: 2 document date: 2021-12-03



[pdf] User Manual Instructions

Notice d'utilisation Aspirateur nettoyeur vapeur EZICLEAN CYCLOSTEAMP320 U Techno fr Instructions

ts 1735660230 u techno media 90 15 ef 1729772459 |||

*User manual for your multifunction steam cleaner / Manual de usuario de su

limpiadora a vapor multifuncin FR EN ES MANUEL D'UTILISATION DE VOTRE

ASPIRATEUR NETTOYEUR VAPEUR MULTIFONCTIONS* eziclean **Cyclosteam**

P310 et P320 Precautions d'utilisation / Precautions for use / Precauciones de uso ...

lang:fr score:38 filesize: 1.92 M page_count: 20 document date: 2024-10-16



[pdf] User Manual Instructions

Notice d'utilisation Aspirateur nettoyeur vapeur EZICLEAN CYCLOSTEAMP310 U Techno fr Instructions

ts 1735204987 u techno media a8 4b 6e 1729772458 |||

*User manual for your multifunction steam cleaner / Manual de usuario de su

limpiadora a vapor multifuncin FR EN ES MANUEL D'UTILISATION DE VOTRE

ASPIRATEUR NETTOYEUR VAPEUR MULTIFONCTIONS* eziclean **Cyclosteam**

 
P310 et P320 Precautions d'utilisation / Precautions for use / Precauciones de uso ...

lang:fr score:38 filesize: 1.91 M page_count: 20 document date: 2021-03-26




[\[pdf\]](#) User Manual Instructions

Notice d'utilisationEziclean Aspirateur vapeur Cyclosteam P320 KAZOOCYCLOSTEAM IM
MULTILINGUEcdn shopify s files 1 0708 0633 9897 CYCLOSTEAM MULTILINGUE v 1750150977
utilisationMANUELEziclean KAZOOVeuillez respecter les règles de sécurité élémentaires notamment
suivantes Cet appareil peut être utilisé par des enfants âgésCYCLOSTEAM MULTILINGUEmediacd
1750150977media adeo mkp 70575cb843f1c04c43730995f4cb25f6 media ||| ||| *User manual for your
multifunction steam cleaner / Manual de usuario de su limpiadora a vapor multifuncin FR EN ES MANUEL
D UTILISATION DE VOTRE ASPIRATEUR NETTOYEUR VAPEUR MULTIFONCTIONS* eziclean
Cyclosteam P310 et P320 Prcautions d util
*User manual for your multifunction steam cleaner / Manual de usuario de su
limpiadora a vapor multifuncin FR EN ES MANUEL D UTILISATION DE VOTRE
ASPIRATEUR NETTOYEUR VAPEUR MULTIFONCTIONS* eziclean **Cyclosteam**
P310 et P320 Prcautions d utilisation / Precautions for use / Precauciones de uso ...
lang:fr **score:37** filesize: 1.91 M page_count: 20 document date: 2021-03-26

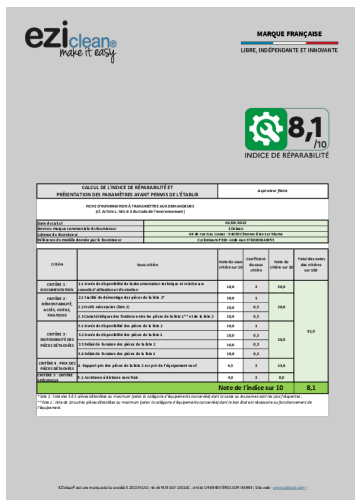

[\[pdf\]](#) Documentation

GC 3760190146953 P310 ADEME Indice de réparabilité Aspirateur nettoyeur vapeur EZICLEAN
CYCLOSTEAMP310 U Techno fr reparabilite ts 1735204987 u techno media 5b ea bc 1729772458 |||
MARQUE FRANAISE LIBRE, INDPENDANTE ET INNOVANTE 8,1 CALCUL DE L
INDICE DE RPARABILIT ET PRSENTATIO ... le donne par le fournisseur 01/09/2022
EZIclean 46-48 rue Gay Lussac - 94430 Chennevires sur Marne **Cyclosteam P310** -
code ean 3760190146953 Critre Sous-critre Note du souscritre sur 10 Coefficient...
lang:fr **score:31** filesize: 454.19 K page_count: 1 document date: 2022-09-26

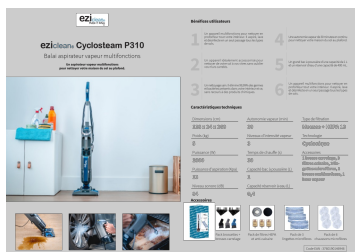 

[\[pdf\]](#) Dimension Guide

Fiche technique Aspirateur nettoyeur vapeur EZICLEAN CYCLOSTEAMP310 U Techno fr ts 1735204986
u techno media 05 ac d8 1729772458 |||
eziclean **Cyclosteam P310** Balai aspirateur vapeur multifonctions Un aspirateur
vapeur multifonctions pour nettoyer votre maison du sol au plafond. Bnfiles
utilisateurs 1 Un appareil multifonctions pour nettoyer en profondeur tout votre intieur.
Il aspire, lave et dsinfecte en un seul passage tous...
lang:fr **score:31** filesize: 2.43 M page_count: 1 document date: 2023-06-22




[pdf]

JUSQU À 100€REMBOURSÉS* 33394032 cdn manomano files |||

JUSQU 100 REMBOURSS* Du 1er dcembre 2021 au 16 janvier 2022 *Voir modalits
au verso Comment bnfic ... TEURS LAVANTS SCHANT ET ASPIRATEURS
VAPEUR eziclean Cyclowash P410 eziclean Cyclowash P420 eziclean **Cyclosteam**
P310 eziclean Cyclosteam P320 ASPIRATEUR MAIN CONVERTIBLE eziclean
Blaster F130 PURIFICA...

 lang:fr score:26 filesize: 8.84 M page_count: 2 document date: 2021-12-03

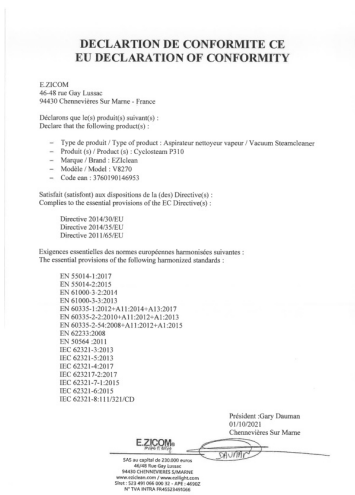

[pdf]

Bekijk de CE marking EZIclean Cyclosteam P310 Multifunctionele stoomreiniger Tapijtreiniger bol
original media s JKgvGN58GPzy |||

...

lang:fr score:22 filesize: 102.51 K page_count: 1 document date: 2022-11-15