

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Simple Houseware](#) /
- › [Simple Houseware Wardrobe Portable Closet Clothes Rack Shelf Organizer User Manual](#)

Simple Houseware BO-18E-B

User Manual: Simple Houseware Wardrobe Portable Closet Clothes Rack Shelf Organizer

Model: BO-18E-B | Brand: Simple Houseware

1. SAFETY INFORMATION

Please read all instructions carefully before assembly and use. Retain this manual for future reference.

- Ensure all parts are present and undamaged before beginning assembly.
- Assemble the unit on a soft, clean surface to prevent scratches.
- Do not overtighten connections or force parts together, as this may cause damage.
- Distribute weight evenly across shelves and hanging bars to maintain stability.
- Do not exceed the maximum weight capacity of the shelves or hanging bars.
- Keep small parts away from children during assembly to prevent choking hazards.
- This product is designed for indoor use only.

2. PACKAGE CONTENTS

Verify that all components listed below are included in your package. If any parts are missing or damaged, please contact Simple Houseware customer support.

- Metal Rods (various lengths for vertical supports and horizontal connections)
- Wired Shelves (8 durable shelves)
- Heavy Duty Plastic End Connectors (for joining rods and supporting shelves)
- Hanging Bars (2 sturdy bars for clothes)
- Assembly Instructions Manual



Figure 2.1: Overall dimensions of the Simple Houseware Portable Wardrobe.

3. SETUP (ASSEMBLY INSTRUCTIONS)

Assembly requires no special tools. Follow these steps carefully for a stable and functional wardrobe.

1. Step 1: Prepare the Base

Lay out all components on a clean, flat surface. Identify the shortest metal rods and the plastic end connectors. Begin by connecting the base frame using the appropriate rods and connectors, ensuring they snap securely into place. This forms the bottom perimeter of the wardrobe.



Figure 3.1: Assembling the base frame.

2. Step 2: Install Vertical Supports and Lower Shelves

Attach the longer vertical metal rods to the base connectors. As you build upwards, insert the wired shelves into the designated slots on the plastic connectors. Ensure each shelf is level and firmly seated. The wardrobe features 8 wired shelves for various storage needs.



Figure 3.2: Installing vertical supports and lower shelves.

3. Step 3: Attach Hanging Bars

Once the main vertical structure is in place, attach the two sturdy hanging bars. These bars connect between the vertical supports at the desired height, providing space for hanging clothes. Ensure they are securely fastened.



Figure 3.3: Attaching the hanging bars.

4. Step 4: Complete the Top Structure

Finish the assembly by adding the top metal rods and connectors, securing the entire structure. Ensure all connections are tight and the wardrobe is stable before placing items on it.



Figure 3.4: The fully assembled wardrobe.

4. OPERATING (USAGE)

The Simple Houseware Portable Wardrobe is designed for versatile storage. Here are guidelines for optimal use:

- **Hanging Clothes:** Utilize the two sturdy hanging bars for jackets, coats, shirts, dresses, and pants. Ensure hangers are evenly spaced to prevent overcrowding.
- **Shelf Storage:** The 8 wired shelves are ideal for folded clothing, shoes, boots, bags, and other accessories. Distribute items across the shelves to maintain balance and stability.
- **Weight Distribution:** Always distribute the weight of your items evenly. Avoid placing all heavy items on one side or one shelf.
- **Placement:** Position the wardrobe on a flat, stable surface. If moving the assembled unit, do so carefully to avoid dislodging components.



Figure 4.1: Example of organized storage within the wardrobe.

5. MAINTENANCE

To ensure the longevity and appearance of your Simple Houseware Portable Wardrobe, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the metal construction and wired shelves with a dry cloth to remove dust and dirt. Avoid using abrasive cleaners or harsh chemicals, as these may damage the bronze coating.
- **Inspection:** Periodically check all connections and joints to ensure they remain secure. If any part feels loose, gently press or snap it back into place.
- **Avoid Moisture:** Keep the wardrobe in a dry environment to prevent rust or damage to the metal components.

6. TROUBLESHOOTING

If you encounter any issues with your wardrobe, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Wardrobe feels unstable or wobbly.	Connections are not fully secured; uneven weight distribution; placed on an uneven surface.	Ensure all metal rods are fully inserted into the plastic connectors. Press firmly on all joints. Redistribute items evenly. Move the wardrobe to a flat, level surface.
Shelves are bending or sagging.	Overloaded shelves; unevenly distributed weight on a shelf.	Reduce the weight on the affected shelf. Distribute items more evenly across the shelf surface.
Hanging bar detaches.	Too much weight on the bar; bar not fully seated in connectors.	Reduce the number of items on the hanging bar. Re-insert the bar firmly into its connectors, ensuring it clicks into place.
Missing parts during assembly.	Packaging error.	Carefully check all packaging materials. If parts are genuinely missing, contact Simple Houseware customer support with your purchase details.

7. SPECIFICATIONS

Key specifications for the Simple Houseware Wardrobe Portable Closet Clothes Rack Shelf Organizer:

Feature	Detail
Model Number	BO-18E-B
Brand	Simple Houseware
Material	Metal (with Bronze Coating)
Dimensions (L x W x H)	59 7/8" x 19 3/8" x 68"
Item Weight	26.8 pounds
Shelves	8 durable wired shelves
Hanging Bars	2 sturdy hanging bars
Assembly Required	Yes (No tools needed)
Color	Bronze

8. WARRANTY AND SUPPORT

Simple Houseware products are designed for quality and durability. For specific warranty information, please refer to the documentation included with your purchase or visit the official Simple Houseware website.

If you require assistance with assembly, have questions about product use, or need to report missing/damaged parts, please contact Simple Houseware customer support directly. Have your model number (BO-18E-B) and purchase details ready when contacting support.

You can often find contact information on the manufacturer's website or through the retailer where you purchased

the product.