

[Manuals.plus](#) /

› [Uleway](#) /

› Uleway GSM Foldable Mobile Phone for Seniors User Manual

Uleway SC6531E

Uleway GSM Foldable Mobile Phone User Manual

Model: SC6531E

1. INTRODUCTION

Thank you for choosing the Uleway GSM Foldable Mobile Phone, Model SC6531E. This phone is designed with ease of use in mind, featuring large buttons, clear displays, and essential functions for seniors. It includes an emergency SOS button, dual SIM support, and multimedia capabilities like a camera and FM radio. Please read this manual carefully to ensure proper operation and maintenance of your device.



Image: The Uleway foldable phone shown in both open and closed positions, highlighting its compact design and large keypad.

2. PACKAGE CONTENTS

Please check the contents of your package. If any items are missing or damaged, contact customer support.

- 1 x Uleway Mobile Phone
- 1 x Micro USB Charger
- 2 x 900mAh Lithium-ion Batteries
- 1 x SIM Card Adapter
- 1 x User Manual



Image: All items included in the Uleway phone package, neatly laid out, showing the phone, charger, two batteries, SIM card adapters, and the user manual.

3. SETUP

3.1 Battery Installation

1. Open the back cover of the phone by gently prying it from the notch.
2. Align the battery contacts with the phone's terminals and insert the battery.
3. Replace the back cover, ensuring it clicks into place securely.

3.2 SIM Card and Micro SD Card Installation

This phone supports dual standard-sized SIM cards and a Micro SD card for expandable memory up to 32GB.

1. With the back cover and battery removed, locate the SIM card slots and Micro SD card slot.
2. Insert your standard SIM card(s) into the designated slots, ensuring the gold contacts face down.
3. Insert the Micro SD card into its slot until it clicks into place.

4. Reinstall the battery and back cover.



Image: An internal view of the Uleway phone with the back cover removed, clearly showing the slots for standard SIM cards and a Micro SD card, along with an example of a SIM card and a 32GB Micro SD card.

3.3 Charging the Phone

Before first use, fully charge the phone for at least 4 hours.

1. Connect the Micro USB charger cable to the charging port on the phone.
2. Plug the charger into a power outlet.
3. The battery indicator on the screen will show charging status.
4. Once fully charged, disconnect the charger.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

- To power on: Press and hold the **Power/End Call** button until the screen lights up.

- To power off: Press and hold the **Power/End Call** button, then confirm 'Power off' on the screen.

4.2 Making and Receiving Calls

- To make a call: Dial the number using the large keypad and press the **Call** button.
- To receive a call: Press the **Call** button when the phone rings.
- To end a call: Press the **Power/End Call** button.

4.3 SOS Emergency Call Function

The SOS button allows you to quickly contact pre-set emergency numbers. You can set up to 5 family numbers.

1. Go to **Settings > SOS Settings** to configure emergency contacts.
2. In an emergency, press and hold the **SOS** button on the back of the phone.
3. The phone will automatically dial the pre-set numbers in sequence until one is answered, and also send an emergency SMS.

SOS EMERGENCY CALLS



Support 5 Family Numbers
--Guarantee the Safety of the Elderly

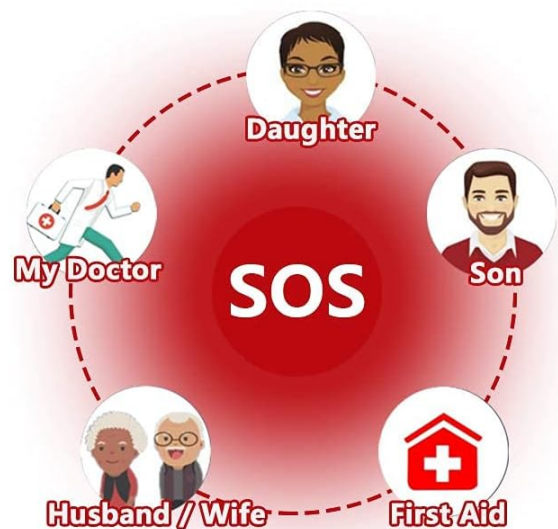


Image: A visual representation of the SOS emergency call feature, highlighting the SOS button on the phone's back and illustrating how it connects to pre-set family contacts (Daughter, My Doctor, Son, Husband/Wife, First Aid) to ensure safety.

4.4 Speed Dial

Assign frequently called numbers to M1, M2, M3, and number keys 2-9 for quick dialing.

- To set: Go to **Settings > Speed Dial** and assign contacts to the desired keys.
- To use: Press and hold the assigned key (M1, M2, M3, or 2-9) to dial the contact.

4.5 Other Features

- **Camera:** Access the camera from the main menu to take photos.
- **FM Radio:** Plug in headphones (not included) to use as an antenna, then access FM Radio from the menu.
- **Bluetooth:** Enable Bluetooth in settings to connect to compatible devices.
- **Torch:** Activate the built-in flashlight for convenience.
- **Utilities:** Use the Calendar, Alarm, and Calculator functions available in the menu.



Calendar



**Support
Dual SIM**



SOS Button



**Double
Batteries**



Speed Dial



Camera



Torch



FM Radio



Image: A collection of icons illustrating the key features of the Uleway phone, including Calendar, Dual SIM support, SOS Button, the inclusion of Double Batteries, Speed Dial, Camera, Torch, and FM Radio.



Large font

Larger Fonts, Better Views



Big keys

Bigger Keys, Easier Operation

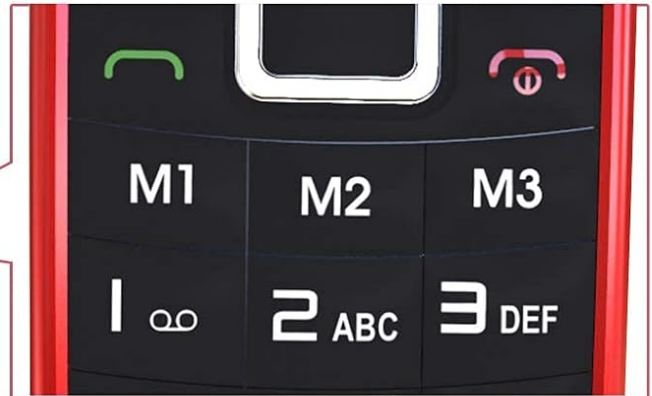


Image: A detailed view emphasizing the large font on the phone's display for better readability and the large, easy-to-press keys on the keypad, designed for simpler operation.

5. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the phone's surface. Avoid liquid cleaners.
- **Battery Care:** To prolong battery life, avoid extreme temperatures. Do not overcharge or completely drain the battery frequently. Use only the provided charger.
- **Storage:** Store the phone in a cool, dry place when not in use for extended periods.

6. TROUBLESHOOTING

If you encounter issues with your Uleway phone, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Phone does not turn on	Low battery; Battery not installed correctly	Charge the phone; Reinstall the battery
No network signal	SIM card not installed; Out of network coverage	Ensure SIM card is correctly inserted; Move to an area with better coverage
Cannot make/receive calls	No network signal; Incorrect number dialed; Call barring activated	Check signal strength; Verify number; Check call settings
Battery not charging	Charger not connected properly; Faulty charger/cable	Ensure secure connection; Try a different charger/cable
Low call volume	Volume setting too low; Speaker obstructed	Increase volume using side buttons; Ensure speaker is clear of debris

7. SPECIFICATIONS

- **Brand:** Uleway
- **Model:** SC6531E
- **Color:** Orange (as per product details, though images show red)
- **Display:** 2.4-inch main color screen, 1.77-inch external color screen
- **Memory:** 32MB RAM + 32MB ROM
- **Expandable Memory:** Up to 32GB (Micro SD card)
- **Network:** GSM (850/900/1800/1900 MHz) - 2G only
- **SIM Support:** Dual SIM (Standard size)
- **Battery:** 900mAh Lithium-ion (2 included)
- **Connectivity:** Micro USB, Bluetooth
- **Features:** Camera, FM Radio, SOS Emergency Button, Speed Dial, Calendar, Alarm, Calculator, Torch
- **Languages:** Spanish, English, French, Italian, German



Image: The Uleway phone displaying a vibrant image on its screen, accompanied by text promoting it as the 'Best Gift for the Elderly' and highlighting its 'Great Sound Quality, Big Voice Volume'.

8. WARRANTY AND SUPPORT

Uleway provides a two-year technical service and customer support for mobile phones purchased from our store. This warranty covers manufacturing defects and issues arising from normal use. Please note that artificial damage is not included under this warranty.

For technical assistance or customer service, please refer to the contact information provided with your purchase or visit the official Uleway website.

© 2024 Uleway. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0919FHGDM>

More documents and user manuals: **<https://manuals.plus/>**