

[Manuals.plus](#) /

› [KitchekShop](#) /

› KitchekShop S-02 Portable Cordless Mini Food Processor User Manual

KitchekShop S-02

KitchekShop S-02 Portable Cordless Mini Food Processor User Manual

Model: S-02

1. INTRODUCTION

Thank you for choosing the KitchekShop S-02 Portable Cordless Mini Food Processor. This compact and versatile appliance is designed to simplify your food preparation tasks, allowing you to quickly chop, mince, and blend various ingredients. Please read this manual thoroughly before first use to ensure safe and optimal operation.



Image: The KitchenShop S-02 Mini Food Processor shown with various chopped vegetables inside the container, alongside its accessories including a USB-C charging cable, a small spoon, and a cleaning brush.

2. SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Keep the appliance out of reach of children. This appliance is not intended for use by children.
- Do not immerse the motor unit in water or any other liquid. Wipe with a damp cloth only.
- Ensure the lid is securely locked in place before operating the food processor. The magnetic safety lock prevents operation if not properly assembled.
- Avoid touching the blades. Blades are sharp and can cause injury. Always handle with care.
- Do not process excessively hard ingredients without pre-cutting them into smaller pieces, as this may damage the blades or motor.
- Do not overfill the container. Refer to the maximum fill line.

- Unplug the appliance from the charging cable when not in use, before assembling or disassembling parts, and before cleaning.
- Use only the charging cable provided or a compatible Type-C cable.
- If the appliance malfunctions or is damaged, discontinue use immediately and contact customer support.

Child Safety Feature

Safety lock ensures the motor and blade only work when the motor cover and blender cup are securely locked in place, providing added protection for families with children.



Image: An illustration highlighting the child safety feature, showing the motor cover and blender cup securely locked in place, preventing operation if not correctly assembled.

3. PRODUCT COMPONENTS

Your KitchenShop S-02 Portable Cordless Mini Food Processor includes the following parts:

- Motor Unit (with power button)
- 300ML Blender Cup (food-grade PP)
- 304 Stainless Steel Blade Assembly
- Type-C Charging Cable
- Mini Spoon
- Mini Cleaning Brush
- User Manual



Image: A close-up view of the mini food processor, highlighting the stainless steel blade assembly within the transparent blender cup.

4. SETUP

1. **Initial Charge:** Before first use, fully charge the food processor using the provided Type-C cable. Connect the cable to the charging port on the motor unit and a suitable USB power source. The indicator light will show charging status. A full charge takes approximately 2 hours and provides about 50 usages.
2. **Clean Components:** Wash the blender cup, blade assembly, mini spoon, and mini brush with warm soapy water. Rinse thoroughly and dry completely. Do not wash the motor unit.
3. **Assemble:** Carefully place the blade assembly onto the central pin inside the blender cup.

5. OPERATION

Follow these steps to operate your mini food processor:

1. **Prepare Ingredients:** Cut ingredients into small pieces (approximately 1-2 cm) before placing them into the blender cup. For hard ingredients like carrots, ensure they are cut into very small pieces to prevent the blade from getting stuck.
2. **Load Ingredients:** Place the prepared ingredients into the blender cup, ensuring not to exceed the maximum fill line. The capacity is 300ML.
3. **Secure Lid:** Place the motor unit onto the blender cup and twist it clockwise until it securely locks into place. You will feel a click, and the lock indicator will align. The appliance will not operate if the lid is not properly secured due to the magnetic safety lock.
4. **Start Chopping:** Press and hold the power button on top of the motor unit to begin chopping. The appliance will operate as long as the button is pressed.
5. **Control Chopping Degree:** Chop for 5-30 seconds, depending on the desired consistency. Release the button to stop.
6. **Remove Ingredients:** Once chopping is complete, release the power button, twist the motor unit counter-clockwise to unlock, and carefully remove it. Then, remove the blade assembly before emptying the chopped ingredients.

One Button Control

Effortlessly chop food in **5-30s**
with one button. Load, lock, and enjoy quick results



Image: A hand pressing the illuminated power button on the top of the mini food processor, demonstrating the one-button operation for chopping ingredients.

Recommended Uses:

- **Garlic & Onion:** Quickly mince garlic cloves and small onion pieces.
- **Nuts & Spices:** Chop nuts for baking or grind whole spices.
- **Chili & Herbs:** Finely chop chilies, cilantro, parsley, and other herbs.
- **Minced Meat:** Process small quantities of cooked or raw meat for baby food or specific recipes.
- **Baby Food Purees:** Create smooth purees from cooked fruits and vegetables.

EASY TO MAKE A VARIETY OF DELICIOUS FLAVORS



Image: A visual representation of various ingredients that can be chopped by the food processor, including chili, garlic, onion, carrot, avocado, pumpkin, minced meat, celery, ginger, and shrimp.

6. CLEANING AND MAINTENANCE

Proper cleaning ensures the longevity and hygiene of your food processor.

- **Disassembly:** After each use, unplug the appliance. Carefully remove the motor unit, then the blade assembly from the blender cup.
- **Blender Cup & Blade:** The blender cup and blade assembly are dishwasher-safe. Alternatively, they can be washed by hand with warm soapy water. Use the provided mini brush to clean any food residue from the blades and crevices.
- **Motor Unit:** The motor unit is NOT dishwasher-safe and should NOT be submerged in water. Wipe the exterior of the motor unit with a damp cloth. Ensure it is completely dry before storing or recharging.
- **Storage:** Store the clean and dry food processor in a cool, dry place, away from direct sunlight.

Easy to Clean

Garlic chopper can be washed directly with water.

Note: The plastic cup of chopper can be machine washable, but the motor cannot be machine washable.



Image: An illustration showing how to clean the food processor. The blender cup is shown being rinsed under a faucet and is marked as dishwasher-safe, while the motor unit is marked as not dishwasher-safe.

7. TROUBLESHOOTING

If you encounter any issues, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not run when turned on.	Low battery. Lid not securely locked. Motor damage.	Charge the unit fully. Ensure the motor unit is twisted and locked onto the blender cup. If the issue persists, contact customer support.
Blade gets stuck or struggles to chop.	Ingredients are too large or too hard. Overfilling the cup.	Cut ingredients into smaller pieces (1-2 cm). Do not overfill the cup. For hard ingredients, pre-cut them into very small pieces.
Inconsistent chopping results.	Unevenly sized ingredients. Not enough processing time.	Ensure ingredients are cut to a similar size before processing. Process for a longer duration or use pulse action for better control.

8. SPECIFICATIONS

Feature	Detail
Brand	KitchekShop
Model Name	Portable Cordless Mini Food Processor (S-02)
Capacity	300ML
Product Dimensions	3.7"D x 3.7"W x 6.1"H
Item Weight	1.01 pounds
Blade Material	304 Stainless Steel
Power Source	Battery Powered (USB-C Rechargeable)
Number of Speeds	1
Special Features	Cordless Convenience, Easy to Clean, Efficient Chopping, Safe and Reliable (Magnetic Safety Lock)
Included Components	Electric Mini Garlic Chopper, Type-C Cable, Mini Spoon, Mini Brush, User Manual

COMPACT AND PORTABLE SIZE



Image: A diagram illustrating the dimensions of the KitchekShop S-02 Mini Food Processor, showing its height as 5.5 inches and width as 3.5 inches.

9. WARRANTY AND SUPPORT

KitchekShop provides a **1-Year Warranty** for this product, covering manufacturing defects from the date of purchase.

For technical support, warranty claims, or any questions regarding your KitchekShop S-02 Portable Cordless Mini Food Processor, please contact our customer service team:

Phone Number: +1 (808) 400-9005

Work Time: 9:00 AM - 6:00 PM PST

Please have your model number (S-02) and purchase information ready when contacting support.



Image: A graphic detailing KitchekShop's customer service, including 24-hour service, a 1-year warranty, phone number, and work hours.

© 2024 KitchekShop. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B091B2J7LT>

More documents and user manuals: <https://manuals.plus/>