

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Exquisit](#) /

› [Exquisit Vertical Freezer User Manual](#)

Exquisit GS230-H-040D weiss

Exquisit Vertical Freezer User Manual

Model: GS230-H-040D weiss

INTRODUCTION

Thank you for choosing the Exquisit Vertical Freezer. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your appliance. Please read these instructions carefully before use and keep them for future reference.

IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury. This appliance is intended for household use only.

- Ensure the appliance is unplugged before cleaning or maintenance.
- Do not damage the refrigerant circuit.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.

SETUP

Unpacking

Carefully remove all packaging materials, including tape and protective films. Inspect the freezer for any signs of damage during transit. Report any damage to your retailer immediately.

Placement

Place the freezer on a firm, level surface. Ensure there is adequate ventilation around the appliance. Allow at least 10 cm (4 inches) of space at the back and sides for proper air circulation. Avoid placing the freezer in direct sunlight or near heat sources such as stoves, radiators, or ovens, as this will increase energy consumption. The appliance is equipped with rear wheels for easier movement and adjustable feet for leveling.



Image: Side view of the Exquisit vertical freezer, illustrating the space required for ventilation.



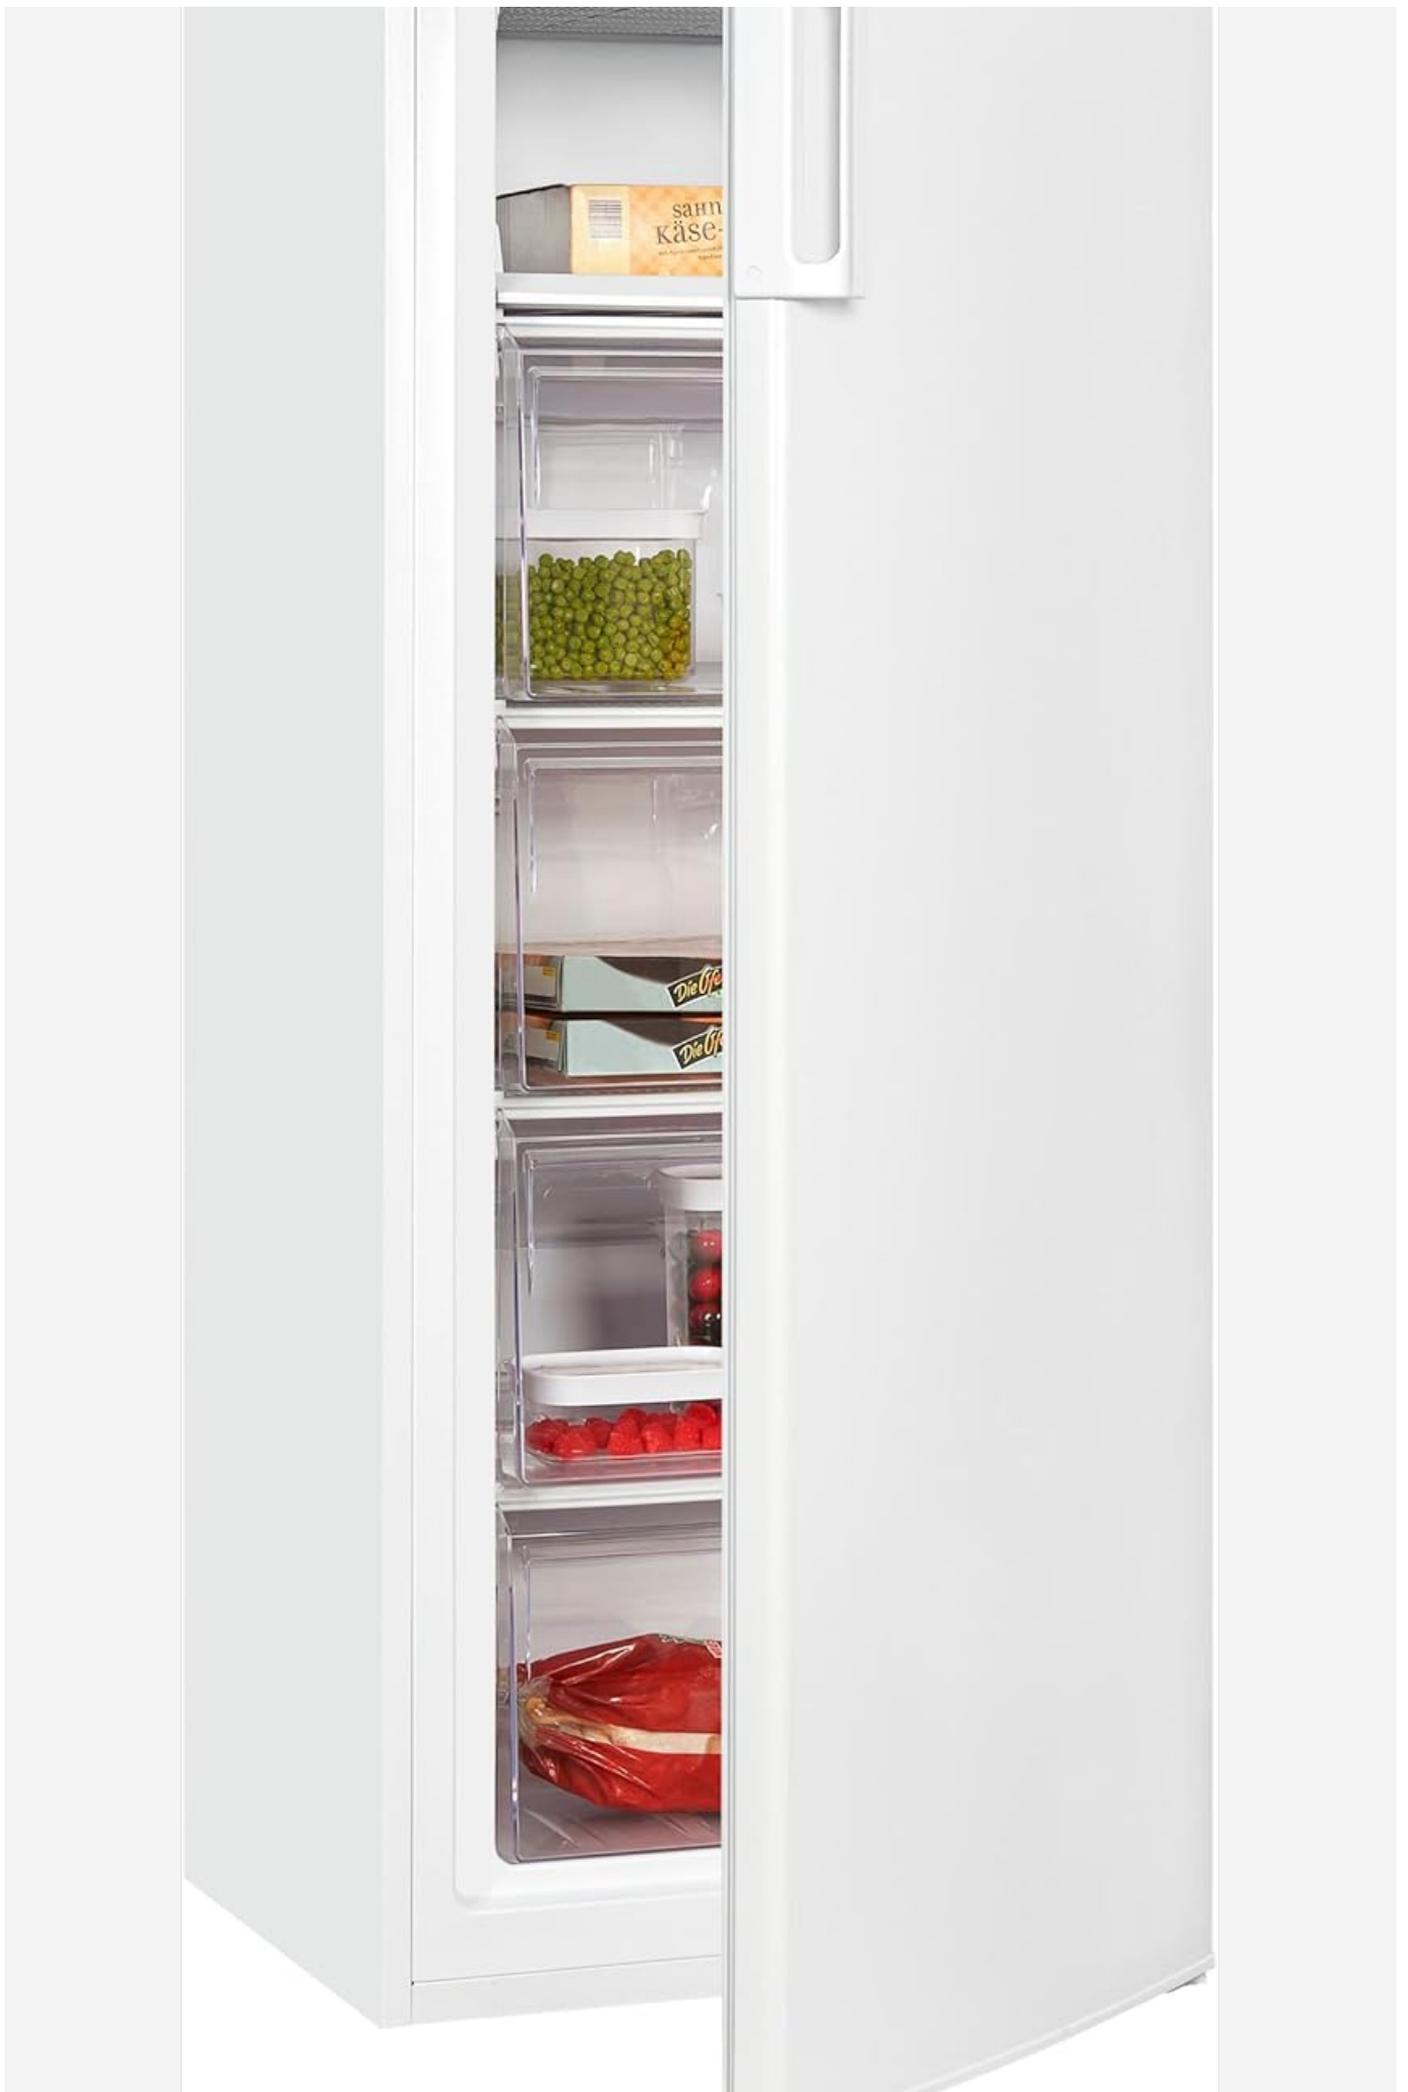


Image: Rear view of the Exquisit vertical freezer, showing the back panel and components.

Electrical Connection

Before plugging in the appliance, ensure that the voltage and frequency indicated on the rating plate match your household power supply (220 Volts). The freezer should be connected to a properly grounded electrical outlet. Do not use extension cords or multiple socket adapters. Allow the freezer to stand upright for at least 2-4 hours before plugging it in to allow the refrigerant to settle.

Door Reversal

The door of this freezer is reversible, allowing it to open from either the left or the right side to suit your kitchen layout. If you wish to change the door's opening direction, please refer to the detailed instructions provided in the full product manual or consult a qualified technician. This process involves carefully detaching and reattaching the hinges and handle.



Image: Detail of the freezer's top hinge mechanism.

OPERATING INSTRUCTIONS

Initial Startup

After connecting the freezer to the power supply, set the temperature control dial to a medium setting (e.g., 'Normal'). Allow the appliance to operate empty for approximately 4-6 hours to reach the desired freezing temperature before loading food items.

Temperature Control

The temperature inside the freezer is controlled by a dial located at the top interior of the appliance. The settings typically range from 'Min' (least cold) to 'Max' (coldest), with a 'Normal' setting for general use. Adjust the dial according to your needs and the ambient temperature. For optimal food preservation, a setting between 'Normal' and 'Max' is usually recommended.



Image: Temperature control dial located inside the freezer.




ENERG ⚡



Exquisit

GS230-H-040D weiss

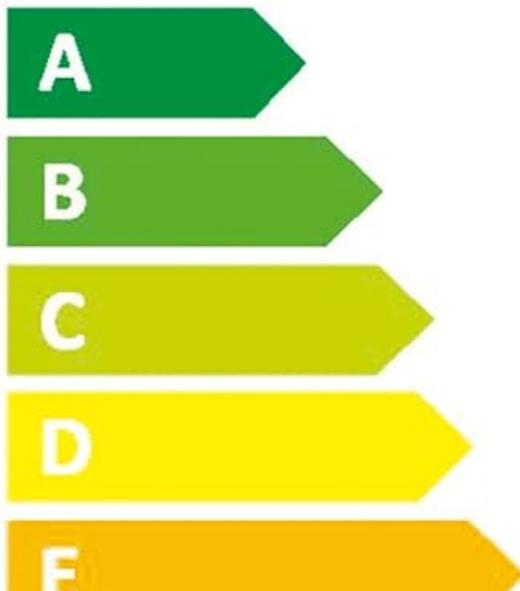



152 kWh/annum



168 L



AB**C**D

2019/2016

Image: Detailed view of the temperature control dial.

Loading the Freezer

This freezer offers a generous 168 liters of capacity, organized with 4 transparent drawers and 1 easy-access tray. To ensure efficient freezing and air circulation, avoid overloading the compartments. Distribute food evenly and allow space for air to circulate around items. The transparent drawers allow for easy visibility of contents, aiding in organization.

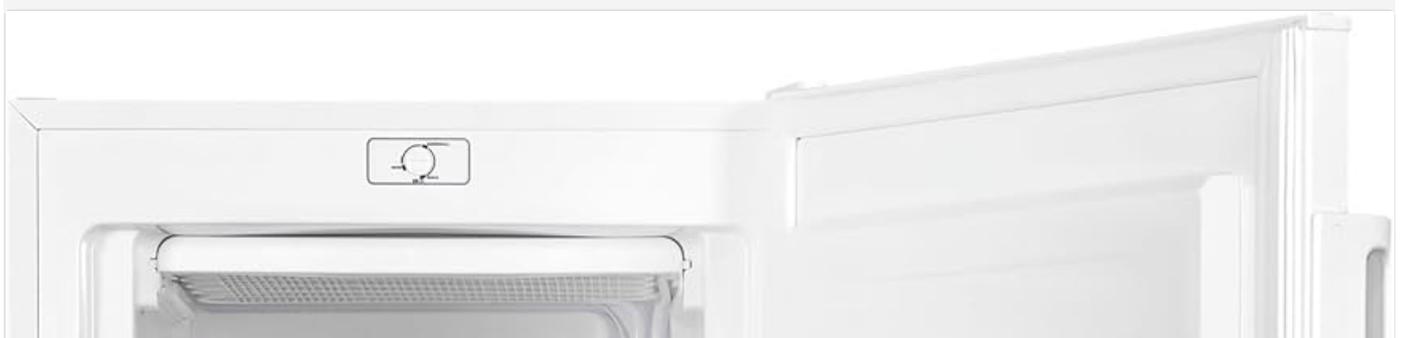




Image: Interior view of the freezer with transparent drawers.



Image: A transparent freezer drawer.



Image: The easy-access tray at the top of the freezer.

MAINTENANCE

Cleaning

Regular cleaning of your freezer will help maintain its efficiency and hygiene. Unplug the appliance before cleaning. Clean the interior with a solution of mild detergent and warm water. Wipe dry thoroughly. The exterior can be cleaned with a soft cloth and mild cleaner. Do not use abrasive cleaners or sharp objects.

Defrosting

This freezer features manual defrosting. Frost build-up can reduce the efficiency of the appliance. Defrost the freezer when the frost layer reaches approximately 5 mm (0.2 inches) thick. To defrost:

1. Unplug the freezer from the power outlet.
2. Remove all food items and store them in another freezer or cooler.
3. Leave the freezer door open to allow the frost to melt naturally. You can place towels at the bottom to absorb water.
4. Once all frost has melted, clean and dry the interior thoroughly.
5. Plug the freezer back in and allow it to cool down before returning food items.

Power Outage

In the event of a power outage, keep the freezer door closed as much as possible. This will help maintain the internal temperature and keep food frozen for a longer period. Avoid opening the door unnecessarily.

TROUBLESHOOTING

Before contacting customer service, please check the following common issues and solutions:

Problem	Possible Cause	Solution
Freezer not operating	No power supply; power cord loose; circuit breaker tripped.	Check power outlet; ensure cord is securely plugged in; reset circuit breaker.
Freezer not cold enough	Temperature setting too high; door not closed properly; excessive food load; warm ambient temperature.	Adjust temperature to a colder setting; ensure door is sealed; reduce food load; move freezer to a cooler location.
Excessive noise	Freezer not level; objects touching the back or sides; normal operating sounds.	Adjust leveling feet; ensure clearance around the freezer. A slight humming (40 dB) is normal.
Excessive frost/ice build-up	Door seal faulty; door opened too frequently; high humidity.	Check door seal for damage; avoid frequent door openings; defrost the unit.

SPECIFICATIONS

Feature	Detail
Brand	Exquisit
Model Name	GS230-H-040D
Product Dimensions (D x W x H)	55 x 57 x 142 cm
Product Weight	47 kg
Capacity	168 Liters
Energy Efficiency Class	D
Annual Energy Consumption	152 kWh/year
Noise Level	40 dB
Voltage	220 Volts
Door Orientation	Right (Reversible)
Installation Type	Freestanding
Color	White



Image: Energy label for the Exquisit Vertical Freezer. For more details, visit the [EPREL database](#).

WARRANTY AND SUPPORT

Your Exquisit Vertical Freezer comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and coverage details. For technical support, spare parts, or service inquiries, please contact Exquisit customer service or your authorized dealer. Ensure you have your model number (GS230-H-040D weiss) and purchase date available when contacting support.