

## AIDITIYMI YKF348-001

# AIDITIYMI YKF348-001 Replacement Remote Control Instruction Manual

Model: YKF348-001 / 996590020164

## INTRODUCTION

---

This manual provides comprehensive instructions for the AIDITIYMI YKF348-001 replacement remote control. This remote is designed to function as a direct replacement for various Philips Smart LED TV models, offering essential control without the need for complex programming or pairing. Please read this manual carefully to ensure proper use and longevity of your remote control.

## SETUP

---

### Battery Installation

The remote control requires two AAA alkaline batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Figure 1: Battery compartment with cover removed, showing battery placement.

**Note:** This replacement remote control does not require any programming or pairing. Once batteries are installed, it is ready for use with compatible Philips Smart LED TVs.

## OPERATING INSTRUCTIONS

---

The AIDITIYMI YKF348-001 remote control provides full functionality for your compatible Philips Smart LED TV. Simply point the remote control towards your television and press the desired buttons.



Figure 2: Front view of the remote control.

### Key Functions Overview

- **Power Button:** Turns the TV on or off.
- **Number Buttons (0-9):** For direct channel selection.
- **Volume Up/Down:** Adjusts the TV volume.

- **Channel Up/Down:** Changes TV channels.
- **Navigation Pad (Up, Down, Left, Right, OK):** For menu navigation and selection.
- **Smart TV / Home Button:** Accesses the Smart TV interface or home menu.
- **Source Button:** Selects input sources (HDMI, AV, etc.).
- **Back / Exit:** Returns to the previous screen or exits a menu.
- **TV Guide / List:** Accesses the electronic program guide or channel list.
- **Playback Controls:** Play, Pause, Stop, Fast Forward, Rewind for media playback.



Figure 3: Angled view of the remote control, showing button details.

## Compatible TV Models

This remote control is compatible with a wide range of Philips Smart LED TV models, including but not limited to:

- 32PHH4509, 32PHT4509
- 40PFH4509, 40PFT4509
- 50PFH4509, 50PFT4509
- 40PUS6809, 40PUS6809/12, 40PUK6809
- 58PUS6809, 50PUK6809, 58PUK6809
- 42PFK7509, 55PFS7509, 47PFK7509, 47PFS7509, 55PFK7509
- 32PFK6509, 42PFK6549, 42PFK6559, 42PFK6589
- 47PFK6549, 47PFK6559, 47PFK6589
- 55PFK6549, 55PFK6559, 55PFK6589
- 32PFK5709, 40PFK5709, 40PFS5709
- 48PFK5709, 48PFS5709, 55PFK5709, 55PFS5709, 32PFS5709
- 42PFK7109, 47PFS7109, 47PFK7109, 55PFK7109, 55PFS7109, 42PFS7109, 65PFS7559

## MAINTENANCE

---

### Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these may damage the remote's surface or internal components.

### Battery Care

- Replace batteries when the remote's response becomes sluggish or stops working.
- Always replace both batteries at the same time with new AAA alkaline batteries.
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the remote control will not be used for an extended period to prevent leakage.

## TROUBLESHOOTING

---

### Remote Control Not Responding

- **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity (+/-). Replace with fresh AAA alkaline batteries.
- **Line of Sight:** Make sure there are no obstructions between the remote control and the TV's infrared sensor. Point the remote directly at the TV.
- **Distance:** Ensure you are within the effective operating range of the TV's infrared receiver.
- **TV Power:** Confirm that the TV is powered on and not in standby mode.

If issues persist after performing these checks, please refer to the support section for further assistance.

## SPECIFICATIONS

---

<b>Model Number</b>	YKF348-001 (996590020164)
<b>ASIN</b>	B091B2XMPV
<b>Power Source</b>	2 x AAA Alkaline Batteries (Not Included)
<b>Product Dimensions</b>	8.1 x 2.2 x 0.65 inches (20.6 x 5.6 x 1.7 cm)

<b>Item Weight</b>	2.8 ounces (79.4 grams)
<b>Color</b>	Black
<b>Special Feature</b>	Ergonomic Design
<b>Compatible Devices</b>	Philips Smart LED Televisions

## SUPPORT

---

If you are unsure whether this remote control is compatible with your specific Philips TV model, or if you encounter any issues not covered in the troubleshooting section, please contact the seller or manufacturer for assistance. Providing your TV's full model number will help expedite support.