

[Manuals.plus](#) /

› [Samsung](#) /

› Samsung Remote Control (RMCSPR1AP1 / BN59-01330A) User Manual

Samsung BN59-01330A

Samsung Remote Control (RMCSPR1AP1 / BN59-01330A) User Manual

Model: BN59-01330A / RMCSPR1AP1

INTRODUCTION

This user manual provides comprehensive instructions for the Samsung Remote Control, model RMCSPR1AP1 / BN59-01330A. This remote is designed for seamless control of select Samsung Smart TVs, offering intuitive navigation and quick access to popular streaming services. Please read this manual thoroughly to ensure proper use and to maximize your viewing experience.



Image: Front view of the Samsung Smart TV Remote Control, highlighting its sleek black design and key buttons including power, voice control, and dedicated buttons for Netflix, Prime Video, and Samsung TV Plus.

Key Features

- **OEM Quality:** Original Equipment Manufacturer product ensures compatibility and reliability.
- **Dedicated Hotkeys:** Instant access to Netflix, Prime Video, and Samsung TV Plus with dedicated buttons.
- **Voice Control:** Integrated microphone for voice commands, enhancing ease of use.
- **Ergonomic Design:** Curved shape for comfortable handling.
- **Volume and Channel Control:** Intuitive rocker buttons for adjusting volume and changing channels.
- **Battery Powered:** Operates on 2x AA batteries.

1. Installing Batteries

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards to open the compartment.
3. Insert two (2) AA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

2. Pairing the Remote Control with Your TV

For optimal performance, it is recommended to pair the remote control with your Samsung Smart TV. This process typically enables voice control and enhances overall responsiveness.

1. Ensure your Samsung Smart TV is powered on.
2. Point the remote control towards the TV.
3. Simultaneously press and hold the **Return** button (curved arrow) and the **Play/Pause** button (triangle with two vertical lines) for at least 3 seconds.
4. A message indicating successful pairing will appear on your TV screen. If pairing fails, repeat the steps.

OPERATING INSTRUCTIONS

Basic Navigation

- **Power Button:** Press to turn the TV on or off.
- **Directional Pad (Circular Button):** Use the up, down, left, and right arrows to navigate menus and select items.
- **Select Button (Center of Directional Pad):** Press to confirm a selection.
- **Return Button (Curved Arrow):** Go back to the previous screen or menu.
- **Home Button (House Icon):** Access the Smart Hub, which displays all your apps and connected devices.
- **Volume Control (+/-):** Press the top part to increase volume, bottom part to decrease. Press the center to mute/unmute.
- **Channel Control (Up/Down Arrows):** Press the top part to go to the next channel, bottom part to go to the previous channel.

Special Features

- **Voice Control Button (Microphone Icon):** Press and hold to activate voice commands. Speak clearly into the remote.
- **Netflix Hotkey:** Press to directly launch the Netflix application.
- **Prime Video Hotkey:** Press to directly launch the Amazon Prime Video application.
- **Samsung TV Plus Hotkey:** Press to directly launch the Samsung TV Plus application.
- **123 Button:** Accesses the virtual number pad on screen.
- **Multi-View Button:** Activates Multi-View mode (if supported by your TV).
- **Play/Pause Button:** Controls media playback.

MAINTENANCE

Battery Replacement

When the remote control's performance degrades or it stops responding, it's time to replace the batteries. Follow the battery installation steps in the Setup Guide.

- Always replace both batteries at the same time.
- Use new, high-quality AA alkaline batteries for best performance.
- Dispose of used batteries responsibly according to local regulations.

Cleaning

To clean the remote control, gently wipe it with a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote.

TRTROUBLESHOOTING

Problem	Possible Solution
Remote control is not responding.	Check if the batteries are inserted correctly and have sufficient charge. Replace if necessary. Ensure there are no obstructions between the remote control and the TV's sensor. Re-pair the remote control with the TV (refer to "Pairing the Remote Control with Your TV" section).
Voice control is not working.	Ensure the remote is properly paired with the TV. Speak clearly and hold the remote closer to your mouth. Check TV settings for voice recognition options.
Buttons require multiple presses to register.	Replace the batteries. Clean the remote control to remove any dirt or debris that might be affecting button responsiveness.

SPECIFICATIONS

Attribute	Detail
Model Number	BN59-01330A
Product Dimensions	6.5 x 1.5 x 1.25 inches
Item Weight	1.76 ounces
Batteries Required	2 AA batteries
Color	Black
Compatible Devices	Television (Select Samsung Smart TVs)
Special Feature	Ergonomic

Attribute	Detail
-----------	--------

WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries regarding your Samsung Remote Control, please refer to the documentation included with your Samsung Smart TV or visit the official Samsung support website. You can also contact Samsung customer service directly for assistance.
Official Samsung Support: www.samsung.com/us/support/

© 2024 Samsung. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question