

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ZdalaMit](#) /

› [ZdalaMit RC-1167 Replacement Remote Control Instruction Manual for Denon AV Receivers](#)

## ZdalaMit RC-1167

# ZdalaMit RC-1167 Replacement Remote Control Instruction Manual

For Denon AV Receiver Models: AVR-2113, AVR-2113CI, AVR-1913, AVR-2313CI, AVR-2313

## 1. INTRODUCTION

This manual provides instructions for the ZdalaMit RC-1167 replacement remote control. This remote is designed to function as a direct replacement for the original remote controls of various Denon AV Receiver models. No programming or pairing is required for its operation.

### Compatible Denon AV Receiver Models:

- AVR-2113
- AVR-2113CI
- AVR-1913
- AVR-2313CI
- AVR-2313

## 2. PACKAGE CONTENTS

The package typically includes:

- 1x ZdalaMit RC-1167 Replacement Remote Control

*Note: AAA batteries are not included and must be purchased separately.*

## 3. SETUP

To begin using your RC-1167 replacement remote control, follow these simple steps:

1. **Install Batteries:** Locate the battery compartment on the back of the remote control. Open the cover and insert two (2) 1.5V AAA alkaline batteries, ensuring correct polarity (+ and -). Close the battery cover securely.
2. **Ready for Use:** The remote control is pre-programmed and does not require any additional setup or pairing with your Denon AV Receiver. Once batteries are installed, it is ready for immediate use.



Image: Back view of the RC-1167 remote control, illustrating the location of the battery compartment.

## 4. OPERATING INSTRUCTIONS

The RC-1167 remote control provides full functionality for your compatible Denon AV Receiver. Below is an overview of the main button groups and their functions:





Image: Front view of the RC-1167 remote control, showing the layout of all control buttons.

- **Power Button:** Located at the top right, used to turn the AV Receiver on or off.
- **Zone Select (MAIN, ZONE 2):** Allows selection between the main listening zone and a secondary audio zone.
- **Input Selectors:** Buttons such as CBL/SAT, DVD, Blu-ray, GAME, AUX, MEDIA PLAYER, iPod/USB, CD, FM, NETWORK, TV AUDIO, INTERNET RADIO are used to select the desired audio/video input source.
- **Favorite Station (1, 2, 3):** For quick access to pre-set radio stations or other favorite functions.
- **Navigation Controls:** A circular pad with directional arrows (Up, Down, Left, Right) and an **ENTER** button in the center for menu navigation and selection.
- **Volume Controls:** Dedicated **VOLUME UP** and **VOLUME DOWN** buttons to adjust the audio level.
- **MUTE Button:** Toggles the audio mute function on and off.
- **CH/PAGE (Up/Down):** Used for channel selection or page navigation in menus.
- **INFO / OPTION / BACK / SETUP:** These buttons provide access to information displays, options menus, return to previous screens, and the main setup menu of the AV Receiver, respectively.
- **TUNE- / PLAY/PAUSE / TUNE+:** Media playback controls for tuning radio frequencies or controlling playback of connected devices.
- **Sound Mode Buttons (MOVIE, MUSIC, GAME, PURE):** Quick access buttons to switch between different audio processing modes optimized for various content types.

## 5. MAINTENANCE

---

- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries simultaneously with new 1.5V AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.
- **Cleaning:** To clean the remote, gently wipe its surface with a soft, dry cloth. Avoid using liquid cleaners, solvents, or abrasive materials, as these can damage the remote's finish or internal components.
- **Storage:** If the remote will not be used for an extended period, it is recommended to remove the batteries to prevent leakage, which could damage the remote. Store the remote in a cool, dry place away from direct sunlight.

## 6. TROUBLESHOOTING

---

- **Remote Not Responding:**
  - Check if the batteries are correctly installed with the proper polarity.
  - Replace old batteries with new 1.5V AAA alkaline batteries.
  - Ensure there is a clear line of sight between the remote control and the AV Receiver's infrared sensor. Obstructions can block the signal.
  - Verify that the AV Receiver is powered on.
- **Specific Buttons Not Working:**
  - If only certain buttons are unresponsive, try cleaning the remote as described in the Maintenance section. Dirt or debris under the buttons can sometimes interfere with contact.
  - Ensure you are in the correct operating mode (e.g., MAIN zone vs. ZONE 2) for the desired function.

## 7. SPECIFICATIONS

---

- **Model Number:** RC-1167
- **Power Supply:** 2 x 1.5V AAA Alkaline Batteries (not included)
- **Product Dimensions:** 8.93 x 1.99 x 0.55 inches (approximately)
- **Item Weight:** 1.41 ounces (approximately, without batteries)
- **Compatible Devices:** Denon AV Receivers (specific models listed in Introduction)
- **Max Number of Supported Devices:** 1 (controls one AV Receiver)
- **Special Feature:** Ergonomic design

## 8. WARRANTY INFORMATION

---

Specific warranty details for this replacement remote control are not provided in the product information. Please refer to the retailer or manufacturer for any warranty-related inquiries.

## 9. SUPPORT

---

If you encounter any issues or have questions regarding the ZdalaMit RC-1167 replacement remote control that are not covered in this manual, please contact the seller or manufacturer for assistance.