

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [AWOW](#) /

› [AWOW Funtab 701 Kids Tablet User Manual](#)

AWOW Funtab 701

AWOW Funtab 701 Kids Tablet User Manual

Model: Funtab 701

INTRODUCTION

Welcome to the user manual for your AWOW Funtab 701 Kids Tablet. This guide provides essential information on setting up, operating, maintaining, and troubleshooting your device to ensure a safe and enjoyable experience for your child. Please read this manual thoroughly before using the tablet.

PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- AWOW Funtab 701 Kids Tablet (7 inch)
- Exclusive Kid-Proof Case
- Active Pen
- User Manual (this document)
- Power Adapter

PRODUCT OVERVIEW



Image: The AWOW Funtab 701 Kids Tablet, shown with its protective pink kid-proof case and the accompanying active pen. The tablet features a 7-inch display.

The AWOW Funtab 701 is a 7-inch kids tablet designed for educational and entertainment purposes. It runs on Android 10 Go, powered by a 1.5GHz Quad-core processor, with 2GB RAM and 16GB ROM. It features a 1024x600 IPS HD display and supports 2.4G Wi-Fi connectivity. The tablet comes with a durable kid-proof case and an active pen for interactive learning and creativity.

SETUP

1. Charging the Tablet

Before first use, fully charge the tablet. Connect the provided power adapter to the tablet's charging port and plug it into a wall outlet. The charging indicator will typically light up. A full charge may take several hours.

2. Powering On/Off

- **To Power On:** Press and hold the Power button (usually located on the side or top edge) until the screen lights up.
- **To Power Off:** Press and hold the Power button until a power-off menu appears on the screen.

Select 'Power off' and confirm.

3. Initial Setup

Upon first power-on, the tablet will guide you through the initial setup process:

1. **Language Selection:** Choose your preferred language.
2. **Wi-Fi Connection:** Select your 2.4G Wi-Fi network from the list and enter the password.
3. **Google Account:** Sign in with an existing Google account or create a new one. This is necessary for accessing the Google Play Store and other Google services.
4. **Date and Time:** Set the correct date and time, or allow the network to set it automatically.

4. iWawa App and Parental Controls

The AWOW Funtab 701 comes with the iWawa app pre-installed, offering a safe environment for children and robust parental controls.

- **Creating Profiles:** Open the iWawa app to create individual profiles for each child.
- **Content Management:** Within the parental control mode, you can hand-pick specific apps, games, videos, and websites that your child can access.
- **Screen Time Control:** Set daily time limits for tablet usage and specific play periods.
- **Safe Browsing:** Ensure children browse only safe and approved websites.
- **Adjusting Settings:** Parental control settings can be adjusted as your child grows to tailor content to their age and development.

OPERATING THE TABLET

1. Basic Navigation

The tablet uses a touchscreen interface. Common gestures include:

- **Tap:** To select an item or open an app.
- **Swipe:** To scroll through pages or menus.
- **Pinch:** To zoom in or out on images and web pages.
- **Long Press:** To access contextual menus or move app icons.

2. Using the Active Pen

The included active pen allows for more precise interaction, drawing, and writing. Simply touch the pen to the screen as you would with your finger. No pairing is typically required for basic functionality.

3. Managing Applications

- **Downloading Apps:** Access the Google Play Store to download new applications. Ensure parental controls are set to manage app downloads for children.
- **Uninstalling Apps:** Long-press an app icon on the home screen or in the app drawer, then drag it to the 'Uninstall' option that appears. Alternatively, go to Settings > Apps & notifications > See all apps, select the app, and tap 'Uninstall'.

4. Connecting to Wi-Fi

To connect or reconnect to a Wi-Fi network:

1. Go to **Settings > Network & internet > Wi-Fi**.

2. Ensure Wi-Fi is turned **On**.
3. Select your desired 2.4G network from the list of available networks.
4. Enter the network password if prompted, then tap **Connect**.

MAINTENANCE

1. Cleaning

To clean the tablet screen, use a soft, lint-free cloth. For stubborn smudges, slightly dampen the cloth with water or a screen-specific cleaning solution. Avoid harsh chemicals or abrasive materials. The kid-proof case can be cleaned with mild soap and water.

2. Battery Care

To prolong battery life:

- Avoid exposing the tablet to extreme temperatures (hot or cold).
- Do not allow the battery to fully discharge frequently.
- Use only the provided power adapter for charging.
- Reduce screen brightness and close unused apps to conserve power.

3. Storage

When not in use for extended periods, store the tablet in a cool, dry place away from direct sunlight. Ensure the battery has at least a 50% charge before storing.

TROUBLESHOOTING

If you encounter issues with your AWOW Funtab 701, refer to the solutions below:

- **Tablet does not turn on:** Ensure the tablet is fully charged. Connect it to the power adapter and wait a few minutes before attempting to power it on again. If it still doesn't turn on, try holding the power button for 10-15 seconds.
- **Wi-Fi connection issues:** Check if your Wi-Fi router is working correctly. Restart both the tablet and the router. Ensure you are connecting to a 2.4G network and have entered the correct password.
- **Apps are slow or crashing:** Close unused applications. Clear the cache of problematic apps (Settings > Apps & notifications > App info > Storage & cache > Clear cache). If the issue persists, consider uninstalling and reinstalling the app.
- **Battery drains quickly:** The average battery life is approximately 4 hours. To optimize, reduce screen brightness, disable Wi-Fi when not needed, and close background apps. Avoid running multiple demanding applications simultaneously.
- **Screen is unresponsive:** Try restarting the tablet. If the issue persists, ensure the screen is clean and free of debris.

SPECIFICATIONS

Feature	Detail
Brand	AWOW

Feature	Detail
Model Name	Funtab 701
Operating System	Android 10 Go
Screen Size	7 Inches
Display Resolution	1024 x 600 pixels
Processor	1.5 GHz Quad-core (Qualcomm)
RAM	2 GB
Internal Storage	16 GB
Expandable Storage	Micro SD slot (up to 512GB)
Rear Camera	2.0 MP
Front Camera	2.0 MP
Wireless Connectivity	2.4G Wi-Fi (802.11b)
Average Battery Life	4 Hours
Product Dimensions	18.5 x 10.5 x 1 cm
Item Weight	453.59 g

WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided at the time of purchase. This typically includes details on coverage duration and terms. For technical assistance or further inquiries, please contact AWOW customer service through their official support channels.