

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [White Whale](#) /

› [White Whale WD-14820LS Front Load Washer Dryer User Manual](#)

White Whale WD-14820LS

White Whale WD-14820LS Front Load Washer Dryer User Manual

Model: WD-14820LS

1. INTRODUCTION

Thank you for choosing the White Whale WD-14820LS Front Load Washer Dryer. This manual provides important information regarding the safe installation, operation, and maintenance of your appliance. Please read this manual thoroughly before using the appliance and keep it for future reference.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury to persons.

- Ensure the appliance is properly grounded.
- Do not operate the appliance if it is damaged or malfunctioning.
- Keep children and pets away from the appliance during operation.
- Do not wash or dry articles that have been cleaned in, washed in, soaked in, or spotted with combustible or explosive substances.
- Unplug the appliance from the power supply before cleaning or performing any maintenance.
- Do not install or store the appliance where it will be exposed to the weather or to freezing temperatures.

3. PRODUCT OVERVIEW

The White Whale WD-14820LS is an 8kg front load washer dryer designed for efficient laundry care. It features a smart operating system and a large LCD screen for easy program selection and monitoring.

Key Features:

- Front load washer dryer combination
- Smart operating system
- Child safety lock

- Ability to add clothes during operation
- Spin speed of 1400 RPM
- Self-cleaning inner drum
- 15-minute quick wash program
- Large LCD screen
- Stain removal and anti-bacterial program
- Spray wash function
- Program delay start option
- Large door for easy loading and unloading
- Capacity: 8 kg

Components:

The appliance consists of a main body, a control panel, a detergent dispenser drawer, a large front loading door, and an internal drum.



Image 1: Front view of the White Whale WD-14820LS Front Load Washer Dryer. The image shows the silver-colored appliance with a large circular door on the front, a control panel with a display and knobs on the top right, and a detergent dispenser drawer on the top left.

4. SETUP

4.1. Installation

1. **Unpacking:** Carefully remove all packaging materials. Check for any transport damage.
2. **Location:** Place the washer dryer on a firm, level floor. Ensure there is adequate space around the appliance for ventilation and maintenance. Avoid direct sunlight or extreme temperatures.
3. **Leveling:** Adjust the leveling feet at the bottom of the appliance to ensure it is stable and level. An unlevel appliance can cause excessive vibration and noise.

4. **Water Connection:** Connect the inlet hose to a cold water tap with a 3/4-inch thread. Ensure all connections are tight to prevent leaks.
5. **Drainage:** Position the drain hose into a standpipe or over the edge of a sink, ensuring it is securely fixed to prevent dislodgement during operation.
6. **Power Connection:** Plug the power cord into a properly grounded electrical outlet. Do not use extension cords or adapters.

4.2. First Use

Before washing clothes for the first time, it is recommended to run an empty wash cycle to clean the drum and remove any manufacturing residues.

1. Add a small amount of detergent to the detergent dispenser.
2. Close the door.
3. Select a short wash program (e.g., Quick Wash).
4. Start the cycle.

5. OPERATING INSTRUCTIONS

5.1. Control Panel

The control panel features a large LCD screen, program selection knob, and various function buttons (e.g., Start/Pause, Temperature, Spin, Delay Start, Child Lock). Refer to the specific markings on your appliance for detailed button functions.

5.2. Loading Laundry

- Open the washer door.
- Load laundry loosely into the drum, ensuring not to overload. An 8kg capacity refers to dry laundry weight.
- Close the door firmly until it clicks.

5.3. Detergent Dispenser

Pull out the detergent dispenser drawer. It typically has compartments for pre-wash detergent, main wash detergent, and fabric softener. Add appropriate amounts of detergent and softener according to the laundry load and water hardness.

5.4. Selecting a Program

1. Turn the program selection knob to choose the desired wash or wash+dry program. The LCD screen will display the default settings for the selected program.
2. Adjust additional options such as temperature, spin speed, or special functions (e.g., Stain Removal, Spray Wash) using the corresponding buttons.
3. For quick washing, select the 15-minute quick wash program.

5.5. Starting and Pausing a Cycle

- Press the Start/Pause button to begin the selected program.
- To pause a running cycle, press the Start/Pause button again. The door may unlock after a short delay, allowing you to add or remove items. Press Start/Pause again to resume.

5.6. Child Lock

Activate the child lock feature to prevent accidental changes to settings or interruption of a cycle by children. Refer to your appliance's control panel for the specific button combination to activate/deactivate the child lock.

5.7. Delay Start

Use the Delay Start function to postpone the start of a wash cycle by a few hours. This is useful for taking advantage of off-peak electricity rates or having laundry ready at a specific time.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your appliance.

6.1. Cleaning the Exterior

Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.

6.2. Cleaning the Detergent Dispenser

Periodically remove and clean the detergent dispenser drawer under running water to prevent detergent buildup and mold growth.

6.3. Cleaning the Drum

The appliance features a self-cleaning function for the inner drum. Run this program regularly (e.g., once a month) without laundry to maintain hygiene and prevent odors.

6.4. Cleaning the Drain Filter

Locate the drain filter (usually at the bottom front of the appliance). Open the cover, place a shallow container underneath to catch water, and carefully unscrew the filter. Clean any lint or debris and reinsert it securely.

7. TROUBLESHOOTING

Before contacting customer service, refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Appliance does not start	No power supply; Door not closed properly; Program not selected; Start/Pause button not pressed.	Check power plug and fuse; Ensure door is firmly closed; Select a program; Press Start/Pause.
Excessive vibration/noise	Appliance not level; Transit bolts not removed; Overloaded drum; Small items caught in drum.	Adjust leveling feet; Ensure transit bolts are removed (refer to installation); Reduce load; Check drum for foreign objects.
Water leakage	Hoses loose or damaged; Detergent dispenser clogged; Drain filter loose.	Check and tighten all hose connections; Clean detergent dispenser; Securely fasten drain filter.
Clothes not drying properly	Overloaded dryer; Lint filter clogged; Incorrect drying program selected.	Reduce load size; Clean lint filter; Select appropriate drying program.

8. SPECIFICATIONS

Feature	Specification
Brand Name	White Whale
Model Information	WD-14820LS Dryer
Capacity	8 Kilograms
Part Number	Wd-14820Ls
Color	Silver
Material Type	Metal
ASIN	B091CMBVH6
Date First Available	March 30, 2021

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or contact White Whale customer service directly. Keep your purchase receipt as proof of purchase.