

[Manuals.plus](#) /

› [VIKICON](#) /


› VIKICON HT-871 Body Groomer Instruction Manual

VIKICON HT-871

VIKICON HT-871 Body Groomer Instruction Manual

INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your VIKICON HT-871 Body Groomer. Please read this manual thoroughly before first use and retain it for future reference.

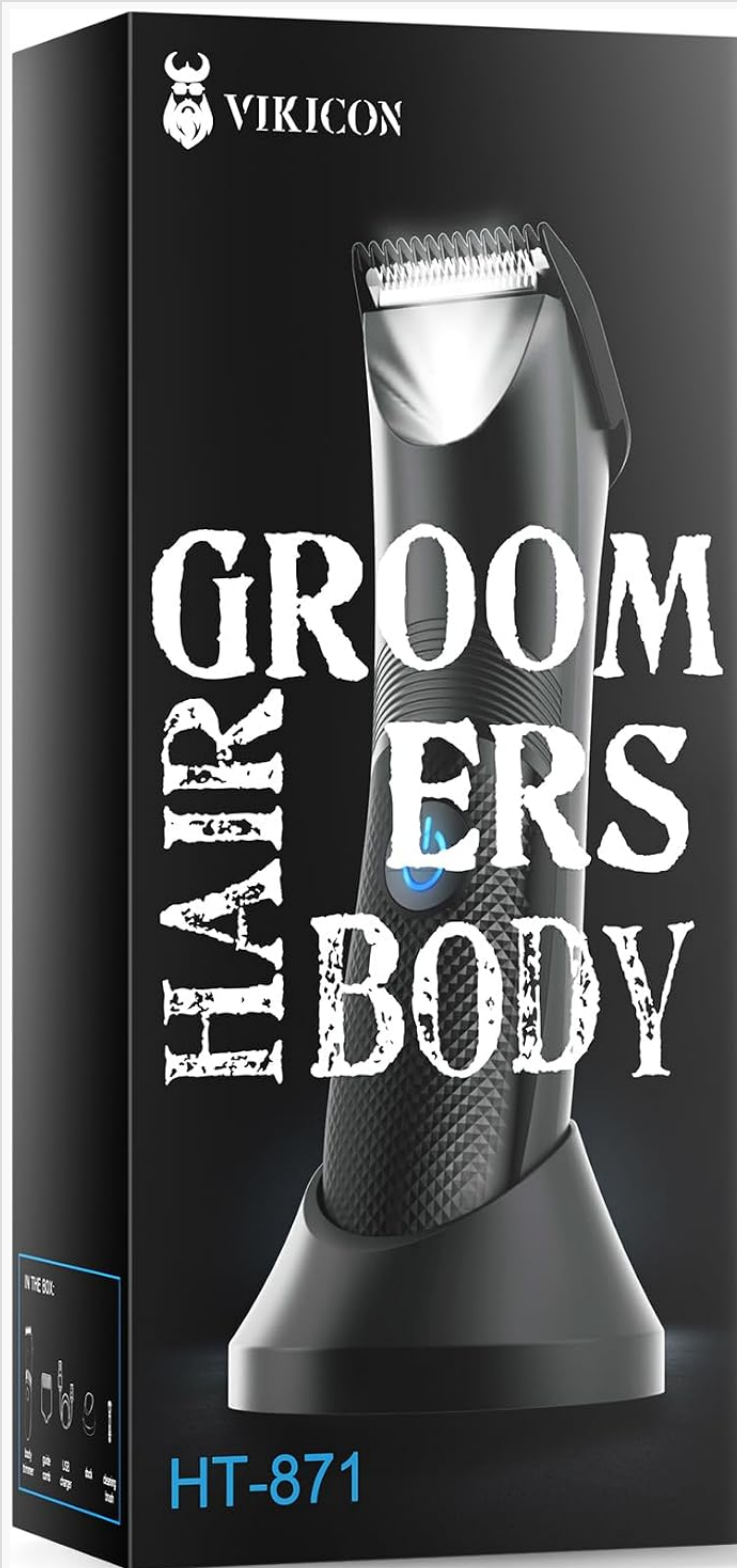

The VIKICON HT-871 Body Groomer, presented alongside its retail packaging, showcasing the device's sleek design and the product branding.

SAFETY INFORMATION

For safe use, observe the following precautions:

- Be cautious of cuts and skin irritation during use.
- Clean and dry the shaver regularly to prevent bacterial growth.
- Avoid using near water or charging while in use, unless explicitly stated as safe by the manufacturer.

PACKAGE CONTENTS

Verify that all items are present in the package:

- VIKICON HT-871 Body Groomer
- Adjustable Guide Comb (3mm/6mm/12mm)
- USB Type-C Charging Cable
- Charging Base
- Cleaning Brush
- Travel Pouch
- Instruction Manual

Travel-Friendly Design



All Essentials in One



Charge once, Use for Month



1h+ Runtime
USB C Charging



A display of all items included with the VIKICON HT-871 Body Groomer: the trimmer, charging base, adjustable guide comb, USB-C cable, and travel pouch.

PRODUCT FEATURES

- **Ceramic Blade Technology:** Designed for safety and efficiency, reducing nicks and irritation.
- **Integrated LED Light:** Illuminates trimming areas for improved visibility in dim conditions.
- **IPX7 Waterproof Rating:** Allows for safe use in wet conditions and easy cleaning under running water.

- **Adjustable Guide Comb:** Provides three trimming lengths (3mm, 6mm, 12mm) for versatile grooming.
- **USB-C Charging:** Convenient charging compatible with various USB power sources.
- **Long Battery Life:** Offers over 60 minutes of runtime on a full charge.
- **Ergonomic Design:** Lightweight and comfortable for extended use.

You Get More for Less

Trimmer for Groin, Pubic Area, Chest, Legs, etc.



An illustration highlighting the main features of the VIKICON HT-871 Body Groomer, including its ceramic blade, LED light, ergonomic non-slip texture, and adjustable guide comb.

Next-Gen *Ceramic Blade* Technology

Designed for Safety and Efficiency



No Nicks



No Allergens



Sharper than Metal




A detailed view of the ceramic blade technology, emphasizing its design for safety and efficiency, aiming to prevent nicks and irritation.

SETUP

Charging the Device

1. Before initial use, fully charge the VIKICON HT-871 Body Groomer.
2. Connect the USB Type-C charging cable to the trimmer and a compatible USB power source.

3. The LED indicator will show charging status: Red light indicates low battery, Blue light indicates fully charged, Red and flashing indicates very low battery.

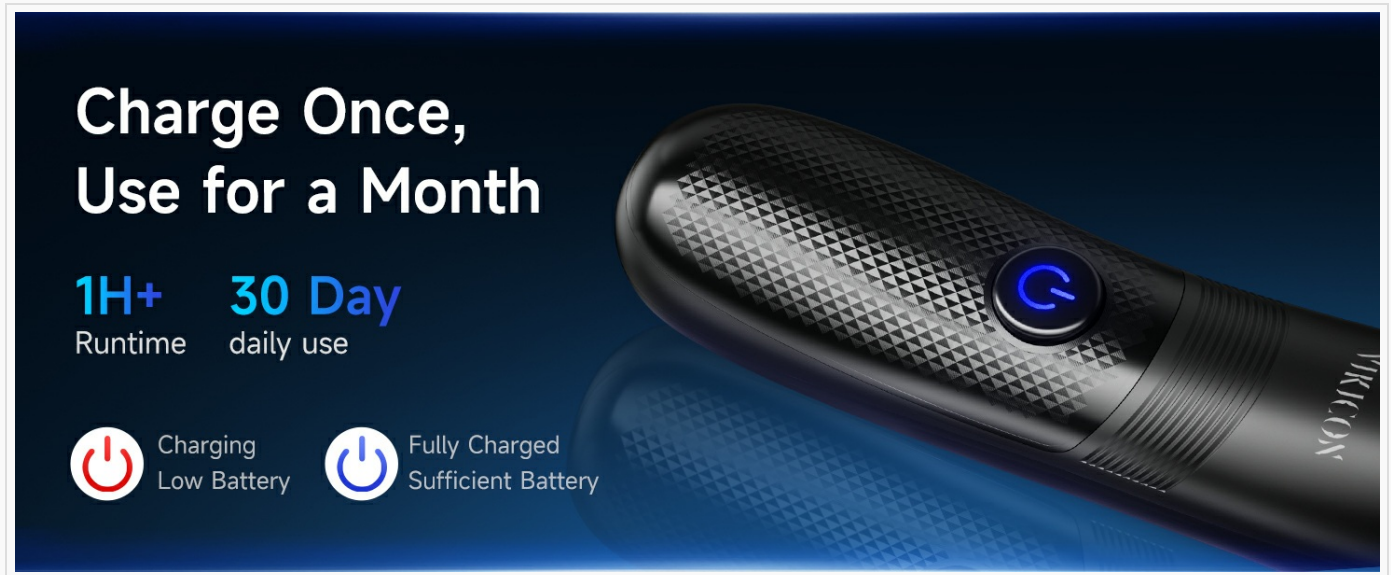

An illustration showing the LED indicator lights for charging status: red for low battery, blue for fully charged.

OPERATING INSTRUCTIONS

General Trimming

1. Ensure the device is fully charged.
2. Press the power button for one second to turn on the trimmer. The LED light will activate automatically.
3. Attach the adjustable guide comb if a specific trimming length (3mm, 6mm, or 12mm) is desired. Adjust the comb to the preferred length.
4. For optimal results, move the trimmer slowly and steadily against the direction of hair growth, keeping it close to the skin.
5. For hard-to-reach areas, consider seeking assistance.
6. After use, turn off the device by pressing the power button.

Smooth Moves, Every Zone

Armpit



Chest



Pubic



Images illustrating the VIKICON HT-871 Body Groomer being used for trimming hair on the armpit, chest, and pubic regions, highlighting its versatility.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and hygiene of your VIKICON HT-871 Body Groomer.

1. Ensure the trimmer is turned off before cleaning.
2. The device is IPX7 waterproof, allowing it to be rinsed directly under running water.

3. Use the provided cleaning brush to remove any loose hairs from the blade and trimmer head.
4. Rinse the blade and trimmer head thoroughly under water.
5. Allow the trimmer to air dry completely before storing or recharging.
6. Store the trimmer in a clean, dry place, preferably in its travel pouch.

Trim Anywhere Rinse Anytime

With IPX7 waterproofing, you can trim even in the shower and rinse the trimmer directly for easy cleaning.



IPX7 Waterproof



The VIKICON HT-871 Body Groomer shown under running water, demonstrating its IPX7 waterproof capability for easy cleaning.

TROUBLESHOOTING

Charging Issues

If the trimmer does not appear to charge or the indicator light remains red after charging:

- Ensure the USB-C cable is securely connected to both the trimmer and the power source.
- Verify that the power source is active and functioning correctly.
- Check the LED indicator: A red light indicates low battery, a blue light indicates a full charge, and a red flashing light indicates a very low battery. If the light remains red and flashing, ensure the charging connection is stable.

Performance Issues

- If the trimmer pulls hair or does not cut effectively, ensure the blade is clean and free of debris.
- Confirm the guide comb is correctly attached and not obstructed.
- Ensure the device is adequately charged, as low battery can affect motor performance.

SPECIFICATIONS

Feature	Detail
Model Number	HT-871
Power Source	Battery Powered
Waterproof Rating	IPX7
Blade Type	Ceramic Blade
Battery Type	1 C battery (included)
Product Dimensions	5.91 x 1.57 x 1.38 inches
Weight	4.23 ounces
Wattage	5 Watt-hours

WARRANTY AND SUPPORT

VIKICON offers a two-year maintenance coverage for the HT-871 Body Groomer. For any issues or support, please refer to the contact information provided with your purchase or visit the official VIKICON website.



An image indicating the 2-Year Carefree Period for the VIKICON HT-871 Body Groomer, highlighting the warranty coverage.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question