

hauck D93906

Hauck Unicorn Doll Stroller & Care Set Instruction Manual

Model: D93906

IMPORTANT SAFETY INFORMATION

Please read these instructions carefully before assembly and use. Keep this manual for future reference.

- This product is a toy and is intended for dolls only. It is not suitable for real infants or pets.
- Recommended for children ages 3 years and up.
- Adult supervision is recommended during assembly and play.
- Ensure all parts are securely fastened before allowing a child to play with the set.
- Do not allow children to climb on or stand in the stroller, swing, or high chair.
- Keep packaging materials away from children to prevent suffocation.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- Doll Stroller (1)
- Doll Swing / High Chair Combo (1)
- Instruction Manual (1)

SETUP AND ASSEMBLY

1. Doll Stroller Assembly

The doll stroller is designed for easy setup. Unfold the stroller frame until it locks into place. Attach the canopy if it is not pre-attached. Ensure the wheels are securely in position.



Image: Fully assembled Hauck Unicorn Doll Stroller, featuring a pink and grey design with a unicorn graphic on the seat and a patterned

canopy.



Image: Close-up view of the doll stroller's seat with a unicorn graphic, showing the harness belt and the patterned canopy.



Image: View of the underside of the doll stroller, highlighting the wheels, storage basket, and the steel tube frame with plastic connector points.

2. Doll Swing / High Chair Combo Assembly

The 3-in-1 doll play set includes a swing that converts into a high chair and can be used as a car seat/carrier. The easy click connect system allows for simple transitions.

1. **Swing Setup:** Assemble the swing frame by connecting the steel tubes as shown in the diagram. Ensure all connections click securely into place. Place the doll seat into the swing frame.
2. **High Chair Conversion:** To convert the car seat/carrier into a high chair, snap it into the top two connectors of the high chair stand. Ensure it is firmly seated.



Image: The doll high chair, featuring a pink seat with a unicorn graphic, a feeding tray, and a grey steel frame.



Image: The doll swing, showing the pink doll seat with a unicorn graphic suspended within a grey steel swing frame.



Image: The doll car seat/carrier, a pink seat with a unicorn graphic and a carrying handle, designed for portability.

OPERATING INSTRUCTIONS

Using the Doll Stroller

- Place your doll in the stroller seat.
- Secure the doll using the adjustable harness belt.
- Adjust the canopy as needed for shade.
- Use the storage basket located underneath the seat for doll accessories.
- To fold the stroller for storage or travel, follow the folding mechanism instructions (typically a latch or

button on the frame).

Using the Doll Swing

- Ensure the swing frame is stable on a flat surface.
- Place your doll securely in the swing seat.
- Gently push the swing to initiate motion.

Using the Doll High Chair

- Ensure the high chair stand is fully extended and stable.
- Snap the doll car seat/carrier into the high chair stand's top connectors.
- Place your doll in the high chair seat and use the tray for play feeding.

Using the Doll Car Seat / Carrier

- Place your doll in the carrier seat.
- Use the integrated handle to carry the doll.
- This component can also be used independently for doll transport.

MAINTENANCE

- **Cleaning:** Wipe down plastic and metal parts with a damp cloth and mild soap. Do not use abrasive cleaners. Fabric parts can be spot cleaned.
- **Storage:** Store the set in a clean, dry place away from direct sunlight when not in use. The doll stroller is easy to fold for compact storage.
- **Inspection:** Periodically check all screws, bolts, and connectors to ensure they are tight and secure. Replace any damaged parts immediately.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Stroller does not fold/unfold easily.	Locking mechanism engaged or obstructed.	Ensure the locking mechanism is disengaged. Check for any fabric or debris obstructing the folding joints.
Doll seat feels unstable.	Connections not fully secured.	Recheck all connection points for the stroller, swing, or high chair. Ensure they are clicked into place.
Parts are missing or damaged.	Manufacturing defect or shipping damage.	Contact customer support for assistance (see Warranty and Support section).

SPECIFICATIONS

- **Model Number:** D93906
- **Brand:** Hauck
- **Recommended Age:** 36 months to 1200 months (3 to 100 years)
- **Material:** Plastic, Steel Tube Frame
- **Item Dimensions (Stroller):** Approximately 13.39 x 7.48 x 26.77 inches (L x W x H)
- **Assembly Required:** No (for initial setup, minor assembly may be needed for swing/high chair frame)
- **Included Components:** Doll Stroller, Swing/High Chair Combo

WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the manufacturer's official website or contact their customer service department. Keep your purchase receipt as proof of purchase.

Manufacturer: Hauck

Website: [Visit the Hauck Store on Amazon](#)