

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [ZdalaMit](#) /

› [ZdalaMit RC-928R Remote Control User Manual for Onkyo AV Receivers](#)

ZdalaMit RC-928R

ZdalaMit RC-928R Remote Control User Manual

Model: RC-928R | Brand: ZdalaMit

INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your ZdalaMit RC-928R replacement remote control. This remote is designed to be compatible with various Onkyo AV Receiver models, offering a direct replacement without the need for programming.

Compatible Onkyo AV Receiver Models:

- TX-SR353
- HT-S3800
- HT-S3900
- HT-R397
- HTP-395
- TX-SR373

SETUP

The ZdalaMit RC-928R remote control requires no programming or pairing. Simply install the batteries, and it will be ready for immediate use with your compatible Onkyo AV Receiver.

Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch and lift to open the compartment.
3. Insert two (2) 1.5V AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Replace the battery compartment cover, sliding it back into place until it clicks securely.

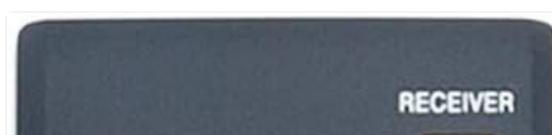






Figure 1: Front view of the ZdalaMit RC-928R remote control. The remote features various buttons for controlling an Onkyo AV Receiver.





Figure 2: Angled view of the ZdalaMit RC-928R remote control, highlighting the button layout and ergonomic design.

OPERATING INSTRUCTIONS

This remote control provides full functionality for your compatible Onkyo AV Receiver. Point the remote directly at the receiver's infrared sensor for optimal performance.

Key Functions Overview

The remote control features dedicated buttons for various functions. Refer to your Onkyo AV Receiver's manual for specific functions of each button if needed.

- **RECEIVER (Power)**: Turns the AV Receiver on or off.
- **BD/DVD, CBL/SAT, STRM BOX, AUDIO SEL, GAME, CD, TV, LATE NIGHT, TUNER, USB, BLUETOOTH, M.OPT**: Input selection buttons to switch between different audio/video sources.
- **TOP MENU, QUICK MENU**: Access menu functions on your connected devices or receiver.
- **Navigation Pad (Up, Down, Left, Right, ENTER)**: Used for menu navigation and selection.
- **VOL (+/-)**: Adjusts the master volume level.
- **DIRECT, STEREO, SURR, DSP**: Sound mode selection buttons.
- **BASS (+/-), TREBLE (+/-)**: Adjusts bass and treble levels.
- **DISPLAY, TUNING (+/-), EDIT, SLEEP, PRESET (+/-), PTY, BAND, DIMMER**: Buttons for tuner functions, display settings, and other utility features.
- **Playback Controls (Play, Pause, Stop, Fast Forward, Rewind, Skip)**: Controls playback of media on connected devices.

MAINTENANCE

Battery Replacement

Replace batteries when the remote's range decreases or if it becomes unresponsive. Always replace both batteries simultaneously with new 1.5V AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

Cleaning

To clean the remote control, wipe it with a soft, dry cloth. Do not use abrasive cleaners, solvents, or chemical wipes, as these can damage the remote's surface or internal components.

TROUBLESHOOTING

Problem	Solution
Remote is not responding.	<ul style="list-style-type: none">• Ensure batteries are inserted correctly with correct polarity.• Replace old batteries with new 1.5V AAA alkaline batteries.• Check for any obstructions between the remote and the AV Receiver's sensor.• Ensure you are within the effective operating range and pointing the remote directly at the receiver.
Limited operating range.	<ul style="list-style-type: none">• Replace batteries with new ones.• Remove any objects that might be blocking the infrared signal.• Ensure the remote's infrared emitter and the receiver's sensor are clean.
Certain buttons do not work.	<ul style="list-style-type: none">• Verify that the button's function is supported by your specific Onkyo AV Receiver model.• Ensure the remote is in good condition and there is no physical damage to the buttons.

SPECIFICATIONS

Model: RC-928R

Brand: ZdalaMit

Power Supply: 2 x 1.5V AAA Alkaline Batteries (not included)

Product Dimensions: 6.2 x 2 x 0.6 inches (approximately)

Item Weight: 1.41 ounces (approximately, without batteries)

Compatible Devices: Onkyo AV Receivers (TX-SR353, HT-S3800, HT-S3900, HT-R397, HTP-395, TX-SR373)

Special Feature: Ergonomic design

Color: Black

CUSTOMER SUPPORT

If you encounter any issues not covered in this manual or require further assistance, please contact your retailer or the manufacturer's customer support. We are available to help with any queries you may have.

