

[Manuals.plus](#) /

> [WINFLIKE](#) /

> WINFLIKE OPLAY021 Replaced Remote Control - User Manual

WINFLIKE OPLAY021

User Manual

WINFLIKE OPLAY021 REPLACED REMOTE CONTROL

1. Introduction

This manual provides essential information for the proper use and maintenance of your WINFLIKE OPLAY021 Replaced Remote Control. This remote is designed as a direct replacement for the original remote control of the Asus O!Play Live Mini E6072 HDP-R3 HD Media Player, as well as the ASUS oplay021 O!Play Live Mini Plus HD Box. It offers a high-grade, ergonomic, and lightweight solution for controlling your media player.





Figure 1: Front view of the WINFLIKE OPLAY021 Replaced Remote Control. The remote is black with grey and black buttons, including a central navigation pad with an OK button, playback controls, volume, mute, and zoom buttons.

2. Setup

The WINFLIKE OPLAY021 Replaced Remote Control is designed for immediate use without complex setup procedures. No programming or pairing is required.

2.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.

4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

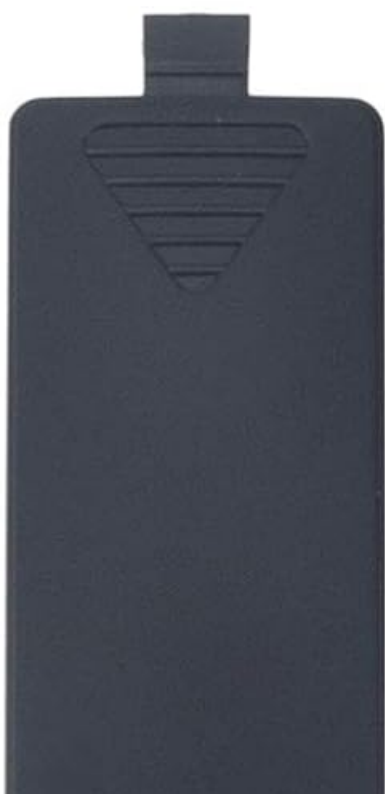




Figure 2: Back view of the remote control showing the open battery compartment. Two AAA batteries are visible inside, and the battery cover is detached.

Once batteries are installed, the remote control is ready for use with your compatible Asus O!Play media player.

3. Operating Instructions

The remote control provides full functionality for your compatible media player. Ensure there is a clear line of sight between the remote control's infrared emitter and the media player's IR receiver.

3.1 Basic Functions

- **Power Button** (⏻): Press to turn the media player on or off.
- **Navigation Pad** (▲ ▼ ◀ ▶): Use the directional arrows to navigate through menus and options.
- **OK Button**: Press the central OK button to confirm selections.
- **Volume Buttons** (+ / -): Adjust the audio output level.
- **Mute Button**: Toggle audio mute on or off.
- **Playback Controls** (◀◀ / ▶▶ / ▶▶▶ / ■): Control media playback (Rewind, Fast Forward, Play/Pause, Stop).
- **Guide Button**: Access the program guide or information screen.
- **Option Button**: Open context-sensitive options menus.
- **Zoom Button**: Adjust screen zoom levels.
- **Edit Button**: Access editing functions.

Refer to your media player's manual for specific functions associated with each button, as functionality may vary slightly depending on the media player model and firmware.

4. Maintenance

Proper care and maintenance will extend the life of your remote control.

- **Cleaning**: Use a soft, dry cloth to clean the surface of the remote control. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or abrasive materials.
- **Battery Replacement**: Replace batteries when the remote's performance degrades or it stops responding. Always replace both batteries at the same time with new ones of the same type (AAA alkaline).
- **Storage**: Store the remote control in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. If the remote will not be used for an extended period, remove the batteries to prevent leakage.
- **Avoid Drops**: While designed to be durable, avoid dropping the remote control, as this can damage internal components.

5. Troubleshooting

If you experience issues with your remote control, try the following troubleshooting steps:

- **Remote Not Responding:**
 - Check the batteries. Ensure they are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new AAA alkaline batteries.
 - Ensure there are no obstructions between the remote control and the media player's IR receiver.
 - Confirm you are within the effective range of the media player's IR receiver.
- **Buttons Not Working:**
 - Clean the remote control surface, especially around the buttons, to ensure no debris is interfering with button presses.
 - If only specific buttons are not working, it might indicate internal damage.
- **Intermittent Operation:**
 - This often indicates low battery power. Replace the batteries.
 - Ensure consistent line of sight.

If the issue persists after attempting these steps, please refer to the support section.

6. Specifications

Model Number	OPLAY021
Brand	WINFLIKE
Compatible Brand	Asus
Compatible Devices	Asus O!Play Live Mini E6072 HDP-R3 HD Media Player, ASUS oplay021 O!Play Live Mini Plus HD Box
Material	ABS Material
Color	Black
Package Dimensions	5.75 x 1.97 x 1.14 inches
Item Weight	1.76 ounces
Special Features	Ergonomic, Lightweight
Batteries Required	2 x AAA (not included)

7. Warranty Information

Specific warranty details for the WINFLIKE OPLAY021 Replaced Remote Control are not provided in this manual. Please refer to the product packaging, the seller's website, or contact the seller directly for information regarding warranty coverage and terms.

8. Customer Support

For further assistance, technical support, or inquiries regarding your WINFLIKE OPLAY021 Replaced Remote Control, please contact the seller or manufacturer directly through the platform where the product was purchased. Ensure you have your purchase details readily available when contacting support.

