

[Manuals.plus](#) /

› [ASHATA](#) /

› ASHATA Mini Portable Bluetooth Speaker with FM Radio and USB/TF Card Playback User Manual

ASHATA ecb43e1e-a651-4265-bf6c-ba6d95d69d54

ASHATA Mini Portable Bluetooth Speaker User Manual

Model: ecb43e1e-a651-4265-bf6c-ba6d95d69d54

1. PRODUCT OVERVIEW

The ASHATA Mini Portable Bluetooth Speaker is a compact and lightweight audio device designed for versatile use. It offers high-fidelity sound, multiple playback options, and hands-free calling functionality.



Image 1.1: Front view of the ASHATA Mini Portable Bluetooth Speaker with its charging cable.

Key Features:

- **High-Fidelity Sound:** Equipped with a full-frequency internal magnetic speaker and 6D bass boost

subwoofer.

- **Multiple Playback Modes:** Supports Bluetooth wireless, TF (Micro SD) card, and USB disk playback.
- **FM Radio:** Integrated FM radio function.
- **Hands-Free Calling:** HD hands-free calls with intelligent noise reduction for clear voice quality.
- **Portable Design:** Compact and lightweight, suitable for various activities.
- **AUX Input:** Supports audio cable connection for wired playback.

2. PACKAGE CONTENTS

Please check the package for the following items:

- 1 x ASHATA Mini Portable Bluetooth Speaker
- 1 x USB Charging Cable

3. SETUP

3.1 Charging the Speaker

Before first use, fully charge the speaker. Connect the provided USB charging cable to the speaker's DC 5V port and the other end to a USB power adapter (not included) or a computer's USB port.



Image 3.1: Detailed view of the speaker's connection ports.

- The charging indicator light will illuminate during charging.

- The light will turn off or change color once charging is complete.

3.2 Powering On/Off

Locate the ON/OFF switch on the speaker's side panel.

- To power on, slide the switch to the **ON** position.
- To power off, slide the switch to the **OFF** position.

4. OPERATING INSTRUCTIONS



Image 4.1: Top view of the speaker with control buttons.

4.1 Button Functions

- **M (Mode) Button:** Press to switch between Bluetooth, FM Radio, TF Card, and USB Disk modes.
- **- (Volume Down / Previous Track) Button:** Short press to decrease volume. Long press to go to the previous track/station.
- **+ (Volume Up / Next Track) Button:** Short press to increase volume. Long press to go to the next track/station.
- **> (Play/Pause / Call) Button:** Short press to play or pause music. Short press to answer/end a call. Long press to reject a call.

4.2 Bluetooth Mode

1. Power on the speaker. It will automatically enter Bluetooth pairing mode (indicated by a flashing LED

light and an audible prompt).

2. On your device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "ASHATA Bluetooth" (or similar name) from the list.
4. Once paired, the speaker will emit an audible confirmation, and the LED light will stop flashing.
5. You can now play audio from your device through the speaker.

4.3 FM Radio Mode

1. Press the **M** button to switch to FM Radio mode.
2. Long press the > (Play/Pause) button to automatically scan and save available FM stations.
3. Use the - and + buttons (long press) to navigate between saved stations.

4.4 TF Card / USB Disk Playback

1. Insert a TF (Micro SD) card or USB disk with MP3 audio files into the corresponding slot on the speaker.
2. The speaker will automatically detect the storage device and begin playing music. If not, press the **M** button to switch to the correct mode.
3. Use the - and + buttons to control playback (short press for volume, long press for track navigation).

4.5 AUX Input Mode

1. Connect one end of a 3.5mm audio cable (not included) to the speaker's AUX port (if available, otherwise use USB for audio input if supported by your device) and the other end to your audio source.
2. Press the **M** button to switch to AUX mode.
3. Control playback and volume from your connected audio source.

4.6 Hands-Free Calling

When connected via Bluetooth to a smartphone:

- **Answer/End Call:** Short press the > (Play/Pause) button.
- **Reject Call:** Long press the > (Play/Pause) button.

5. MAINTENANCE

To ensure the longevity and optimal performance of your ASHATA Mini Portable Bluetooth Speaker, please follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the speaker's exterior. Do not use abrasive cleaners, alcohol, or solvents.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Water Exposure:** This speaker is not waterproof. Avoid exposing it to water, rain, or excessive moisture.
- **Handling:** Handle the speaker with care. Avoid dropping it or subjecting it to strong impacts.
- **Charging:** Use only the provided charging cable or a certified equivalent. Do not overcharge the battery.

6. TROUBLESHOOTING

If you encounter issues with your speaker, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is depleted.	Charge the speaker for at least 2-3 hours.
Cannot pair via Bluetooth.	Bluetooth is not enabled on your device or speaker is not in pairing mode.	Ensure speaker is in Bluetooth mode (flashing LED). Enable Bluetooth on your device and search again. Move speaker closer to device.
No sound or low volume.	Volume too low on speaker or connected device. Incorrect mode selected.	Increase volume on both speaker and connected device. Press 'M' button to ensure correct playback mode (Bluetooth, TF, USB, AUX).
FM radio reception is poor.	Weak signal.	Move the speaker to a location with better signal reception. Re-scan for stations.
TF card/USB disk not playing.	Card/disk not inserted correctly or unsupported file format.	Ensure card/disk is fully inserted. Check if audio files are in MP3 format. Press 'M' button to select correct mode.

7. SPECIFICATIONS

Feature	Detail
Bluetooth Version	4.2
Output Power	3 W
Input Voltage	DC 5V
Speaker Impedance	4 Ohms
Signal-to-Noise Ratio (SNR)	75 dB
Distortion Rate	<0.5%
Wireless Range	Up to 10 meters (32.8 feet)
Frequency Response	150Hz-20KHz
Battery Type	Built-in 400 mAh Lithium Battery
Product Weight	Approx. 108 g (3.8 oz)
Dimensions	1 x 1 x 1 cm (approximate, based on product data)
Material	Plastic

8. WARRANTY AND SUPPORT

8.1 Warranty Information

This product comes with a limited warranty. Please refer to the product packaging or contact your retailer for specific warranty terms and conditions. Keep your purchase receipt as proof of purchase.

8.2 Customer Support

If you have any questions, require technical assistance, or experience issues not covered in this manual, please contact ASHATA customer support through your retailer or the official ASHATA website for further assistance.