

Unold 68525

Unold 68525 BACKMEISTER Big Bread Maker Instruction Manual

INTRODUCTION

Welcome to the Unold BACKMEISTER Big Bread Maker. This appliance is designed to simplify your bread baking process, offering a variety of programs for different bread types, including gluten-free options, and convenient features like a timer and keep-warm function. Please read this manual thoroughly before first use to ensure safe and optimal operation.

SAFETY INSTRUCTIONS

To prevent injury or damage, always observe the following safety precautions:

- Read all instructions before using the appliance.
- Do not immerse the appliance base, power cord, or plug in water or any other liquid.
- Ensure the appliance is placed on a stable, heat-resistant, and dry surface, away from edges.
- Keep the appliance out of reach of children and pets.
- Always unplug the appliance from the power outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Do not operate the appliance with a damaged cord or plug, or if the appliance malfunctions or has been damaged in any manner.
- Avoid contact with moving parts.
- Do not use accessories not recommended by the manufacturer.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Exercise extreme caution when moving an appliance containing hot oil or other hot liquids.
- Do not touch hot surfaces. Use handles or knobs.
- This appliance is for household use only.

PRODUCT OVERVIEW


The Unold BACKMEISTER Big bread maker features a robust design with user-friendly controls and a ceramic non-stick baking pan.



Image: Unold BACKMEISTER Big bread maker with its components.

Components:

- Appliance Housing
- Lid with 2 Viewing Windows
- Control Panel with LCD Display
- Removable Baking Pan with Ceramic Non-Stick Coating
- Dual Kneading Blades
- Measuring Cup and Spoon (Accessories)
- Kneading Hook Removal Tool (Accessory)

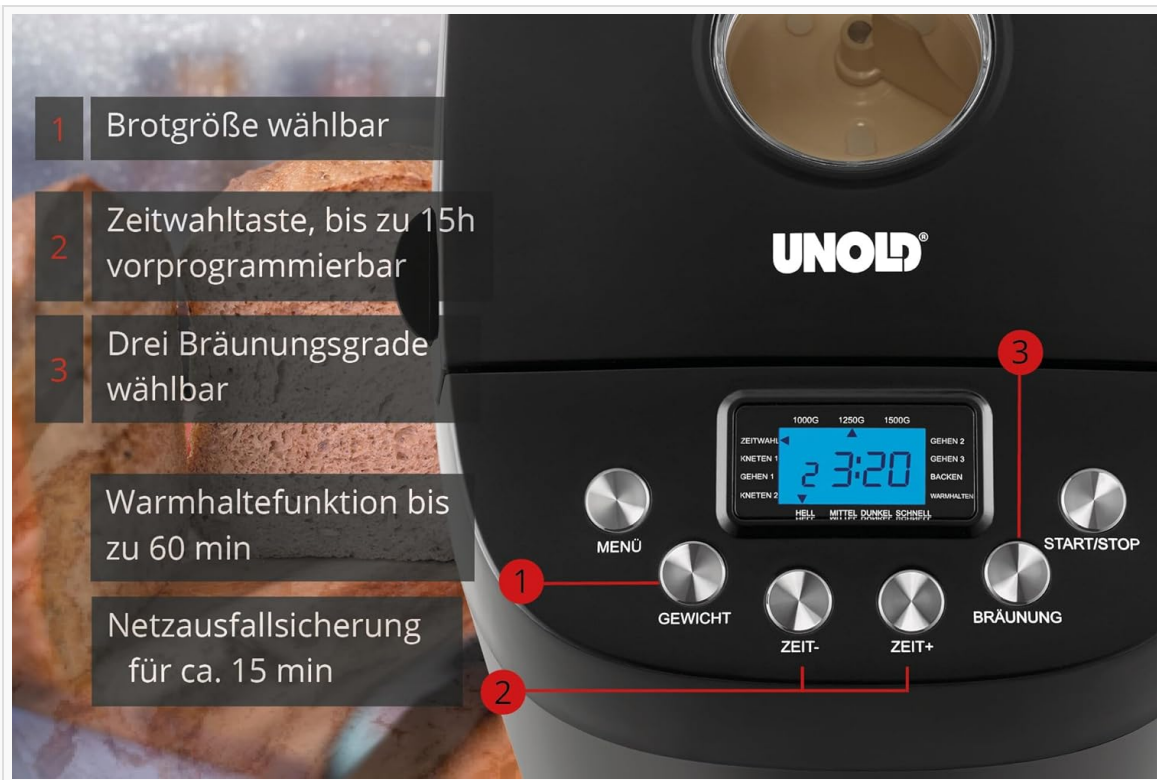

- 1 Brotgröße wählbar
- 2 Zeitwahltaste, bis zu 15h vorprogrammierbar
- 3 Drei Bräunungsgrade wählbar
- Warmhaltefunktion bis zu 60 min
- Netzausfallsicherung für ca. 15 min

Image: Detailed view of the control panel.

Control Panel Functions:

- **MENU:** Selects one of the 15 available programs.
- **GEWICHT (WEIGHT):** Adjusts the loaf size (e.g., 1000g, 1250g, 1500g).
- **ZEIT- / ZEIT+ (TIME- / TIME+):** Used to set the delay timer for deferred baking or adjust program times for custom programs.
- **BRÄUNUNG (BROWNING):** Selects the desired crust browning level (Light, Medium, Dark).
- **START/STOP:** Initiates or cancels the selected program.



1. BASIS
2. WEISSBROT
3. VOLLKORN
4. HEFEKUCHEN
5. BUTTERMILCH
6. GLUTENFREI
7. SUPERSCHNELL
8. KUCHEN/ LOW CARB

9. KNETEN
10. HEFETEIG
11. NUDELTEIG
12. JOGHURT
13. KONFITÜRE
14. BACKEN
15. EIGENPROGRAMM

Programmvierfalt

Image: Program selection options displayed on the bread maker.

Available Programs:

1. Basic
2. White Bread
3. Whole Wheat
4. Yeast Cake
5. Buttermilk Bread
6. Gluten-Free
7. Super Rapid
8. Cake/Low Carb
9. Knead
10. Yeast Dough
11. Noodle Dough
12. Yogurt
13. Jam/Marmalade
14. Bake
15. Custom Program

SETUP

Before using your bread maker for the first time, follow these steps:

1. **Unpack:** Carefully remove the bread maker and all accessories from its packaging. Retain packaging for future storage or transport.
2. **Clean:** Wash the removable baking pan and kneading blades with warm, soapy water. Rinse thoroughly and dry completely. Wipe the interior and exterior of the appliance with a damp cloth.
3. **Assemble:** Insert the kneading blades onto the shafts at the bottom of the baking pan. Ensure they are securely in place.
4. **Place Baking Pan:** Insert the baking pan into the bread maker's main compartment. Press down firmly until it clicks into position.
5. **Connect Power:** Plug the power cord into a grounded electrical outlet. The display will light up, indicating the appliance is ready for use.



Image: Bread maker with its accessories, ready for initial setup.

OPERATING INSTRUCTIONS

Follow these steps to bake bread with your Unold BACKMEISTER Big:

1. **Add Ingredients:** Place ingredients into the baking pan in the order specified by your recipe, typically liquids first, then dry ingredients, and finally yeast. Ensure the yeast does not come into direct contact with liquids or salt initially.
2. **Select Program:** Close the lid. Press the **MENU** button repeatedly until your desired program number appears on the LCD display.
3. **Choose Loaf Size:** Press the **GEWICHT (WEIGHT)** button to select the appropriate loaf size (e.g., 1000g, 1250g, 1500g) according to your recipe.
4. **Set Browning Level:** Press the **BRÄUNUNG (BROWNING)** button to choose your preferred crust color: Light, Medium, or Dark.
5. **Set Delay Timer (Optional):** If you wish to delay the start of the baking process, use the **ZEIT- / ZEIT+ (TIME- / TIME+)** buttons to set the desired delay time, up to 15 hours. The displayed time includes the baking cycle duration.
6. **Start Baking:** Press the **START/STOP** button. The bread maker will begin its cycle. The display will show the remaining time.
7. **Keep-Warm Function:** After the baking cycle is complete, the bread maker will automatically switch to a keep-warm function for up to 60 minutes.
8. **Remove Bread:** Once the program is finished and the keep-warm cycle ends (or you manually stop it), unplug the appliance. Carefully remove the hot baking pan using oven mitts. Invert the

pan to release the bread. If kneading blades remain in the bread, use the provided removal tool.



Image: Freshly baked bread in the ceramic non-stick baking pan.

Power Failure Protection:

In case of a power outage, the bread maker has a memory function that allows it to resume operation within approximately 15 minutes once power is restored. If the power outage exceeds 15 minutes, the program will reset, and you will need to restart the process.

MAINTENANCE AND CLEANING

Proper cleaning and maintenance ensure the longevity and optimal performance of your bread maker.

- **Before Cleaning:** Always unplug the appliance and allow it to cool completely before cleaning any part.
- **Baking Pan and Kneading Blades:** Remove the baking pan and kneading blades. Wash them with warm, soapy water. The ceramic non-stick coating is delicate; avoid abrasive sponges or harsh detergents. Rinse thoroughly and dry completely.
- **Appliance Exterior:** Wipe the exterior of the bread maker with a soft, damp cloth. Do not use abrasive cleaners, solvents, or chemical cleaning agents.
- **Interior:** Wipe the interior of the baking chamber with a damp cloth to remove any crumbs or residue.
- **Important:** Do not immerse the appliance base, power cord, or plug in water or any other liquid. These parts are not dishwasher safe.



Image: Interior view of the bread maker, highlighting the removable baking pan and kneading blades.

TROUBLESHOOTING

If you encounter issues with your bread maker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Bread does not rise	Expired yeast, incorrect water temperature, wrong ingredient proportions, incorrect program selected.	Check yeast freshness, use lukewarm water, measure ingredients precisely, ensure correct program for recipe.
Uneven crust or baking	Ingredients not evenly distributed, too much moisture.	Ensure ingredients are added correctly. Adjust liquid slightly if bread is consistently too moist.
Machine not starting	Not plugged in, baking pan not correctly inserted, START/STOP button not pressed firmly.	Check power connection, ensure baking pan is locked in place, press START/STOP button firmly.
Kneading blades stuck in bread	Dough residue hardened around blades.	Allow bread to cool slightly, then use the provided kneading hook removal tool. For stubborn blades, soak the pan in warm water.

SPECIFICATIONS

- **Model Number:** 68525
- **Brand:** Unold
- **Capacity:** Up to 1500g bread weight
- **Programs:** 15 (including gluten-free, jam, cake, noodle dough, yogurt, custom)
- **Power:** 850 W
- **Voltage:** 220-240 V~, 50/60 Hz
- **Dimensions (D x W x H):** 41.9 cm x 25 cm x 30 cm
- **Material:** Ceramic non-stick coating for baking pan and kneading blades
- **Display:** User-friendly, illuminated LCD display
- **Features:** 2 large viewing windows, time selection (up to 15 hours), keep-warm function (up to 60 minutes), 3 browning levels, power failure protection (approx. 15 minutes), BPA-free.
- **Color:** Black
- **Origin:** China



Image: Dimensions of the Unold BACKMEISTER Big bread maker.

WARRANTY AND SUPPORT

Your Unold BACKMEISTER Big bread maker is designed for reliability and performance.

- **EU Spare Parts Availability:** Spare parts for this appliance are available for a period of 2 years within the EU.
- **Customer Support:** For any questions, technical assistance, or warranty claims, please contact Unold customer support. Refer to the official Unold website or your purchase documentation for specific contact details.