

[Manuals.plus](#) /

› [Remax](#) /

› Remax Bluetooth Speaker with FM Radio, Alarm Clock User Manual

Remax

Remax Bluetooth Speaker with FM Radio, Alarm Clock

USER MANUAL

1. Introduction

Thank you for purchasing the Remax Bluetooth Speaker with FM Radio and Alarm Clock. This device combines multiple functionalities into a compact and stylish unit, offering high-quality audio, timekeeping, and alarm features. Please read this manual carefully before using the product to ensure proper operation and to maximize its lifespan.

2. Important Safety Information

- Do not expose the device to water, moisture, or extreme temperatures.
- Avoid dropping or subjecting the device to strong impacts.
- Do not attempt to disassemble or repair the device yourself. Refer all servicing to qualified personnel.
- Use only the provided power adapter or a compatible one to prevent damage.
- Keep the device away from heat sources and direct sunlight.
- Clean the device with a soft, dry cloth. Do not use abrasive cleaners or solvents.

3. Package Contents

Please check the package for the following items:

- Remax Bluetooth Speaker with FM Radio, Alarm Clock
- USB Charging Cable
- AUX Audio Cable
- User Manual (this document)

4. Product Layout and Components



Figure 4.1: Front view of the Remax Bluetooth Speaker, showing the large digital time display and top-mounted control buttons.



Figure 4.2: Angled view of the Remax Bluetooth Speaker, providing a clearer look at the top control buttons and the side rotary knob.

Control Panel Overview:

- **Digital Display:** Shows time, mode indicators (Bluetooth, FM, AUX, USB/TF), alarm status, and battery level.
- **Power Button:** Press and hold to turn on/off. Short press to switch modes.
- **Play/Pause Button:** Controls playback in Bluetooth/USB/TF modes.
- **Previous/Next Track Buttons:** Skips tracks in Bluetooth/USB/TF modes. Adjusts FM stations.
- **Mode Button (M):** Cycles through Bluetooth, FM Radio, AUX, USB, and TF Card modes.
- **Alarm Button:** Enters alarm setting mode.
- **Rotary Knob:** Adjusts volume. Press to confirm selections in setting modes.

Rear/Side Ports:

- **USB Port:** For playing audio from USB flash drives.
- **TF Card Slot:** For playing audio from MicroSD (TF) cards.
- **AUX Input:** For connecting external audio devices via 3.5mm audio cable.

- **DC 5V Input:** For charging the device.

5. Setup

5.1 Initial Charging

Before first use, fully charge the speaker. Connect the USB charging cable to the DC 5V input port on the speaker and the other end to a USB power adapter (not included) or a computer's USB port. The charging indicator on the display will show charging status and turn off when fully charged.

5.2 Setting the Time

1. Press and hold the **Power Button** to turn on the speaker.
2. In clock mode, press and hold the **Rotary Knob** until the hour digits start blinking.
3. Rotate the **Rotary Knob** to adjust the hour. Press the knob to confirm and move to minute setting.
4. Rotate the **Rotary Knob** to adjust the minute. Press the knob to confirm.
5. The time is now set.

6. Operating Instructions

6.1 Bluetooth Mode

1. Turn on the speaker. Press the **Mode Button (M)** until 'Bluetooth' or a Bluetooth icon appears on the display. The speaker will enter pairing mode, indicated by a blinking Bluetooth icon.
2. Enable Bluetooth on your smartphone or audio device and search for 'REMAX [Model Name/Number]'.
3. Select the speaker from the list to pair. Once connected, the Bluetooth icon will stop blinking and a confirmation tone may sound.
4. You can now play audio from your device through the speaker. Use the **Play/Pause** and **Previous/Next Track** buttons on the speaker or your device to control playback.
5. Rotate the **Rotary Knob** to adjust the volume.

6.2 FM Radio Mode

1. Press the **Mode Button (M)** until 'FM' appears on the display.
2. For automatic station scanning, press and hold the **Play/Pause Button**. The speaker will scan and save available FM stations.
3. To manually switch between saved stations, use the **Previous/Next Track Buttons**.
4. Rotate the **Rotary Knob** to adjust the volume.

6.3 Setting the Alarm

1. Press the **Alarm Button**. The alarm time digits will start blinking.
2. Rotate the **Rotary Knob** to adjust the alarm hour. Press the knob to confirm and move to minute setting.
3. Rotate the **Rotary Knob** to adjust the alarm minute. Press the knob to confirm.
4. Press the **Alarm Button** again to activate or deactivate the alarm. An alarm icon will appear/disappear on the display.

5. When the alarm sounds, press any button to snooze (for 9 minutes) or press and hold the **Power Button** to turn off the alarm.

6.4 AUX Input Mode

1. Connect one end of the 3.5mm AUX audio cable to the AUX input port on the speaker and the other end to the audio output of your external device (e.g., MP3 player, computer).
2. Press the **Mode Button (M)** until 'AUX' appears on the display.
3. Play audio from your external device. Control playback from your device.
4. Rotate the **Rotary Knob** to adjust the volume.

6.5 USB/TF Card Playback

1. Insert a USB flash drive into the USB port or a TF (MicroSD) card into the TF card slot.
2. The speaker will automatically switch to USB or TF card mode and begin playing audio files. If not, press the **Mode Button (M)** until 'USB' or 'TF' appears.
3. Use the **Play/Pause** and **Previous/Next Track** buttons to control playback.
4. Rotate the **Rotary Knob** to adjust the volume.

7. Maintenance

- Keep the speaker clean by wiping it with a soft, dry cloth.
- Do not use liquid or aerosol cleaners directly on the device.
- Store the speaker in a cool, dry place when not in use for extended periods.
- Avoid placing heavy objects on top of the speaker.

8. Troubleshooting

Problem	Possible Cause	Solution
Speaker does not turn on.	Low battery or no power.	Charge the speaker fully. Ensure the power cable is securely connected.
No sound.	Volume too low; incorrect mode; device not connected.	Increase volume. Ensure correct mode (Bluetooth, AUX, FM, USB/TF). Re-pair Bluetooth device or check AUX cable connection.
Bluetooth pairing fails.	Speaker not in pairing mode; device too far; interference.	Ensure speaker is in Bluetooth pairing mode. Move devices closer. Turn off other Bluetooth devices.
FM radio reception is poor.	Weak signal; interference.	Reposition the speaker. Extend the antenna (if applicable, or use the charging cable as an auxiliary antenna).

9. Specifications

- **Brand:** Remax
- **Model ASIN:** B091D3WG9M
- **Color:** White (as per product data, though images show grey)
- **Special Features:** Alarm, FM Radio, Bluetooth Connectivity, AUX Input, USB Playback, TF Card Playback
- **Power Source:** Corded Electric
- **Usage Environment:** Indoor
- **Frame Material:** Plastic
- **Mounting Type:** Tabletop
- **First Available Date:** March 30, 2021

10. Warranty and Support

This Remax product is covered by a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions, including the warranty period and coverage details. For technical support, troubleshooting assistance, or warranty claims, please contact Remax customer service through their official website or the retailer from whom you purchased the product. Keep your purchase receipt as proof of purchase for warranty purposes.

© 2024 Remax. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B091D3WG9M>

More documents and user manuals: **<https://manuals.plus/>**