

[Manuals.plus](#) /

› [Sylvania](#) /

› Sylvania Rugged Waterproof Outdoor Bluetooth Speaker User Manual

Sylvania Rubber-Finish Bluetooth Speaker with Cloth Trim

Sylvania Rugged Waterproof Outdoor Bluetooth Speaker User Manual

MODEL: RUBBER-FINISH BLUETOOTH SPEAKER WITH CLOTH TRIM

Brand: Sylvania

Introduction

This manual provides detailed instructions for the safe and efficient use of your Sylvania Rugged Waterproof Outdoor Bluetooth Speaker. This portable speaker is designed for outdoor use, featuring a durable rubber finish and IPX4 waterproof rating, making it suitable for various environments. It offers wireless audio streaming via Bluetooth technology and includes large, easy-to-use control buttons.



Figure 1: Front view of the Sylvania Rugged Waterproof Outdoor Bluetooth Speaker, showcasing its design and carrying loop.

Package Contents

Please check the package for the following items:

- Sylvania Rugged Waterproof Outdoor Bluetooth Speaker
- USB Charging Cable

Product Overview

Familiarize yourself with the speaker's controls and features.

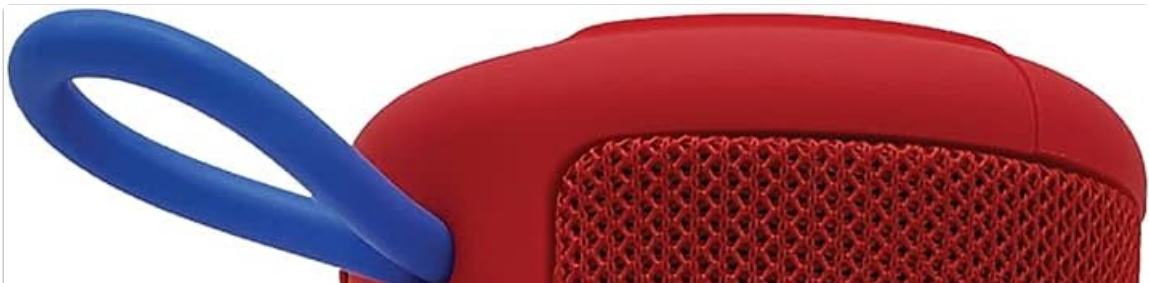




Figure 2: Side view of the speaker illustrating the control panel.

Control Buttons:

Power Button (O): Press and hold to turn the speaker ON or OFF.

Volume Up (+): Press to increase volume.

Volume Down (-): Press to decrease volume.

Play/Pause (▶ ||): Press to play or pause audio.

Previous Track (◀◀): Press to go to the previous track.

Next Track (▶▶): Press to go to the next track.

Bluetooth Button (B): Press to enter Bluetooth pairing mode or disconnect current device.

Other Features:

- **Carrying Hook:** For easy portability and attachment.
- **Rubber Finish:** Provides durability and a secure grip.
- **IPX4 Waterproof Rating:** Protects against splashing water from any direction.

Setup

1. Charging the Speaker

1. Connect the supplied USB charging cable to the speaker's charging port.
2. Connect the other end of the USB cable to a USB power adapter (not included) or a computer's USB port.
3. The charging indicator light will illuminate (color may vary) to show that the speaker is charging.
4. Once fully charged, the indicator light will change or turn off. Disconnect the charging cable.

2. Powering On/Off

- **To Power On:** Press and hold the **Power Button (O)** for approximately 3 seconds until you hear an audible prompt or see an indicator light.
- **To Power Off:** Press and hold the **Power Button (O)** for approximately 3 seconds until you hear an audible prompt or the indicator light turns off.

3. Bluetooth Pairing

1. Ensure the speaker is powered on and within close proximity to your Bluetooth-enabled device (e.g., smartphone, tablet).
2. The speaker will automatically enter pairing mode when powered on for the first time, or if no device is connected. The Bluetooth indicator light will flash rapidly. If already connected, press the **Bluetooth Button (B)** to enter pairing mode.
3. On your device, go to the Bluetooth settings and enable Bluetooth.
4. Search for available devices. You should see "Sylvania Speaker" or a similar name appear in the list.
5. Select the speaker from the list to initiate pairing.
6. Once successfully paired, the Bluetooth indicator light on the speaker will stop flashing and remain solid, and you will hear a confirmation tone.
7. The speaker will automatically attempt to reconnect to the last paired device when powered on.

Operating the Speaker

Playing Audio:

- After successful Bluetooth pairing, start playing audio from your connected device.
- Use the **Play/Pause** (▶ ||) button on the speaker to control playback.
- Press **Previous Track** (◀◀) or **Next Track** (▶▶) to navigate through your playlist.

Volume Control:

- Press the **Volume Up** (+) button to increase the audio volume.
- Press the **Volume Down** (-) button to decrease the audio volume.
- You can also adjust the volume directly from your connected Bluetooth device.

Water Resistance (IPX4):

The speaker has an IPX4 rating, meaning it is resistant to splashing water from any direction. It is suitable for use in light rain or near a pool, but it should **not** be submerged in water. Ensure the charging port cover is securely closed to maintain water resistance.

Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the speaker. Do not use abrasive cleaners, alcohol, or chemical solvents.
- **Storage:** When not in use for extended periods, store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, fully charge the speaker before first use and recharge it at least once every three months if not used regularly.
- **Water Resistance:** Always ensure the charging port cover is firmly sealed when using the speaker near water to maintain its IPX4 rating.

Troubleshooting

Problem	Solution
Speaker does not power on.	Ensure the speaker is charged. Connect it to a power source using the USB cable.
Cannot pair with Bluetooth device.	• Ensure the speaker is in pairing mode (Bluetooth indicator flashing). • Make sure Bluetooth is enabled on your device. • Move the speaker closer to your device. • Forget "Sylvania Speaker" from your device's Bluetooth list and try pairing again. • Restart both the speaker and your device.

Problem	Solution
No sound or low volume.	• Increase the volume on both the speaker and your connected device. • Ensure the speaker is properly paired and connected. • Check if the audio source on your device is playing.
Sound quality is poor or intermittent.	• Move the speaker closer to your device and away from obstacles. • Avoid interference from other wireless devices. • Ensure the speaker is fully charged.

Specifications



Figure 3: Speaker dimensions for reference.

Model Name: Rubber-Finish Bluetooth Speaker with Cloth Trim

Connectivity Technology: Bluetooth

Wireless Communication Technology: Bluetooth

Speaker Type: Outdoor, Portable

Waterproof Rating: IPX4 (Splashproof)

Power Source: Battery Powered (1 Lithium Ion battery, included)

Product Dimensions: 8.25 x 4.05 x 2.75 inches (20.96 x 10.29 x 6.99 cm)

Item Weight: 1.37 pounds (0.62 kg)

Compatible Devices: Smartphone, Tablet

Included Components: USB charging cable

Manufacturer: SYLVANIA

UPC: 058465816612

Warranty Information

This product comes with a Limited Warranty. Please refer to the warranty card included in your original packaging for specific terms and conditions, or contact customer support for details.

Support

For technical assistance, troubleshooting, or warranty inquiries, please contact Sylvania Customer Support. Contact information can typically be found on the manufacturer's website or on the product packaging.

Important Safety Information

WARNING: This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, visit www.P65Warnings.ca.gov.

- Do not expose the speaker to extreme temperatures or direct sunlight for prolonged periods.
- Do not disassemble, repair, or modify the speaker yourself. This may void the warranty and pose safety risks.
- Keep the speaker away from strong magnetic fields.
- Dispose of the speaker and its battery responsibly according to local regulations.