

ROMOSS PEA60

Romoss PEA60 60000mAh Power Bank User Manual

Model: PEA60

INTRODUCTION

Thank you for choosing the Romoss PEA60 60000mAh Power Bank. This high-capacity portable charger is designed to provide reliable power for your mobile devices on the go. Featuring multiple output ports and fast charging capabilities, it ensures your devices stay charged when you need them most. Please read this manual carefully before using the product to ensure safe and optimal performance.

SAFETY INFORMATION

To prevent damage to the product or injury to yourself or others, please observe the following safety precautions:

- Do not disassemble, repair, or modify the power bank.
- Do not expose the power bank to fire, high temperatures, or direct sunlight.
- Do not immerse the power bank in water or other liquids.
- Keep the power bank away from children.
- Do not use the power bank if it is damaged or appears swollen.
- Use only certified cables and adapters for charging the power bank and your devices.
- Avoid dropping or subjecting the power bank to strong impacts.

PACKAGE CONTENTS

Please check the package contents upon opening:

- Romoss PEA60 60000mAh Power Bank
- USB Charging Cable
- User Manual (this document)

PRODUCT OVERVIEW AND SETUP

Familiarize yourself with the components of your Romoss PEA60 Power Bank:



Figure 1: Front view of the Romoss PEA60 Power Bank, highlighting the digital display and sleek design.

- **Digital LED Display:** Shows the remaining battery percentage.
- **USB-A Output Ports (x3):** For charging various devices.
- **USB-C Input/Output Port:** Supports both charging the power bank and charging devices.
- **Micro USB Input Port:** For charging the power bank.
- **Lightning Input Port:** For charging the power bank.
- **Power Button:** Press once to check battery level or activate charging.

OPERATING INSTRUCTIONS

Charging the Power Bank

Before first use, fully charge the power bank. It is recommended to fully charge it every 3 months if not in regular use.

1. Connect the provided USB charging cable (or your own USB-C, Micro USB, or Lightning cable) to one of the input ports (USB-C, Micro USB, or Lightning) on the power bank.
2. Connect the other end of the cable to a USB wall charger (not included) or a computer's USB port.
3. The digital LED display will show the charging progress, indicating the battery percentage.
4. The display will show "100" when fully charged.

Charging Your Devices

The Romoss PEA60 can charge multiple devices simultaneously.



Figure 2: The power bank connected to and charging multiple smartphones and a gaming console, demonstrating its multi-device charging capability.

1. Connect your device's charging cable to one of the output ports on the power bank (USB-A or USB-C).
2. Connect the other end of the cable to your device.
3. The power bank will automatically begin charging your device. If not, press the power button once to activate charging.
4. The digital LED display will show the power bank's remaining battery level.

Support PD 3.0 18W Quick Charge

Charging for iPhone11 to 50% power,
only need about 30 minutes.



Charging iPhone11

5V 2A Power Bank



Time: 30 Minutes

ROMOSS PEA57 Power Bank



Time: 30 Minutes

Figure 3: Visual representation of the power bank's PD 3.0 18W Quick Charge feature, showing faster charging times for compatible devices like an iPhone 11.

LED Display Indicator

The digital LED display shows the exact percentage of remaining battery power (0-100%). When charging the power bank, the number will flash, indicating charging in progress. When charging a device, the number will remain steady, showing the current power bank level.

MAINTENANCE

Proper maintenance ensures the longevity of your power bank:

- **Cleaning:** Wipe the surface with a soft, dry cloth. Do not use harsh chemicals or abrasive materials.
- **Storage:** Store the power bank in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** For optimal battery life, avoid fully discharging the power bank frequently. Recharge it when the battery level is low. If storing for extended periods, charge it to about 50-70% every three months.

TROUBLESHOOTING

If you encounter issues with your power bank, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Power bank not charging	Cable issue, charger issue, or power bank fault.	Try a different charging cable and wall adapter. Ensure connections are secure.
Device not charging from power bank	Power bank low on charge, cable issue, or device issue.	Ensure power bank is charged. Try a different charging cable. Press the power button on the power bank.
Slow charging	Using a non-fast charging port/cable, or device not supporting fast charge.	Ensure you are using a fast-charging compatible port (e.g., USB-C PD) and cable. Check if your device supports fast charging.
LED display not working	Power bank is completely discharged or a malfunction.	Try charging the power bank for a few hours. If the issue persists, contact customer support.

SPECIFICATIONS

Detailed technical specifications for the Romoss PEA60 Power Bank:

Feature	Detail
Model Name	PEA60
Battery Capacity	60000mAh
Special Features	Fast Charging, LED Indicator
Color	Black
Voltage	5 Volts
Recommended Use	Smartphone
Power Source	Corded Electric
Item Weight	1640 Grams

WARRANTY AND SUPPORT

Romoss products are manufactured to the highest quality standards. For warranty information and customer support, please refer to the warranty card included with your purchase or visit the official Romoss website. If you experience any issues not covered in this manual, please contact our customer service team for assistance.

© 2023 ROMOSS. All rights reserved.