

MEGAWISE CX-817

MEGAWISE 1.8L Healthy Electric Kettle User Manual

Model: CX-817

1. IMPORTANT SAFEGUARDS

Please read all instructions carefully before using your MEGAWISE Electric Kettle. Keep this manual for future reference.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or power base in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Use the kettle only for its intended purpose of boiling water.
- Always ensure the lid is securely closed during operation.
- Place the kettle on a firm, flat, heat-resistant surface.

2. PRODUCT OVERVIEW

The MEGAWISE 1.8L Healthy Electric Kettle is designed for efficient and safe water boiling. It features a durable borosilicate glass body, a food-grade stainless steel base, and an ergonomic handle. The kettle includes automatic shut-off and boil-dry protection for enhanced safety.



Image: The MEGAWISE 1.8L Healthy Electric Kettle, showcasing its clear glass body and stainless steel base.

Effortless Cleaning

The wide mouth makes it easy to keep your kettle clean and spotless.



*Difficult to clean internally

Image: The kettle highlighting its auto shut-off and boil-dry protection features, ensuring safe operation.

3. SETUP

3.1 Unpacking

Carefully remove the kettle and all accessories from the packaging. Retain packaging for future storage or transport.

3.2 First Use & Cleaning

1. Before first use, fill the kettle with clean water to the MAX line.
2. Boil the water (refer to Operating Instructions).
3. Discard the boiled water.
4. Repeat this process 2-3 times to remove any manufacturing residues.
5. Wipe the exterior with a soft, damp cloth.

Auto-Shut-Off Features and Boil-Dry Protection

Automatically Shut Off within
20s of Water Boiling

Automatically Shut Down within
20s of Dry Burning



Image: The kettle with water boiling, illustrating the quick boil feature and water level markings.

4. OPERATING INSTRUCTIONS

4.1 Filling the Kettle

Press the lid release button on the handle to open the lid. Fill the kettle with the desired amount of fresh water, ensuring it is between the MIN (0.5L) and MAX (1.8L) marks. Close the lid securely.

4.2 Placing on Power Base

Place the kettle firmly onto its cordless 360° rotatable power base. Ensure the kettle is properly seated.

4.3 Boiling Water

Flip the ON/OFF switch located on the handle downwards. The blue LED indicator lights around the base will illuminate, indicating that the kettle is heating. The kettle will automatically turn off once the water reaches a rolling boil, and the blue LED lights will extinguish.

4.4 Auto Shut-Off and Boil-Dry Protection

The kettle is equipped with an advanced thermostat that automatically shuts off the heating element

when the water boils. Additionally, the boil-dry protection feature will automatically turn off the kettle if it is accidentally switched on without water or if the water level is too low, preventing damage to the appliance.

5. MAINTENANCE AND CLEANING

Regular cleaning helps maintain the performance and longevity of your kettle.

5.1 Regular Cleaning

1. Always unplug the kettle from the power outlet and allow it to cool completely before cleaning.
2. Wipe the exterior of the kettle with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
3. The wide mouth design allows for effortless cleaning of the interior. Use a soft sponge or cloth with mild detergent to clean the inside. Rinse thoroughly with clean water.
4. Do not immerse the kettle body or power base in water or any other liquid.



Image: A hand cleaning the interior of the kettle, demonstrating the wide opening for easy access.

5.2 Descaling

Over time, mineral deposits (limescale) may build up inside the kettle, especially in hard water areas. Descale your kettle regularly to ensure optimal performance.

- Fill the kettle with 1 part white vinegar and 2 parts water.
- Bring the mixture to a boil and let it stand for 30 minutes.
- Discard the solution and rinse the kettle thoroughly with fresh water several times.
- For stubborn deposits, repeat the process or use a commercial descaling solution following its instructions.

6. TROUBLESHOOTING

- **Kettle Not Turning On:** Ensure the power base is plugged into a working outlet and the kettle is correctly seated on the base. Check if the ON/OFF switch is in the 'ON' position.
- **Water Not Boiling:** Verify that the water level is above the MIN mark and below the MAX mark. Ensure the lid is closed properly.
- **Unusual Odor or Taste:** This can occur during initial uses. Perform the first-use cleaning steps (boiling and discarding water) multiple times. Ensure the kettle is clean and free of residues.
- **Kettle Shuts Off Prematurely:** This may indicate activation of the boil-dry protection if water levels are too low, or a buildup of limescale. Descale the kettle if necessary.

7. PRODUCT SPECIFICATIONS

Feature	Specification
Brand	MEGAWISE
Model Name	CX-807
Model Number	CX-817
Capacity	1.8 Liters
Material	Borosilicate Glass, 304 Stainless Steel
Voltage	120 Volts
Item Dimensions (L x W x H)	7.09"L x 7.09"W x 9.84"H
Item Weight	1.28 Kilograms
Special Feature	Rotatable Base, Auto Shut-Off, Boil-Dry Protection
Included Components	Body and base

Healthier and Safer Design in Every Detail

MEGAWISE
Food-Grade Material




✓ Glass V-shaped Spout



✓ Stainless Steel Inner Lid

VS

Others
All-Plastic Material

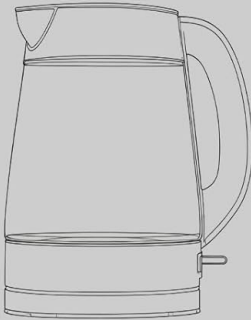

✗ Plastic Spout



✗ Plastic inner lid

Image: A diagram illustrating the dimensions and capacity of the MEGAWISE electric kettle.

Convenient Design Makes Brewing Easy



Image: Detailed view of kettle features such as the one-touch lid release, 360° rotatable base, food-grade materials, and LED indicator lights.

8. WARRANTY AND SUPPORT

MEGAWISE is committed to customer satisfaction. For any questions or support needs, please reach

out to our customer service team.

- **Customer Support:** We offer 24/7 live chat support for any inquiries.
- **Return Policy:** This product is eligible for a return or replacement within 30 days of receipt, handled by Amazon.