

[Manuals.plus](#) /

> [Beko](#) /

> Beko HTE7726XA-IT Slim Washer Dryer User Manual

Beko HTE7726XA-IT

User Manual for Beko HTE7726XA-IT Slim Washer Dryer

Model: HTE7726XA-IT

[Introduction](#)

[Safety](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty &
Support](#)

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Beko HTE7726XA-IT Slim Washer Dryer. Please read these instructions carefully before using the appliance and keep them for future reference. This appliance combines washing and drying functions in a single unit, designed for energy, time, and space efficiency.



Image: Front view of the Beko HTE7726XA-IT Slim Washer Dryer. The appliance is white with a black door and control panel.

SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury

to persons. This appliance is intended for household use only.

- Ensure the appliance is properly earthed.
- Do not allow children to play with or operate the appliance.
- Keep packaging materials out of reach of children.
- Do not install the appliance on a carpeted floor as this may obstruct ventilation.
- Never force the door open.
- Unplug the appliance before cleaning or maintenance.

SETUP AND INSTALLATION

Unpacking

Carefully remove all packaging materials. Inspect the appliance for any damage. Retain packaging for future transport if necessary.

Removing Transit Bolts

Before operating the appliance, all transit bolts located at the rear of the machine must be removed. Failure to do so will cause damage to the appliance.

1. Locate the transit bolts at the back of the washer dryer.
2. Using an appropriate wrench, loosen and remove all bolts.
3. Insert the plastic caps provided into the holes.

Positioning and Leveling

Place the appliance on a firm, level surface. Adjust the feet to ensure the machine is stable and level. Proper leveling prevents excessive vibration and noise during operation.



Image: Diagram illustrating the height (84 cm), width (60 cm), and depth (50 cm) of the Beko HTE7726XA-IT washer dryer.

Water and Electrical Connection

- Connect the water inlet hose to a cold water tap. Ensure connections are tight to prevent leaks.
- Position the drain hose into a standpipe or over the edge of a sink, ensuring it is securely fixed.
- Plug the power cord into a grounded electrical outlet.

OPERATING INSTRUCTIONS

Control Panel Overview

The control panel features a program selection knob, a digital display, and various function buttons for customizing cycles.



Image: Angled view of the Beko HTE7726XA-IT Slim Washer Dryer, highlighting the control panel with its program dial and digital display.

Loading Laundry

- Open the door and load items loosely into the drum. Do not overload the machine.
- The maximum washing capacity is 7 kg, and drying capacity is 4 kg.
- Close the door firmly until it clicks.



Image: The door of the Beko HTE7726XA-IT Slim Washer Dryer is open, revealing the stainless steel drum inside, ready for loading laundry.

Adding Detergent and Softener

Pull out the detergent drawer and add the appropriate amount of detergent to the main wash compartment and fabric softener to its designated compartment. Refer to detergent packaging for dosage recommendations.

Program Selection

Turn the program selection knob to choose one of the 15 available programs. The digital display will show the estimated program duration.

Key Programs:

- **Wash&Wear:** For quickly washing and drying 1 kg of laundry in approximately 1 hour.
- **Hygiene+:** Combines sensitive temperature controls with additional cycles to remove allergens and bacteria.

- **SteamCure:** Utilizes steam to reduce wrinkles and refresh clothes.
- **DrumClean+:** A self-cleaning program for the drum, using hot air to eliminate unpleasant odors and thoroughly clean the drum.
- **Xpress Super Short 14 min:** A quick wash program for small loads of lightly soiled items.



Image: An illustration depicting the SteamCure function, showing steam treating clothes inside a drum, indicating wrinkle reduction and refreshing capabilities.

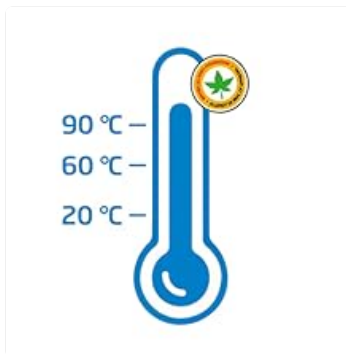


Image: A thermometer graphic indicating various temperature levels (20°C, 60°C, 90°C) associated with the Hygiene+ program, suggesting effective sanitation.



Image: An illustration of the DrumClean+ program, showing water splashing inside the drum, symbolizing a thorough cleaning cycle.



Image: A graphic displaying a clock face with a segment highlighted for 14 minutes, representing the Xpress Super Short program's quick cycle time.

Starting a Cycle

Press the Start/Pause button to begin the selected program. The appliance will automatically proceed through the washing and drying phases.

ProSmart Inverter Motor

The appliance is equipped with a ProSmart Inverter Motor, which offers high energy efficiency, reduced noise levels, and extended durability compared to conventional motors.



Image: A detailed view of the ProSmart Inverter Motor, showcasing its internal components and robust construction, indicative of its efficiency and quiet operation.

MAINTENANCE AND CARE

Cleaning the Detergent Drawer

Regularly clean the detergent drawer to prevent residue buildup. Remove the drawer, rinse it under running water, and clean any accumulated detergent or softener. Reinsert the drawer.

Cleaning the Door Seal

Wipe the door seal after each wash to remove lint and moisture, preventing mold and unpleasant odors.

Cleaning the Pump Filter

The pump filter should be cleaned periodically to ensure proper drainage. Refer to the diagram below for location and procedure.

1. Open the filter cover at the bottom front of the appliance.
2. Place a shallow container under the filter to catch any residual water.
3. Turn the filter counter-clockwise and carefully pull it out.
4. Clean any lint, buttons, or foreign objects from the filter.
5. Rinse the filter under running water and reinsert it, turning clockwise until secure.
6. Close the filter cover.

Drum Cleaning

Utilize the **DrumClean+** program regularly to maintain drum hygiene and eliminate odors. This program uses hot air technology for effective cleaning.

TROUBLESHOOTING

Before contacting service, please check the following common issues and solutions:

Problem	Possible Cause	Solution
Appliance does not start	Power cord not plugged in; door not closed properly; program not selected.	Check power connection; ensure door is latched; select a program and press Start.
Water not entering the appliance	Water tap closed; water inlet hose kinked; water filter clogged.	Open water tap; straighten hose; clean water inlet filter.
Appliance vibrates excessively	Transit bolts not removed; appliance not level; load unbalanced.	Remove transit bolts; adjust leveling feet; redistribute laundry in the drum.
Poor washing results	Incorrect detergent dosage; overloaded drum; wrong program selected.	Adjust detergent amount; reduce load size; select appropriate program.
Clothes not drying properly	Overloaded drum; incorrect drying program; lint filter clogged.	Reduce load size; select appropriate drying program; clean the lint filter.

TECHNICAL SPECIFICATIONS

- **Model:** HTE7726XA-IT
- **Brand:** Beko
- **Type:** Slim Front-Loading Washer Dryer
- **Washing Capacity:** 7 kg
- **Drying Capacity:** 4 kg
- **Maximum Spin Speed:** 1400 RPM
- **Number of Programs:** 15
- **Energy Efficiency Class (Wash):** D (New EU Label)
- **Energy Efficiency Class (Wash & Dry):** D (New EU Label)
- **Energy Consumption (Wash, per 100 cycles):** 69 kWh
- **Energy Consumption (Wash & Dry, per 100 cycles):** 216 kWh
- **Dimensions (H x W x D):** 84 cm x 60 cm x 50 cm
- **Weight:** 64 kg
- **Voltage:** 220 Volt
- **Drum Material:** Stainless Steel
- **Control Type:** Touch
- **Special Features:** SteamCure, ProSmart Inverter Motor, Hygiene+, DrumClean+, Wash&Wear
- **Included Components:** Power cord



Image: The energy label for the Beko HTE7726XA-IT washer dryer, showing an energy efficiency class of D for both washing and combined washing/drying cycles, with energy consumption figures and capacities.

WARRANTY AND SUPPORT

This appliance comes with a standard manufacturer's warranty. For specific details regarding warranty coverage and duration, please refer to the warranty card included with your product or visit the official Beko website.

Customer Support

For technical assistance, spare parts, or service requests, please contact Beko customer support. Have your model number (HTE7726XA-IT) and serial number ready when contacting support.

You can find more information and support resources on the official Beko website www.beko.com