

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [VOICEGIFT](#) /

› [VoiceGift MINI-ME 60-Second Multi-Message Voice Recorder Instruction Manual](#)

VOICEGIFT MINI-ME

VoiceGift MINI-ME 60-Second Multi-Message Voice Recorder Instruction Manual

INTRODUCTION

This manual provides comprehensive instructions for the VoiceGift MINI-ME 60-Second Multi-Message Voice Recorder. It covers product overview, setup, operation, maintenance, and troubleshooting to ensure optimal use of your device. The VoiceGift MINI-ME allows you to record and play back up to 60 seconds of personalized audio, making it suitable for embedding in various items such as plush toys, pillows, and crafts.

PRODUCT OVERVIEW

The VoiceGift MINI-ME is a compact voice recorder designed for easy integration into soft items. It features a simple interface for recording and playback, offering a 60-second recording capacity and the ability to replay messages up to 500 times.



Simple and Easy to Use



Image: View of the VoiceGift MINI-ME, highlighting the speaker, microphone, selector switch, and record/playback button.

Key Features:

- 60-second recording capacity.
- Multiple message recording capability.
- High-quality playback.
- Replay up to 500 times.
- Compact design for easy embedding.

SETUP

Battery Installation:

The VoiceGift MINI-ME recorder comes with 3 LR44 alkaline batteries pre-installed. No user battery installation is required for initial use. The batteries are not designed to be user-replaceable. When the battery life is depleted, the unit is not rechargeable or serviceable for battery replacement.

OPERATING INSTRUCTIONS

The VoiceGift MINI-ME recorder is designed for straightforward operation. Follow these steps to record and play back your messages:



Animate Everything with a Little Extra Love...

Keep babies and toddlers entertained with sound
by sewing it into an activity blanket.

Image: Step-by-step guide for recording and embedding the VoiceGift MINI-ME.

1. Recording a Message:

- Locate the selector switch on the back of the recorder.
- Move the selector switch to the 'REC' (Record) mode.
- Press and hold the 'Record/Playback' button (often labeled with a microphone icon or 'MIC').
- Speak clearly into the microphone, which is typically a small hole near the record button. You have up to 60 seconds of recording time.
- Release the 'Record/Playback' button when you are finished recording. The message is now saved.

2. Playing Back a Message:

- Move the selector switch to the 'PLAY' mode.
- Press the 'Record/Playback' button once to play your recorded message.
- To replay the message, press the button again. The device supports up to 500 replays.

3. Re-recording a Message:

- To record a new message, simply repeat the steps for 'Recording a Message'. The new recording

will overwrite the previous one.

4. Embedding the Recorder:

- Once your message is recorded, you can embed the MINI-ME into your desired item (e.g., plush toy, pillow). Ensure the item is soft enough to allow the sound to project clearly.
- Secure the recorder inside the item, typically by stitching it into place, to prevent it from shifting.



Image: Illustrates the process of embedding the voice recorder into a plush toy.



Image: Crafting materials with the voice recorders, demonstrating their application in personalized gifts.

MAINTENANCE

The VoiceGift MINI-ME recorder requires minimal maintenance:

- Keep the device dry and away from moisture.
- Avoid extreme temperatures.
- Clean the exterior with a soft, dry cloth if necessary. Do not use liquid cleaners.
- Do not attempt to open the device, as it contains no user-serviceable parts and opening it may damage

the unit.

TROUBLESHOOTING

If you encounter issues with your VoiceGift MINI-ME recorder, consider the following:

| Problem | Possible Cause | Solution |
|------------------------------------|---|--|
| No sound during playback. | Selector switch in 'OFF' or 'REC' mode. Batteries depleted. | Ensure switch is in 'PLAY' mode. If batteries are depleted, the unit cannot be recharged or have batteries replaced. |
| Recording is unclear or distorted. | Microphone too far away. Background noise. | Speak closer to the microphone. Record in a quiet environment. |
| Cannot record new message. | Selector switch not in 'REC' mode. | Move the selector switch to 'REC' mode before pressing and holding the record button. |

SPECIFICATIONS

- Brand:** VOICEGIFT
- Model Number:** MINI-ME
- Recording Capacity:** 60 seconds
- Playback Capacity:** Up to 500 times
- Battery Type:** 3 x LR44 Alkaline (included, non-replaceable)
- Dimensions:** Approximately 5.1 cm (2 inches) diameter, 1.75 inches screen size (referring to speaker grille area), 0.75 inches height.
- Interface:** Integrated flash memory
- Microphone:** Integrated
- Audio Format:** AIFF

SAFETY WARNINGS

This product is not applicable for specific safety warnings beyond general electronic device handling. Please observe the following general safety guidelines:

- Keep out of reach of small children if not embedded securely within a toy, due to small parts (batteries).
- Do not expose to water or other liquids.
- Do not dispose of batteries in fire; they may explode.
- Dispose of the device according to local electronic waste regulations.

WARRANTY AND SUPPORT

For product support or inquiries, please contact the manufacturer, Voice Express Corp. Information regarding specific warranty periods or repair services is not provided in this manual. Please refer to the product packaging or the seller's website for any available warranty details.

