

**Bella Pro Series B091G3H2ZP**

# Bella Pro Series 2lb. Bread Maker Black Instruction Manual

Model: B091G3H2ZP

## 1. INTRODUCTION

Thank you for choosing the Bella Pro Series 2lb. Bread Maker. This appliance is designed to simplify the process of baking fresh, homemade bread with minimal effort. Please read this manual thoroughly before operation to ensure safe and efficient use of your bread maker.

## 2. IMPORTANT SAFETY INFORMATION

- Always unplug the appliance from the power outlet when not in use, before cleaning, or if left unattended.
- Do not immerse the appliance, cord, or plug in water or any other liquid.
- Close supervision is necessary when the appliance is used by or near children.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Use only accessories recommended by the manufacturer.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, turn any control to 'off', then remove the plug from the wall outlet.

## 3. PRODUCT OVERVIEW

The Bella Pro Series 2lb. Bread Maker features a sleek black design with an intuitive control panel. It includes a removable bread pan and kneading blade for easy use and cleaning.



Figure 1: Front view of the Bella Pro Series 2lb. Bread Maker in Black. The appliance features a black exterior with a control panel on the top front.



Figure 2: Top-down view of the control panel and bread pan. The control panel displays program numbers, time, loaf size, and crust color settings. The bread pan is visible inside the unit.

### Control Panel Features:

- **MENU Button:** Selects from 15 pre-programmed settings.
- **WEIGHT Button:** Adjusts loaf size (1lb, 1.5lb, 2lb).
- **TIMER +/- Buttons:** Sets delay timer for delayed baking.
- **COLOR SETTING Button:** Chooses crust darkness (Light, Medium, Dark).
- **START/PAUSE/STOP Button:** Initiates, pauses, or cancels a program.
- **LCD Display:** Shows program number, time remaining, loaf size, and crust color.

## 4. SETUP

1. **Unpack:** Carefully remove the bread maker and all accessories from the packaging. Retain packaging for future storage or transport.
2. **Initial Cleaning:** Before first use, wash the bread pan and kneading blade with warm, soapy water. Rinse thoroughly and dry all parts. Wipe the exterior of the appliance with a damp cloth.
3. **Install Kneading Blade:** Insert the kneading blade onto the shaft at the bottom of the bread pan. Ensure it is securely in place.
4. **Place Bread Pan:** Insert the bread pan into the main unit, aligning it with the base. Turn the pan clockwise until it locks into position.

## 5. OPERATING INSTRUCTIONS

### Adding Ingredients:

Always add ingredients in the order specified in your recipe. Typically, liquids are added first, followed by dry ingredients, with yeast placed last on top of the dry ingredients, ensuring it does not come into direct contact with liquids until mixing begins. This is especially important for delayed start functions.

### Program Selection:

1. **Select Program:** Press the **MENU** button repeatedly until the desired program number appears on the LCD display. (Refer to Section 6 for program details).
2. **Choose Loaf Size:** Press the **WEIGHT** button to select your desired loaf size (1lb, 1.5lb, or 2lb).
3. **Select Crust Color:** Press the **COLOR SETTING** button to choose between Light, Medium, or Dark crust.
4. **Start Baking:** Press the **START/PAUSE/STOP** button to begin the baking process. The display will show the remaining time.

### Delayed Start Function:

To use the delayed start function, set your program, loaf size, and crust color. Then, use the **TIMER +/-** buttons to adjust the delay time. The total time displayed includes both the delay time and the baking time. Press **START/PAUSE/STOP** to activate the delay timer. The bread maker will start automatically after the set delay.

### Removing Bread:

Once the program is complete, the bread maker may enter a 'Keep Warm' cycle. Unplug the appliance. Using oven mitts, carefully remove the bread pan by turning it counter-clockwise and lifting it out. Allow the bread to cool in the pan for 5-10 minutes before inverting it onto a wire rack to cool completely. Use the kneading blade hook to remove the blade if it remains in the bread.

#### Helpful Video: Simple bread maker but has all you need!

Your browser does not support the video tag.

This video demonstrates the basic operation of a bread maker, including adding ingredients, selecting a program, and removing the finished bread. It highlights the simplicity of the process for making fresh bread.

## 6. PROGRAMS AND RECIPES

The Bella Pro Series 2lb. Bread Maker offers 15 versatile programs to cater to various baking needs.

Always refer to the included recipe booklet for precise ingredient measurements and instructions for each program.

### Available Programs:

1. Basic
2. French
3. Whole Wheat
4. Quick
5. Sweet
6. Gluten Free
7. Rye
8. Rice Bread
9. Sandwich
10. Cake
11. Whole Meal Dough
12. Pizza Dough
13. Leaven Dough
14. Knead
15. Mix
16. Jam
17. Yogurt
18. Defrost
19. Cook

The instruction manual provides detailed recipes for each program, including ingredient quantities for 1lb, 1.5lb, and 2lb loaves. It also includes guidance on ingredient order and consistency of the dough.

## 7. MAINTENANCE AND CLEANING

---

Proper maintenance ensures the longevity and optimal performance of your bread maker.

### Cleaning:

- Always unplug the appliance and allow it to cool completely before cleaning.
- **Bread Pan and Kneading Blade:** Remove the bread pan from the unit. Detach the kneading blade from the shaft. Wash both with warm, soapy water and a soft sponge. Avoid abrasive cleaners or scouring pads. Rinse thoroughly and dry completely.
- **Exterior:** Wipe the exterior of the bread maker with a soft, damp cloth. Do not use harsh chemicals or abrasive materials.
- **Interior:** Gently wipe the interior of the baking chamber with a damp cloth. Ensure no crumbs or residue remain.

### Storage:

Store the bread maker in a cool, dry place. Ensure all parts are clean and dry before storage. Keep the appliance covered to protect it from dust.

## 8. TROUBLESHOOTING

---

If you encounter any issues with your bread maker, please refer to the following common troubleshooting tips. For more detailed solutions, consult the full instruction manual.

- **Bread Not Rising:** Ensure yeast is fresh and active. Check water temperature (too hot or too cold can kill yeast). Verify correct ingredient measurements.
- **Dense Bread:** Too much flour or not enough liquid can result in dense bread. Ensure accurate measurements and proper ingredient order.
- **Bread Sticks to Pan:** Ensure the bread pan is properly greased (if required by recipe) and allowed to cool sufficiently before removal.
- **Machine Not Starting:** Check if the power cord is securely plugged in. Ensure the bread pan is correctly locked into place.
- **Unusual Noises:** This may indicate the kneading blade is not properly installed or there's an issue with the motor. Stop the machine and check components.

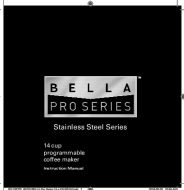
## 9. SPECIFICATIONS


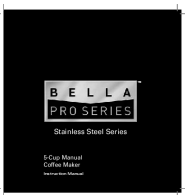

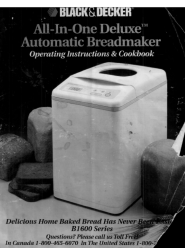

- **Brand:** Bella Pro Series
- **Model:** B091G3H2ZP
- **Color:** Black
- **Loaf Sizes:** 1lb, 1.5lb, 2lb
- **Number of Programs:** 15
- **Item Weight:** 8.93 pounds
- **Package Dimensions:** 13.5 x 13.25 x 10.4 inches
- **Product Care Instructions:** Wipe with Dry Cloth
- **UPC:** 829486901201
- **Date First Available:** March 31, 2021

## 10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the Bella Pro Series official website. Keep your purchase receipt as proof of purchase.

### Related Documents - B091G3H2ZP

	<p><a href="#">BELLA Pro Series 14-Cup Programmable Coffee Maker Instruction Manual</a></p> <p>Comprehensive instruction manual for the BELLA Pro Series 14-Cup Stainless Steel Programmable Coffee Maker. Learn about setup, operation, cleaning, maintenance, and warranty information.</p>
---	---

	<p><a href="#">Bella Pro Dual Brew Single Serve Coffee Maker: Instruction Manual &amp; User Guide</a></p> <p>Comprehensive instruction manual for the Bella Pro Series Dual Brew Single Serve Coffee Maker (Model 90192), covering safety, operation, cleaning, maintenance, and warranty information. Learn how to use your coffee machine effectively and safely.</p>
	<p><a href="#">BELLA Pro Series 5-Cup Stainless Steel Coffee Maker Instruction Manual</a></p> <p>Instruction manual for the BELLA Pro Series 5-Cup Stainless Steel Coffee Maker, covering important safeguards, setup, brewing instructions, maintenance, and warranty information.</p>
	<p><a href="#">Cuisinart Automatic Bread Maker BMKR-200 Series Recipe Booklet</a></p> <p>A comprehensive recipe booklet for the Cuisinart Automatic Bread Maker (BMKR-200 Series), featuring a wide variety of bread, dough, pasta, and jam recipes, including whole wheat, gluten-free, sweet breads, and more.</p>
	<p><a href="#">Black &amp; Decker All-In-One Deluxe Automatic Breadmaker B1600 Series: Operating Instructions &amp; Cookbook</a></p> <p>Comprehensive operating instructions and cookbook for the Black &amp; Decker All-In-One Deluxe Automatic Breadmaker, Model B1600 Series. Learn how to use settings, troubleshoot common issues, and bake delicious homemade bread.</p>
	<p><a href="#">Cuisinart CBK-110 Series Compact Automatic Bread Maker: Instruction and Recipe Booklet</a></p> <p>User manual and recipe guide for the Cuisinart CBK-110 Series Compact Automatic Bread Maker. Learn to operate the appliance, bake various types of bread, and find troubleshooting tips. Features include multiple programs, delay start, and gluten-free options.</p>