

[Manuals.plus](#) /

› [AGXOV](#) /

› AGXOV D28 MP3 Player with Bluetooth 5.4 User Manual

AGXOV D28

AGXOV D28 MP3 Player with Bluetooth 5.4 User Manual

Model: D28

1. INTRODUCTION

Thank you for choosing the AGXOV D28 MP3 Player. This device is designed to provide a versatile and high-quality audio experience, featuring Bluetooth 5.4 connectivity, a built-in HD speaker, FM radio, voice recording, and e-book functionality. This manual will guide you through the setup, operation, and maintenance of your new MP3 player.

2. PACKAGE CONTENTS

Please check the package for the following items:

- AGXOV D28 MP3 Player
- USB Charging Cable
- Earphones
- User Manual (this document)

Package includes:

- ① User Manual
- ② MP3 Player
- ③ USB Cable
- ④ Earphones



Image: Contents of the AGXOV D28 MP3 Player package.

3. PRODUCT OVERVIEW

The AGXOV D28 MP3 Player features a compact design with both touchscreen and physical button controls for ease of use. It includes a 2.4-inch screen and a dedicated volume/scroll wheel.

Touchscreen + Buttons, More Control Freedom



Image: Front view of the AGXOV D28 MP3 Player highlighting its touchscreen and physical control buttons.

Key Features:

- **Display:** 2.4-inch full touchscreen
- **Storage:** 128GB built-in, expandable up to 512GB via MicroSD card
- **Connectivity:** Bluetooth 5.4 for wireless audio
- **Audio:** HiFi lossless sound quality, built-in HD speaker

- **Functions:** Music player, video player, picture viewer, FM radio, voice recorder, e-book reader, stopwatch, calendar, pedometer

4. SETUP

4.1 Charging the Device

Before first use, fully charge the MP3 player. Connect the included USB cable to the device's charging port and plug the other end into a USB power adapter (not included) or a computer's USB port. The charging indicator will show the charging status.

Note: A full charge typically takes approximately 2-3 hours. The device offers up to 50 hours of music playback or 6 hours of video playback on a full charge.

4.2 Transferring Files

To transfer music, videos, pictures, or e-books to your MP3 player:

1. Connect the MP3 player to your computer using the provided USB cable.
2. The device will appear as a removable disk on your computer.
3. Drag and drop your desired files into the appropriate folders (e.g., "Music" for audio files, "Video" for videos, "Pictures" for images, "Ebook" for text files).
4. Safely eject the device from your computer before disconnecting the USB cable.



Image: The MP3 player connected via USB, showing its storage capabilities.

4.3 Inserting a MicroSD Card

If you wish to expand the storage, insert a MicroSD card (up to 512GB, not included) into the designated slot on the side of the player. Ensure the card is inserted correctly until it clicks into place.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

- **To Power On:** Press and hold the power button until the screen lights up.
- **To Power Off:** Press and hold the power button until the power-off options appear, then select "Power Off".

5.2 Basic Navigation

The AGXOV D28 features a touchscreen for primary navigation. Swipe to browse menus and tap to select options. Physical buttons are also available for common functions:

- **Back Button:** Returns to the previous screen.
- **Play/Pause Button:** Starts or pauses playback.
- **Previous/Next Buttons:** Skips to the previous or next track/item.
- **Volume/Scroll Wheel:** Adjusts volume during playback or scrolls through lists in menus.

5.3 Music Playback

From the main menu, tap the "Music" icon to access your audio library.

- **Supported Formats:** MP3, OGG, FLAC, AAC, WAV, WMA, APE.
- **Browsing:** Navigate by Artist, Album, Songs, Genres, or Folders.
- **Creating Playlists:** Organize your music by creating folders on your computer and transferring songs into them. The player's folder management system will recognize these.
- **Equalizer:** Access the 7-band Pro Equalizer in settings to customize your sound profile (e.g., Rock, Pop, Electronic, Classical, Jazz, Vocal, or custom).



Image: Demonstrating the HiFi sound quality of the AGXOV D28 MP3 Player.

5.4 Bluetooth Connection

Connect your AGXOV D28 to Bluetooth headphones or speakers for a wireless listening experience.

1. From the main menu, tap the "Bluetooth" icon.
2. Turn on Bluetooth on the MP3 player.
3. Ensure your Bluetooth headphones or speaker are in pairing mode.
4. The MP3 player will scan for available devices. Select your device from the list to pair.
5. Once paired, audio will be routed to your Bluetooth device.

Bluetooth 5.4

Strong anti-interference, compatible with all Bluetooth headphones/speakers



Image: The MP3 player connected wirelessly via Bluetooth 5.4 to earbuds.

5.5 FM Radio

Tap the "Radio" icon to access the FM radio function. You can auto-scan for stations or manually tune to your preferred frequencies.

5.6 Voice Recorder

Tap the "Recorder" icon to start a voice recording. Recordings are saved to the device's internal storage or MicroSD card.

5.7 E-Book Reader

Tap the "Ebook" icon to open text files. The device supports various text formats for reading on the go.

5.8 Video and Picture Viewer

Access "Video" or "Pictures" from the main menu to view your stored media files.

5.9 Settings and Tools

The "Settings" icon allows you to customize various aspects of your player, including display, sound, and system preferences. Additional tools like Stopwatch, Calendar, and Pedometer are also available from the main menu.

6. FILE MANAGEMENT

The AGXOV D28 features an intuitive folder management system. All your media files (music, videos, pictures, e-books) are automatically organized into their respective categories. You can also browse files directly through the "Folder" icon on the main screen, which allows access to both internal and external (MicroSD) storage. For easier navigation and playlist creation, it is recommended to organize your music files into specific folders on your computer before transferring them to the device.

7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the device. Avoid liquid cleaners or abrasive materials.
- **Storage:** Store the player in a cool, dry place away from direct sunlight and extreme temperatures.
- **Handling:** Avoid dropping the device or exposing it to strong impacts.
- **Water Exposure:** This device is not waterproof. Avoid contact with water or excessive moisture.

8. TROUBLESHOOTING

Problem	Possible Solution
Device does not power on.	Ensure the battery is charged. Connect to a power source and try again. If unresponsive, perform a hard reset (refer to device specifications for reset button location, if any, or hold power button for an extended period).
Cannot connect to Bluetooth device.	Ensure Bluetooth is enabled on both the MP3 player and the target device. Make sure the target device is in pairing mode and within range. Try unpairing and re-pairing.
Files are not appearing on the player.	Verify that files were transferred to the correct folders. Check file formats for compatibility. Ensure the MicroSD card (if used) is properly inserted and functional.
Short battery life.	Reduce screen brightness. Turn off Bluetooth when not in use. Close background applications. Ensure the device is fully charged before use.
Poor sound quality.	Check earphone connection or Bluetooth connection. Ensure audio files are of good quality. Adjust equalizer settings.

9. SPECIFICATIONS

Feature	Detail
Brand	AGXOV
Model Number	D28
Screen Size	2.4 inches
Internal Storage	128GB
Expandable Storage	Up to 512GB (MicroSD card)
Bluetooth Version	5.4
Battery Capacity	410mAh
Music Playback Time	Up to 50 hours
Video Playback Time	Up to 6 hours
Supported Audio Formats	MP3, OGG, FLAC, AAC, WAV, WMA, APE
UPC	724977334851

10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or contact AGXOV customer service through the retailer where the product was purchased. Keep your proof of purchase for warranty claims.

© 2026 AGXOV. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question