

[Manuals.plus](#) /

› [Cherry](#) /

› Cherry AC 3.3 Aluminium Ergonomic Palm Rest and Detachable Feet Instruction Manual

Cherry AC 3.3

Cherry AC 3.3 Aluminium Ergonomic Palm Rest and Detachable Feet

Model: AC 3.3 (JA-0330-2)

INTRODUCTION

The Cherry AC 3.3 Aluminium Ergonomic Palm Rest and Detachable Feet are designed as original accessories for the Cherry MX Board 3.0 S Gaming Keyboard. This product enhances typing comfort and promotes a natural hand position, reducing strain during extended use. This manual provides instructions for proper installation, usage, and maintenance.

SAFETY INFORMATION

- Handle with care to avoid scratches or damage to the aluminum surfaces.
- Ensure the palm rest and feet are securely attached to prevent accidental detachment during use.
- Keep out of reach of small children to prevent choking hazards from small parts.

PACKAGE CONTENTS

- 1x Cherry AC 3.3 Aluminium Ergonomic Palm Rest
- 2x Cherry AC 3.3 Detachable Feet (Aluminium)

SETUP

Attaching the Palm Rest

The palm rest attaches to the Cherry MX Board 3.0 S keyboard via designated slots. Align the hooks on the palm rest with the recesses on the front edge of the keyboard. Gently push down until the palm rest clicks securely into place.



Image: Cherry MX Board 3.0 S keyboard with the AC 3.3 Aluminium Palm Rest securely attached. This image shows the Cherry AC 3.3 Aluminium Palm Rest connected to the front edge of a Cherry MX Board 3.0 S keyboard, illustrating the correct attachment.

Attaching the Detachable Feet

The detachable feet screw into the underside of the Cherry MX Board 3.0 S keyboard. Locate the two threaded holes on the bottom of the keyboard. Insert the threaded end of each foot into a hole and turn clockwise until snug. No tools are required for this process. The feet allow for two different inclination angles.

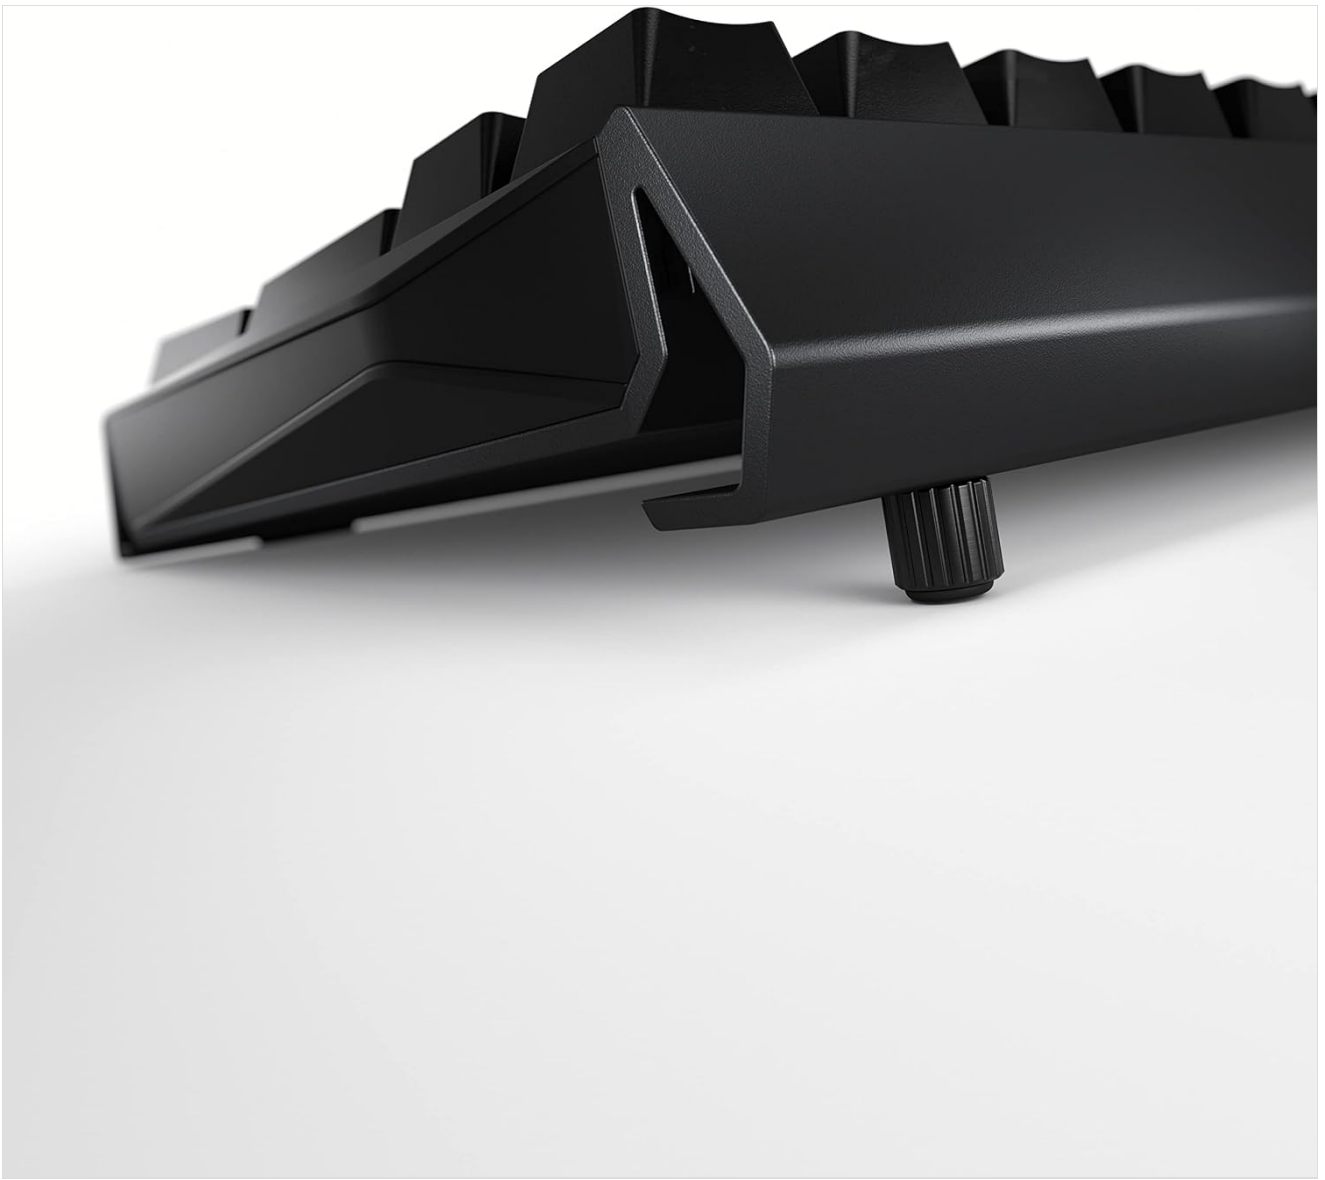


Image: Close-up view of the Cherry AC 3.3 Detachable Feet screwed into the underside of a Cherry MX Board 3.0 S keyboard. This image provides a close-up of the detachable aluminum feet screwed into the base of the keyboard, demonstrating how they provide an elevated angle.



Image: Detailed view of the Cherry AC 3.3 Detachable Feet, showing the threaded design for tool-free installation. This image displays the two detachable aluminum feet, highlighting their threaded design for easy, tool-free attachment to the keyboard.

OPERATING INSTRUCTIONS

Once installed, the Cherry AC 3.3 palm rest provides a comfortable surface for your wrists, promoting a natural and relaxed hand position. This helps to alleviate wrist strain during prolonged typing or gaming sessions. The detachable feet allow you to adjust the keyboard's tilt to your preferred ergonomic angle, further enhancing comfort and reducing wrist fatigue.

MAINTENANCE

To clean the aluminum palm rest and feet, use a soft, damp cloth. Avoid abrasive cleaners or solvents, as these may damage the finish. Ensure the product is completely dry before reattaching it to the keyboard.

TROUBLESHOOTING

Issue	Possible Cause	Solution
Palm rest does not attach securely	Incorrect alignment or debris in slots	Ensure hooks are properly aligned with keyboard recesses. Check for and remove any debris.
Detachable feet are loose	Not fully tightened	Screw the feet clockwise until they are snug.
Discomfort during use	Incorrect posture or angle	Adjust your chair height and keyboard position. Experiment with the keyboard's tilt using the detachable feet.

SPECIFICATIONS

Feature	Detail
Model Name	CHERRY PALMREST 3.0 S
Model Number	JA-0330-2
Material	Aluminum
Color	Black
Compatible Devices	Cherry MX Board 3.0 S Gaming Keyboard
Style	Ergonomic
Item Weight	374 Grams

WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. For detailed warranty information, please refer to the official Cherry website or contact Cherry customer support. For technical assistance or further inquiries, please visit the [Cherry support page](#) or contact their customer service department.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B091GY7RSZ>

More documents and user manuals: **<https://manuals.plus/>**