

[Manuals.plus](#) /

› [WSTER](#) /

› WSTER WS-1818 HIFI Wireless Microphone User Manual

WSTER WS-1818

WSTER WS-1818 HIFI Wireless Microphone User Manual

Model: WS-1818

1. INTRODUCTION

Thank you for purchasing the WSTER WS-1818 HIFI Wireless Microphone. This device combines a microphone, speaker, and various playback options (Bluetooth, TF card, USB, FM radio) into a portable unit. This manual will guide you through the setup, operation, and maintenance of your new device to ensure optimal performance and longevity.

2. PRODUCT OVERVIEW

Key Features:

- HIFI Wireless Microphone and Speaker
- Portable KTV (Karaoke) Functionality
- Bluetooth Connectivity
- TF Card (Micro SD) Playback
- USB Drive Playback
- FM Radio Function
- Adjustable Echo and Volume Controls

Components:

Familiarize yourself with the main components and ports of your WSTER WS-1818 microphone:



Image Description: A rose gold WSTER WS-1818 microphone showing its side panel. Labels indicate a headphone jack, a USB port for flash drives, and a Micro SD card slot. This image highlights the various input/output options available on the device.

- **Microphone Head:** For vocal input.
- **Control Panel:** Buttons for power, mode, volume, echo, play/pause, skip tracks.
- **Speaker Grille:** Integrated speaker for audio output.
- **USB Port:** For connecting USB flash drives for music playback.
- **TF Card Slot:** For inserting Micro SD cards for music playback.
- **3.5mm Audio Jack:** For connecting headphones or external audio devices.
- **Micro USB Charging Port:** For charging the device.

3. SETUP

3.1 Charging the Microphone

1. Locate the Micro USB charging port on the microphone.
2. Connect the provided USB charging cable to the microphone and a standard USB power adapter (not included) or a computer's USB port.
3. The charging indicator light will illuminate (color may vary) to show that the device is charging.
4. Once fully charged, the indicator light will change or turn off. A full charge typically takes 2-3 hours.

Note: For first-time use, ensure the microphone is fully charged.

3.2 Powering On/Off

- **To Power On:** Press and hold the Power button (usually marked with a power symbol) for a few seconds until you hear a power-on prompt or see an indicator light.
- **To Power Off:** Press and hold the Power button again for a few seconds until you hear a power-off prompt or the indicator light turns off.

4. OPERATING INSTRUCTIONS

4.1 Bluetooth Connection

Connect your WSTER WS-1818 to a smartphone or other Bluetooth-enabled device for wireless audio playback and KTV functionality.



Image Description: A rose gold WSTER WS-1818 microphone positioned next to a smartphone, with a Bluetooth symbol and wavy lines indicating a wireless connection between the two devices. This illustrates the Bluetooth pairing process.

1. Ensure the microphone is powered on and in Bluetooth pairing mode (it usually enters this mode automatically upon power-on, indicated by a flashing blue light or an audio prompt).
2. On your smartphone or device, go to the Bluetooth settings and turn Bluetooth on.
3. Search for available devices. You should see "WS-1818" or a similar name in the list.
4. Select "WS-1818" to pair. Once connected, you will hear a confirmation sound, and the indicator light may become solid.
5. You can now play music from your device through the microphone's speaker and use the microphone for singing.

4.2 KTV Mode (Microphone & Speaker)

After connecting via Bluetooth, open your favorite karaoke app or music player on your smartphone. Play a song, and your voice will be amplified through the microphone's speaker along with the music.

- **MIC VOL:** Adjust the microphone's volume using the dedicated slider or buttons on the control panel.
- **ECHO:** Adjust the echo effect using the dedicated slider or buttons to enhance your singing.
- **Music Volume:** Control the background music volume from your connected device or the microphone's main volume controls.

4.3 TF Card / USB Playback

The microphone supports playing MP3 audio files directly from a TF (Micro SD) card or a USB flash drive.

1. **For TF Card:** Insert a TF card (with music files) into the TF card slot until it clicks into place.
2. **For USB Drive:** Insert a USB flash drive (with music files) into the USB port.
3. The microphone should automatically switch to TF card or USB mode and begin playing music. If not, press the 'M'

(Mode) button to cycle through modes until you reach the desired playback mode.

4. Use the Play/Pause, Previous, and Next buttons on the control panel to manage playback.

4.4 FM Radio Function

Listen to your favorite FM radio stations directly on the microphone.

1. Power on the microphone.
2. Press the 'M' (Mode) button repeatedly until you hear the FM radio prompt.
3. Press the Play/Pause button once to initiate an automatic scan for available FM stations. The microphone will save the found stations.
4. Use the Previous and Next buttons to cycle through the saved stations.

4.5 General Controls

- **Power Button:** Long press to power on/off. Short press to switch modes (Bluetooth, TF, USB, FM).
- **Play/Pause:** Play or pause music. In FM mode, short press to auto-scan.
- **Previous/Next:** Skip tracks in music playback. Change FM stations in radio mode.
- **Volume +/-:** Adjust the overall speaker volume.
- **MIC VOL:** Adjust microphone input volume.
- **ECHO:** Adjust the echo effect level.

5. MAINTENANCE

Proper care will extend the life of your WSTER WS-1818 microphone.

- **Cleaning:** Use a soft, dry cloth to wipe the microphone's surface. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods (e.g., once every 3 months).
- **Water Exposure:** This device is not waterproof. Avoid exposure to water or high humidity.

6. TROUBLESHOOTING

If you encounter issues with your microphone, refer to the following common problems and solutions:

Problem	Possible Solution
Microphone does not power on.	Ensure the battery is charged. Connect to a power source and try again.
No sound from the speaker.	Check volume levels on both the microphone and the connected device. Ensure the correct mode (Bluetooth, TF, USB) is selected.
Cannot connect via Bluetooth.	Ensure the microphone is in pairing mode. Turn off and on Bluetooth on your device. Move closer to the microphone. Forget the device from your phone's Bluetooth list and try pairing again.
FM radio reception is poor.	Ensure you are in an area with good signal. Try repositioning the microphone.

Problem	Possible Solution
Music from TF card/USB does not play.	Ensure the files are in a supported format (e.g., MP3). Check if the card/drive is inserted correctly. Press the 'M' button to select the correct mode.

7. SPECIFICATIONS

- **Brand:** WSTER
- **Model:** WS-1818
- **Connectivity Technology:** Wireless (Bluetooth)
- **Supported Media:** TF Card (Micro SD), USB Flash Drive
- **Functions:** Microphone, Speaker, KTV, FM Radio
- **ASIN:** B091J4K2XZ

8. SAFETY INFORMATION

Please read and follow these safety guidelines for safe operation:

- Do not disassemble or modify the device.
- Keep away from water, moisture, and high temperatures.
- Do not expose to direct sunlight for prolonged periods.
- Use only the specified charging voltage and current.
- Keep out of reach of children.
- Dispose of the device and its battery responsibly according to local regulations.

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided at the time of purchase or contact your retailer. If you have further questions or require technical assistance, please reach out to the manufacturer's customer service.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B091J4K2XZ>

More documents and user manuals: <https://manuals.plus/>