

[manuals.plus](#) /› [LEXiBOOK](#) /› [LEXiBOOK Harry Potter Digital Alarm Clock \(Model RL800HP\) User Manual](#)

LEXiBOOK RL800HP

LEXiBOOK Harry Potter Digital Alarm Clock (Model RL800HP) User Manual

Your guide to setting up and operating your new Harry Potter alarm clock.

INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your LEXiBOOK Harry Potter Digital Alarm Clock, model RL800HP. Please read this manual thoroughly before operating the device and retain it for future reference.

SAFETY INFORMATION

- Recommended for ages 3 years and up.
- Keep batteries out of reach of small children.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Remove batteries if the product is not to be used for an extended period.
- Dispose of used batteries responsibly.

PACKAGE CONTENTS

- 1 x LEXiBOOK Harry Potter Digital Alarm Clock (Model RL800HP)
- 1 x User Manual

Note: 3 x AA / LR6 batteries are required and not included.

SETUP

1. Battery Installation

1. Locate the battery compartment on the underside of the alarm clock.
2. Open the battery compartment cover.

3. Insert 3 new AA / LR6 batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.



Image: Rear view of the alarm clock, highlighting the battery compartment and control buttons for alarm and time settings.

2. Setting the Time

1. Press and hold the "Time Set" button (usually marked with a clock icon) on the back of the unit until the hour display flashes.
2. Use the "+" and "-" buttons on the front to adjust the hour. Pay attention to AM/PM indicators.
3. Press the "Time Set" button again to switch to minute adjustment.
4. Use the "+" and "-" buttons to adjust the minutes.
5. Press the "Time Set" button one last time to confirm and exit time setting mode.



Image: The LCD screen showing the digital time display, including AM/PM and alarm/snooze indicators.

3. Setting the Alarm

1. Press and hold the "Alarm Set" button (usually marked with a bell icon) on the back of the unit until the alarm hour display flashes.
2. Use the "+" and "-" buttons on the front to adjust the alarm hour.
3. Press the "Alarm Set" button again to switch to alarm minute adjustment.
4. Use the "+" and "-" buttons to adjust the alarm minutes.
5. Press the "Alarm Set" button one last time to confirm and exit alarm setting mode. The alarm icon will appear on the display, indicating the alarm is active.

OPERATING INSTRUCTIONS

1. Night Light Function

Press the Harry Potter figure on top of the clock to activate the night light. The figure will light up for a few minutes, providing a gentle glow. This function is sleep-friendly with its LCD backlit screen.



Image: The Harry Potter alarm clock with the character figure illuminated, serving as a night light in a dimly lit room.

2. Sound Effects Button

Press the dedicated button (often marked with a speaker icon) to play magic sound effects. This feature adds an interactive element for children.

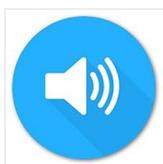


Image: A graphic icon depicting musical notes, symbolizing the sound effects feature of the alarm clock.

3. Alarm and Snooze Function

- When the alarm sounds, press the top of the clock or the Harry Potter figure to activate the snooze function. The alarm will pause and sound again after a short interval.
- To completely stop the alarm, press the "Alarm Set" button on the back of the unit.
- The alarm features adjustable volume and a choice of magic-themed alarm sounds. Use the volume control buttons (often "+" and "-") to adjust the loudness.



Image: A graphic icon of a speaker emitting sound waves, representing the adjustable volume feature.

MAINTENANCE

- Clean the clock with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Avoid exposing the clock to direct sunlight, extreme temperatures, or moisture.
- If the clock will not be used for an extended period, remove the batteries to prevent leakage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock not turning on / Display blank	Batteries are dead or incorrectly inserted.	Check battery polarity and replace with new AA / LR6 batteries.
Alarm not sounding	Alarm is not set or volume is too low.	Ensure alarm is activated (alarm icon visible) and adjust volume.
Night light not working	Batteries are low or depleted.	Replace batteries.
Low battery indicator showing	Batteries are running low.	Replace all 3 AA / LR6 batteries.

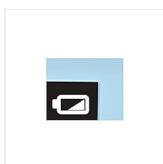


Image: A graphic icon of a battery with a low charge level, indicating that the batteries need to be replaced.

SPECIFICATIONS



- **Brand:** LEXiBOOK
- **Model:** RL800HP
- **Theme:** Harry Potter
- **Display Type:** Digital LCD with backlight
- **Special Features:** Night Light, Snooze Function, Adjustable Volume, Magic Sound Effects
- **Power Source:** 3 x AA / LR6 batteries (not included)
- **Product Dimensions:** 9"W x 18.2"H (approximate, based on product details)
- **Item Weight:** 7.7 ounces
- **Material:** Plastic
- **Recommended Age:** 3 years and up

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official LEXiBOOK website: www.lexibook.com.

© 2023 LEXiBOOK. All rights reserved. Harry Potter characters, names and related indicia are © & ™ Warner Bros. Entertainment Inc. (s23)

Related Documents - RL800HP

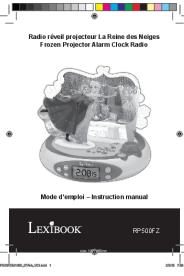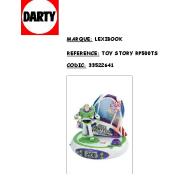	<p>Lexibook Harry Potter Projector Alarm Clock RP500HP - User Manual</p> <p>Official user manual for the Lexibook Harry Potter Projector Alarm Clock (Model RP500HP). Learn how to set up, use features like the alarm, nightlight, projector, and understand warranty information.</p>
	<p>Lexibook Frozen Projector Alarm Clock Radio RP500FZ - User Manual</p> <p>Official user manual for the Lexibook Frozen Projector Alarm Clock Radio (Model RP500FZ). This guide provides instructions on setup, features, specifications, maintenance, and warranty information.</p>
	<p>Lexibook Toy Story Buzz Lightyear Projector Alarm Clock Radio - Instruction Manual</p> <p>Instruction manual for the Lexibook Toy Story Buzz Lightyear Projector Alarm Clock Radio (RP500TS), detailing product description, battery information, settings for clock, alarm, stopwatch, radio, melodies, night light, and projector, along with technical specifications and warranty information.</p>
	<p>Coach Leon My Sleep Companion Instruction Manual</p> <p>Official instruction manual for the Lexibook Coach Leon My Sleep Companion alarm clock, detailing setup, features, safety, and maintenance.</p>
	<p>Lexibook NLJ140series Night Light Projector Clock - User Manual & Instructions</p> <p>Comprehensive user manual for the Lexibook NLJ140series Night Light Projector Clock. Learn how to set up the clock, alarm, radio, and projector features. Includes specifications, maintenance, and warranty information.</p>
	<p>Lexibook Stitch Sleep Companion RLT100D_09: Instruction Manual</p> <p>User guide for the Lexibook Stitch Sleep Companion RLT100D_09, detailing setup, alarm functions, light features, melodies, nap mode, sunrise/sunset simulation, and maintenance.</p>

