

[Manuals.plus](#) /

› [Energizer](#) /

› Energizer CHVCM Battery Charger User Manual

Energizer CHVCM

Energizer CHVCM Battery Charger

USER MANUAL

Introduction

This user manual provides essential information for the safe and efficient operation of your Energizer CHVCM Battery Charger. Please read this manual thoroughly before using the charger to ensure proper function and to prevent damage to the device or batteries. Keep this manual for future reference.

Safety Information

Always observe the following safety precautions:

- Use this charger only with NiMH (Nickel-Metal Hydride) rechargeable batteries. Do not attempt to charge alkaline, carbon-zinc, lithium, or any other battery types, as this may cause explosion, rupture, or leakage, leading to personal injury or property damage.
- Do not expose the charger to rain or moisture. Use it indoors in a dry location only.
- Do not operate the charger if it has been dropped or damaged.
- Do not disassemble the charger. Refer all servicing to qualified service personnel.
- Keep the charger and batteries out of reach of children.
- Ensure proper battery polarity (+/-) when inserting batteries into the charger.
- Unplug the charger from the power outlet when not in use or before cleaning.
- Do not block ventilation openings.

Package Contents

Verify that all items are present in your package:

- Energizer CHVCM Battery Charger
- Energizer Recharge AA NiMH Batteries (quantity may vary, typically 4)
- User Manual (this document)



This image displays the Energizer CHVCM battery charger, packaged for retail. The packaging highlights 'Energizer Recharge Value' and '2000mAh', indicating its capacity. Four AA rechargeable batteries are visible within the clear plastic packaging, ready for use with the charger.

Product Overview

The Energizer CHVCM is a compact and efficient charger designed for NiMH AA and AAA rechargeable batteries. It features individual charging channels and LED indicators to show charging status.



This image shows the Energizer CHVCM battery charger with four Energizer Recharge AA batteries inserted into its charging slots. The charger is compact and grey, with green indicator lights visible above each pair of battery slots, suggesting charging status.

Key Components:

- **Battery Slots:** Accommodates AA and AAA NiMH batteries.
- **LED Indicators:** Green lights indicate charging status.

- **Power Plug:** Integrated plug for wall outlets.

Setup

1. **Unpack:** Carefully remove the charger and batteries from the packaging.
2. **Insert Batteries:** Insert 1, 2, 3, or 4 AA or AAA NiMH rechargeable batteries into the charging slots. Ensure correct polarity (+ and -) as indicated on the charger.
3. **Connect to Power:** Plug the charger directly into a standard wall power outlet.

Operating Instructions

1. **Charging Process:** Once plugged in with batteries inserted, the LED indicators will illuminate green, indicating that charging has begun.
2. **Charging Time:** Charging times vary depending on the battery capacity (mAh) and their current charge level. Refer to the battery manufacturer's guidelines for typical charging durations.
3. **Charge Completion:** The charger is designed to automatically stop charging when batteries are fully charged to prevent overcharging. The green LED indicators will remain lit.
4. **Remove Batteries:** Once charging is complete, unplug the charger from the wall outlet and remove the charged batteries.

Note: It is normal for batteries to become warm during the charging process.

Maintenance

- **Cleaning:** Disconnect the charger from the power source before cleaning. Wipe the exterior with a soft, dry cloth. Do not use abrasive cleaners or immerse the charger in water.
- **Storage:** Store the charger in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** For optimal battery life, store NiMH batteries in a cool, dry place when not in use. It is recommended to fully discharge and recharge NiMH batteries periodically to maintain their capacity.

Troubleshooting

Problem	Possible Cause	Solution
LED indicators do not light up.	Charger not plugged in; batteries incorrectly inserted; faulty outlet.	Ensure charger is securely plugged into a working outlet. Check battery polarity. Try a different outlet.
Batteries not charging.	Non-rechargeable batteries inserted; batteries are fully charged; batteries are defective.	Ensure only NiMH rechargeable batteries are used. Check if batteries are already fully charged. Replace old or defective batteries.
Batteries get very hot during charging.	Normal operation; defective batteries.	Some warmth is normal. If batteries become excessively hot, remove them immediately and discontinue use. Replace defective batteries.

Specifications

Brand	Energizer
Model Number	CHVCM
Compatible Battery Types	NiMH AA, AAA
Input Voltage	(Not specified in input, typical for chargers)
Output Voltage	1.2 Volts (per battery)
Dimensions (Package)	16.75 x 8.08 x 3.19 cm
Weight (Package)	229.88 grams
Reusability	Rechargeable (for batteries)

Warranty and Support

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Energizer website. Do not attempt to repair the device yourself.

Manufacturer: Energizer

© 2024 Energizer. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

