

[manuals.plus](#) /› [Ipega](#) /› [Ipega PG-9089 Bluetooth Wireless Wired Gamepad User Manual](#)

## Ipega PG-9089

# Ipega PG-9089 Bluetooth Wireless Wired Gamepad User Manual

Model: PG-9089

## 1. PRODUCT OVERVIEW

The Ipega PG-9089 is a versatile gamepad designed for use with Android devices and Windows PCs. It supports both wireless Bluetooth and wired connections, offering flexibility for various gaming setups. The gamepad features a built-in rechargeable lithium battery and an integrated telescopic phone holder for convenient mobile gaming.

Key features include:

- Wireless Bluetooth connectivity for Android devices.
- Wired connectivity for PC.
- Integrated 300mAh lithium battery for portable use.
- Telescopic phone holder for secure mobile device mounting.
- TURBO function for enhanced gameplay.



Figure 1: Front view of the Ipega PG-9089 Gamepad, showing the directional pad, action buttons (A, B, X, Y), analog sticks, and central home button.

## 2. SETUP AND CONNECTION

### 2.1 Charging the Gamepad

Before initial use, fully charge the gamepad. Connect the provided USB cable to the gamepad's charging port and to a USB power source (e.g., computer USB port, USB wall adapter). The charging indicator light will show the charging status and turn off when fully charged.

### 2.2 Connecting to Android Devices (Bluetooth Wireless)

1. Ensure the gamepad is sufficiently charged.
2. Press and hold the **HOME** button and the **A** button simultaneously for a few seconds until the indicator light flashes rapidly. This puts the gamepad into pairing mode.
3. On your Android device, go to **Settings > Bluetooth** and turn Bluetooth on.
4. Scan for available devices. You should see "PG-9089" or a similar name appear in the list.
5. Select "PG-9089" to pair. Once paired, the indicator light on the gamepad will become solid.
6. If prompted for a passcode, enter "0000" or "1234".

### 2.3 Connecting to PC (Wired)

1. Connect the gamepad to your PC using the provided USB cable.
2. The PC should automatically detect and install the necessary drivers. This may take a few moments.
3. Once installed, the gamepad will be recognized as a standard game controller. You can verify this in your PC's Device Manager or game controller settings.

### 2.4 Attaching a Mobile Phone

The gamepad features a telescopic holder for securing your mobile phone.

1. Gently extend the telescopic holder located on the top of the gamepad.
2. Carefully place your mobile phone into the holder, ensuring it is securely gripped by both ends.
3. Adjust the angle for optimal viewing.



Figure 2: The Ipega PG-9089 Gamepad with a mobile phone securely mounted in its telescopic holder, ready for gameplay.

### 3. OPERATION

#### 3.1 Basic Controls

The PG-9089 gamepad features standard controller layouts:

- **Directional Pad (D-pad):** For precise directional input.
- **Left/Right Analog Sticks:** For 360-degree movement and camera control.
- **Action Buttons (A, B, X, Y):** For in-game actions.
- **Shoulder Buttons (L1, R1) and Triggers (L2, R2):** For additional actions, often used for shooting or

accelerating.

- **START/SELECT/HOME Buttons:** For menu navigation and system functions.

## 3.2 TURBO Function

The TURBO function allows for rapid, repeated input of a specific button press, which can be useful in certain games.

1. To activate TURBO: Press and hold the button you wish to set to TURBO (e.g., A button), then press the **TURBO** button once. The button will now continuously register presses as long as it is held down.
2. To deactivate TURBO: Press and hold the button with TURBO enabled, then press the **TURBO** button again. The function will be disabled for that specific button.

## 3.3 Power On/Off

- **Power On:** Press the **HOME** button. The gamepad will attempt to reconnect to the last paired device.
- **Power Off:** Press and hold the **HOME** button for approximately 5 seconds until the indicator lights turn off. The gamepad will also automatically power off after a period of inactivity to conserve battery.

## 4. MAINTENANCE

---

- **Cleaning:** Use a soft, dry cloth to clean the surface of the gamepad. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store the gamepad in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the gamepad regularly, even if not in use for extended periods.
- **Avoid Impact:** Do not drop or subject the gamepad to strong impacts, as this can damage internal components.

## 5. TROUBLESHOOTING

---

### 5.1 Gamepad Does Not Power On

- Ensure the gamepad is fully charged. Connect it to a power source using the USB cable and allow it to charge for at least 30 minutes before attempting to power on again.

### 5.2 Unable to Connect via Bluetooth

- Make sure Bluetooth is enabled on your Android device.
- Ensure the gamepad is in pairing mode (indicator light flashing rapidly). If not, power off and re-enter pairing mode.
- Delete any previous "PG-9089" entries from your device's Bluetooth list and try pairing again.
- Move the gamepad closer to your Android device to ensure it is within the 8-meter transmission range.
- Restart both the gamepad and your Android device.

### 5.3 Gamepad Not Recognized by PC

- Ensure the USB cable is securely connected to both the gamepad and the PC.
- Try connecting to a different USB port on your PC.

- Restart your PC.
- Check Device Manager on your PC to see if the gamepad is listed under "Human Interface Devices" or "Game Controllers". If there's an error, try updating or reinstalling drivers.

## 5.4 Buttons or Analog Sticks Not Responding Correctly

- Ensure the gamepad is properly connected (Bluetooth or wired).
- Test the gamepad in a different game or application to determine if the issue is specific to one game.
- Check for any physical obstructions or debris around the buttons or analog sticks.
- A factory reset (if available, consult manufacturer's website) might resolve persistent issues.

## 6. SPECIFICATIONS

<b>Product Name</b>	Gamepad
<b>Model</b>	PG-9089
<b>BT Transmission Distance</b>	≤ 8 meters
<b>Working Voltage</b>	DC 3.7V
<b>Battery Capacity</b>	300mAh
<b>Playing Time</b>	Approximately 6 hours
<b>Standby Time</b>	Up to 30 days (once fully charged)
<b>Item Size</b>	15 x 10.5 x 2.5 cm (5.9 x 4.1 x 1 inch)
<b>Item Weight</b>	150g (5.3 oz)
<b>Compatibility</b>	Android devices, Windows PC

## 7. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your purchase or visit the official Ipega website. Keep your proof of purchase for warranty claims.

If you encounter issues not covered in this manual, please contact Ipega customer service or your retailer for assistance.