

[Manuals.plus](#) /

› [Sharper Image](#) /

› Sharper Image White Noise Sound Machine User Manual

Sharper Image Revo White

Sharper Image White Noise Sound Machine - User Manual

Model: Revo White

Brand: Sharper Image

PRODUCT OVERVIEW

The Sharper Image White Noise Sound Machine is a portable relaxation therapy device designed to provide a peaceful environment for sleep, meditation, and focus. It features 6 soothing nature soundscapes and white noise, with a timer function for convenience.



Image: The Sharper Image White Noise Sound Machine, Revo White model, shown with its retail packaging. The device is compact and white with a grey speaker grille on top, featuring various control buttons.

Key Features:

- **6 Calming Nature Sounds:** Includes rain, forest, ocean, relax, calm, and white noise.
- **Meditation and Focus Aid:** Helps block distractions for improved concentration.
- **Ideal for Babies and Kids:** Soothes and calms for faster, more peaceful sleep.
- **Premium Speaker:** Delivers high-quality sound for an enhanced experience.
- **Portable Design:** Compact size (4x4x2 inches, 6.4 ounces) for easy travel.
- **Automatic Timer:** Set for 15, 30, or 60 minutes with gradual fade-out.
- **Dual Power Options:** Can be powered by USB cable (included) or 3 AA batteries (not included).

SETUP INSTRUCTIONS

 
Follow these steps to set up your Sharper Image White Noise Sound Machine:

1. **Unpack Contents:** Carefully remove the Sound Soother Revo unit and the USB charging cable from the packaging.
2. **Power Options:**
 - **USB Power:** Insert the small end of the included USB cable into the USB port on the back of the Sound Soother. Plug the larger end into a compatible USB power adapter (not included) or a USB port on a computer.
 - **Battery Power:** For portable use, locate the battery compartment on the bottom of the unit. Insert 3 AA 1.5V batteries (not included), ensuring correct polarity.
3. **Placement:** Place the sound machine on a flat, stable surface near your bed, desk, or desired relaxation area.


SHARPER IMAGE®



WHAT YOU GET

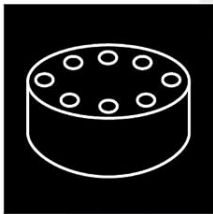


Sound Soother®
Revo

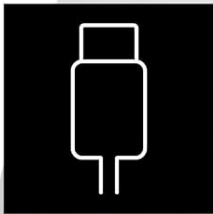 

USB charging
cable

 WHAT YOU NEED

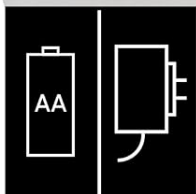

Requires 3 AA 1.5V
batteries or 5W USB
power adapter

SHARPER IMAGE®
Designed in California
Made in China
Sharper Image®
© 2020 Merchsource,
LLC. Irvine, CA.

Image: The Sound Soother Revo, USB charging cable, and icons indicating the need for 3 AA batteries or a 5W USB power adapter.



Image: A detailed view of the USB charging port located on the back of the Sound Soother device.

OPERATING INSTRUCTIONS

Familiarize yourself with the controls and functions of your sound machine:



Image: A diagram illustrating the various buttons on the top of the Sound Soother, indicating controls for Calm Sound, Stream Sound, Ocean Sound, Volume Down, Speaker On/Off, On/Off, Volume Up, White Noise Sound, Rain Sound, Relax Sound, and Timer.

1. **Power On/Off:** Press the **On/Off Button** (located at the bottom center) to turn the unit on or off.
2. **Select Sound:** The device offers 6 unique sounds. Press the dedicated buttons around the speaker grille to select your desired sound:
 - Rain
 - Forest
 - Ocean
 - Relax
 - Calm
 - White Noise
3. **Adjust Volume:** Use the **Volume Up (+)** and **Volume Down (-)** buttons to set the desired sound level.
4. **Set Timer:** Press the **Timer Button** (top center) to cycle through the available timer settings: 15 minutes, 30 minutes, or 60 minutes. The sound will gradually fade out when the timer expires.

SHARPER IMAGE®



SOUND SOOTHER® REVO



6 SOUNDS

Rain

Forest

Ocean

Relax

Calm

White
Noise

DESIGNED IN CALIFORNIA USA

Image: The Sound Soother Revo highlighting its six available sounds for selection.

CARE AND MAINTENANCE

To ensure the longevity and optimal performance of your sound machine, follow these care guidelines:

- **Cleaning:** Wipe the exterior of the unit with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Storage:** When not in use for extended periods, store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** If using batteries, remove them if the unit will not be used for a long time to prevent leakage.
- **Avoid Moisture:** Keep the device away from water or excessive humidity.

TROUBLESHOOTING GUIDE

If you encounter any issues with your Sharper Image White Noise Sound Machine, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power/Unit does not turn on.	- USB cable not connected properly. - Batteries are dead or incorrectly inserted.	- Ensure USB cable is securely connected to both the unit and a working power source. - Replace batteries with new AA batteries, checking polarity.
No sound.	- Volume is too low. - Incorrect sound selected.	- Increase the volume using the '+' button. - Press a sound selection button to ensure a sound is active.
Sound is distorted or unclear.	- Low battery power. - Unit placed on an uneven surface.	- Replace batteries or connect to USB power. - Ensure the unit is on a flat, stable surface.


PRODUCT SPECIFICATIONS

Specification	Detail
Product Dimensions	4 x 4 x 2 inches
Weight	6.4 ounces
Item Model Number	Revo White
Power Source	Battery Powered (3 AA 1.5V batteries, not included) or USB (5W USB power adapter, not included)
Manufacturer	Merchsource
Color	Grey
Material	Plastic

SHARPER IMAGE®



 6 SOOTHING
SOUNDS

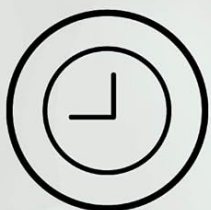

15/30/60
SLEEP TIMER WITH
GRADUAL FADE

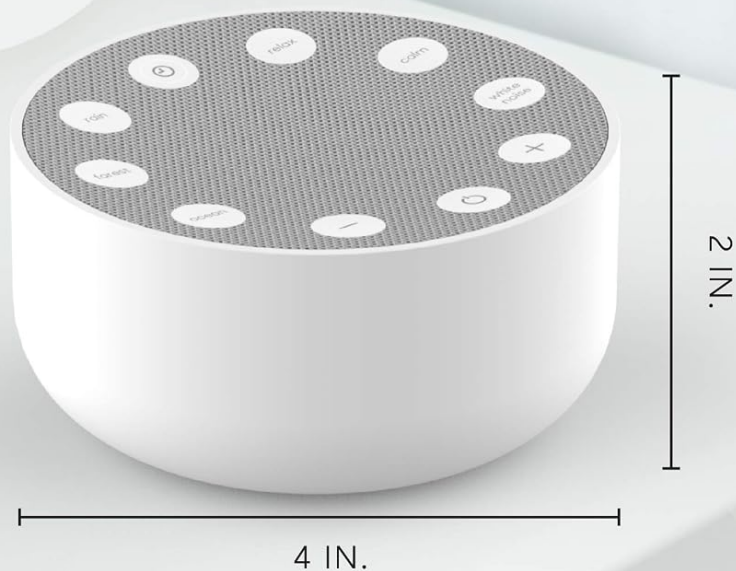 


Image: The compact dimensions of the Sound Soother Revo, measuring 4 inches in width and 2 inches in height.

WARRANTY AND SUPPORT

The Sharper Image White Noise Sound Machine is backed by a **90-day manufacturer warranty**. For any questions, issues, or detailed product support, please refer to the official User Manual PDF.

You can download the full User Manual (PDF) [here](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question