

Total Tools TGT11226

Total Tools TGT11226 Electric Pressure Washer User Manual

BRAND: TOTAL TOOLS

Model: TGT11226

Introduction

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your Total Tools TGT11226 Electric Pressure Washer. Please read these instructions carefully before using the appliance and retain them for future reference.

Safety Information

General Safety Warnings:

- Always ensure the power supply matches the voltage specified on the product label (220-240V ~ 50Hz).
- Do not operate the pressure washer if the power cord or plug is damaged.
- Keep children and pets away from the operating area.
- Wear appropriate personal protective equipment, including eye protection, during operation.
- Never direct the water jet at people, animals, electrical equipment, or the appliance itself.
- Ensure all connections are secure before starting the unit.
- Disconnect from the power supply before performing any maintenance or cleaning.

Package Contents

Upon unpacking, verify that all components are present and undamaged:

- Total Tools TGT11226 Electric Pressure Washer Unit
- Water Spray Gun Set
- 5-meter High-Pressure Hose
- Soap Tank
- User Manual

- Standard accessories (e.g., nozzles, connectors - specific types may vary)

Product Overview

Familiarize yourself with the main components of your pressure washer.



Image: The Total Tools TGT11226 Electric Pressure Washer, showing the main unit, high-pressure hose, and spray gun assembly.

The pressure washer features a compact design, a robust copper wire motor, and an integrated automatic stop system for enhanced safety and efficiency. It includes a dedicated soap tank for detergent application.

Setup

1. **Assembly:** Attach the high-pressure hose to the pressure washer unit and the spray gun. Ensure all connections are tightened securely to prevent leaks.
2. **Water Supply Connection:** Connect a garden hose (not included) to the water inlet of the pressure washer. Ensure the water supply is clean and free of debris.

3. **Power Connection:** Plug the power cord into a grounded electrical outlet (220-240V ~ 50Hz).
4. **Bleeding Air:** Before starting, turn on the water supply and squeeze the spray gun trigger to allow air to escape from the system until a steady stream of water emerges.

Operating Instructions

1. **Starting the Unit:** After connecting water and power, turn the ON/OFF switch to the 'ON' position. The motor will start when the trigger is squeezed and stop automatically when released (automatic stop system).
2. **Using the Spray Gun:** Hold the spray gun firmly with both hands. Adjust the nozzle (if applicable) to achieve the desired spray pattern.
3. **Applying Detergent (Soap Tank):** Fill the integrated soap tank with appropriate pressure washer detergent. Attach the detergent nozzle (if provided) or adjust the spray gun to low-pressure mode to draw detergent from the tank. Apply detergent to the surface, allow it to soak, then rinse with high-pressure water.
4. **Cleaning Technique:** Start cleaning from the top of the surface and work downwards. Maintain a safe distance from the surface to avoid damage.
5. **Shutting Down:**
 - a. Turn the ON/OFF switch to the 'OFF' position.
 - b. Turn off the water supply.
 - c. Squeeze the spray gun trigger to release any remaining pressure in the system.
 - d. Unplug the power cord from the outlet.
 - e. Disconnect the garden hose and high-pressure hose.

Maintenance

Regular maintenance ensures optimal performance and extends the life of your pressure washer.

- **Cleaning:** After each use, clean the exterior of the unit with a damp cloth. Clear any debris from the nozzles and water inlet filter.
- **Storage:** Store the pressure washer in a dry, frost-free environment. Drain all water from the pump, hoses, and spray gun before storing to prevent freezing damage.
- **Hose and Cord Care:** Coil the high-pressure hose and power cord neatly to prevent kinks or damage.

Troubleshooting

Problem	Possible Cause	Solution
Unit does not start	No power supply; Faulty power cord/plug; ON/OFF switch off.	Check power connection; Inspect cord/plug for damage; Turn ON/OFF switch to 'ON'.
Low pressure	Insufficient water supply; Clogged nozzle; Air in the system; Leaks in connections.	Ensure adequate water flow; Clean nozzle; Bleed air from system; Check and tighten all connections.
Water leaks	Loose connections; Damaged O-rings/seals.	Tighten all connections; Replace damaged O-rings/seals.
Motor runs continuously when trigger is not pressed	Automatic stop system malfunction; Internal leak.	Check for leaks; If problem persists, contact customer support.

Specifications

Feature	Detail
Model Number	TGT11226
Type	Pressure Washer
Power Source	Corded Electric
Voltage & Frequency	220-240V ~ 50Hz
Motor Type	Copper Wire Motor
Max Operating Pressure	2200 PSI (150 Bar)
Max Flow Rate	6.0 Liters/Minute
Hose Length	5 meters
Features	Automatic Stop System, Integrated Soap Tank
Product Dimensions	10 x 20 x 37 cm
Product Weight	209 grams

Warranty and Support

For warranty information, technical support, or to inquire about replacement parts, please refer to the contact details provided with your purchase documentation or visit the official Total Tools website. Keep your proof of purchase for warranty claims.