

Bosch TDA503011P

Bosch Steam Iron TDA503011P User Manual

Model: TDA503011P | Brand: Bosch | Power: 3000W

1. INTRODUCTION

Thank you for choosing the Bosch Steam Iron TDA503011P. This manual provides important instructions for the safe and efficient use of your appliance. Please read it carefully before first use and keep it for future reference.

This steam iron features a 3000W connected load for rapid heating, a CeraniumGlissée soleplate for optimal glide and steam distribution, and an automatic shut-off function for enhanced safety. It also includes a powerful 200-gram steam shot for stubborn wrinkles, a water spray function, a precision ironing tip, and an anti-drip system.

2. SAFETY INSTRUCTIONS

- Always ensure the voltage indicated on the rating plate corresponds to your mains voltage.
- Do not leave the iron unattended while it is switched on or connected to the mains.
- Keep the iron and its cord out of reach of children.
- Never immerse the iron in water or any other liquid.
- Do not operate the iron with a damaged cord or plug, or if it has been dropped or damaged.
- The soleplate can become extremely hot. Avoid direct contact with skin.
- Always unplug the iron before filling with water, emptying, or cleaning.
- Use the iron only for its intended household purpose.

3. SETUP

3.1 First Use

- Remove any stickers or protective foil from the soleplate.
- It is normal for a slight odor or smoke to occur during the first use as manufacturing residues burn off. This will disappear after a short time.

- Iron an old piece of fabric first to ensure no residues are transferred to your garments.

3.2 Filling the Water Tank

1. Ensure the iron is unplugged from the mains.
2. Open the water inlet cover.
3. Fill the water tank with tap water up to the 'MAX' mark. Do not overfill.
4. Close the water inlet cover securely.



Figure 1: Filling the water tank. Ensure the iron is unplugged before filling.

4. OPERATING THE IRON

4.1 Temperature Setting

1. Plug the iron into a suitable power outlet.
2. Turn the temperature control dial to the desired setting according to the fabric type. Refer to the garment care labels.
3. The indicator light will illuminate, showing the iron is heating. It will turn off when the set temperature is reached.



Figure 2: Adjusting the temperature dial for different fabric types.

4.2 Steam Functions

- **Continuous Steam:** For continuous steam, set the temperature to the steam zone (usually between '••' and 'MAX'). The iron will produce steam automatically once the temperature is reached.
- **Steam Shot:** Press the steam shot button for an extra burst of steam (up to 200 grams) to remove stubborn creases. Wait a few seconds between shots.
- **Vertical Steam:** The steam shot can also be used for vertical steaming of hanging garments or curtains. Hold the iron vertically a few centimeters away from the fabric.

4.3 Water Spray Function

Press the spray button to moisten dry areas of fabric, making ironing easier.

4.4 Anti-Drip System

The anti-drip system prevents water from dripping onto your garments when ironing at low temperatures.

4.5 Precision Ironing Tip

The specially designed small ironing tip allows for easy ironing around buttons, seams, and collars.

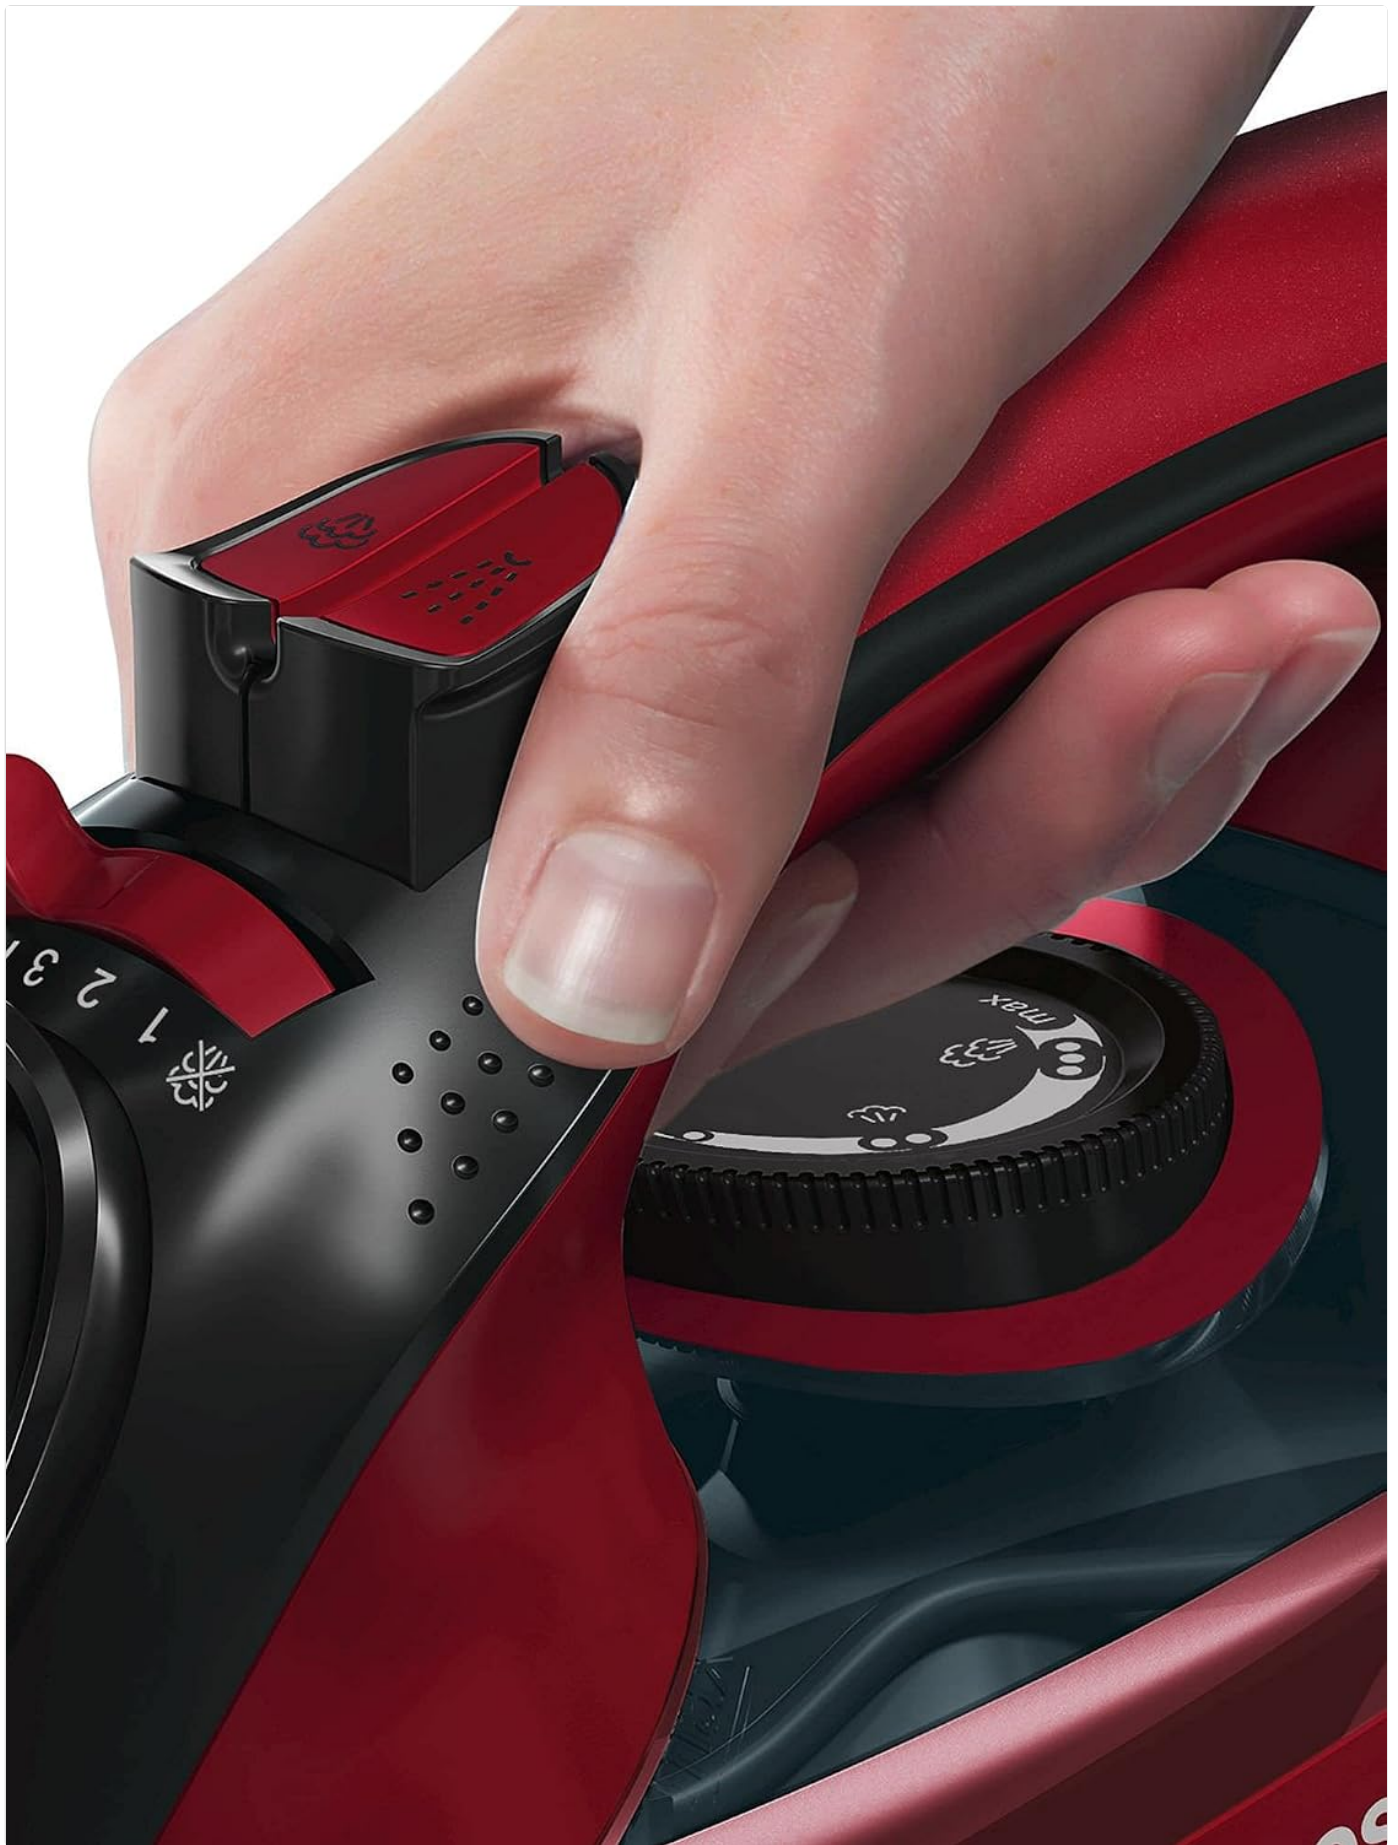


Figure 3: The CeraniumGlissée soleplate with steam channels and precision tip.

4.6 Automatic Shut-off

For your safety, the iron will automatically switch off if left stationary for a period of time (horizontally for 30 seconds, vertically for 8 minutes). To reactivate, simply move the iron.

4.7 Cable Management

The 2-meter extra-long cable with a flexible hinge allows for easy maneuverability and convenient storage.



Figure 4: Flexible cable joint for ease of use and storage.

5. MAINTENANCE

5.1 Cleaning the Soleplate

- Allow the iron to cool completely.
- Wipe the soleplate with a damp cloth and a non-abrasive cleaner if necessary.
- Do not use abrasive pads, scourers, or harsh chemicals as these can damage the soleplate.

5.2 Descaling

Regular descaling is crucial for maintaining the performance and extending the lifespan of your iron, especially in areas with hard water. Limescale deposits can be removed using a special descaling liquid designed for steam irons. Follow the instructions provided with the descaling product.

- Always ensure the iron is unplugged and cool before descaling.
- Never use vinegar or other strong acids, as they can damage internal components.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Iron does not heat up.	Not plugged in; power outage; automatic shut-off activated.	Check power connection; check circuit breaker; move the iron to reactivate.
No steam or insufficient steam.	Water tank empty; temperature too low for steam; steam vents blocked.	Fill water tank; set temperature to steam zone; descale the iron.
Water drips from the soleplate.	Temperature too low for steam; anti-drip system not functioning.	Increase temperature to steam zone; if problem persists, contact service.
White flakes or brown stains on clothes.	Limescale buildup; impurities in water.	Descal the iron; use distilled or demineralized water if tap water is very hard.

7. SPECIFICATIONS

Feature	Detail
Brand	Bosch
Model Number	TDA503011P
Power	3000 Watts
Soleplate Type	CeraniumGlissée
Steam Shot	200 grams
Automatic Shut-off	Yes
Anti-Drip Function	Yes
Water Spray Function	Yes

Feature	Detail
Cable Length	2 meters
Color	Red

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Bosch website. Keep your purchase receipt as proof of purchase for any warranty claims.

If you encounter any issues not covered in this manual, please contact Bosch customer service for assistance.

© 2023 Bosch. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question