

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Golf Buddy](#) /
- › [GOLFBUDDY Voice 2S+ Talking GPS Rangefinder User Manual](#)

Golf Buddy Voice 2S+

GOLFBUDDY Voice 2S+ Talking GPS Rangefinder User Manual

Model: Voice 2S+ | Brand: GOLFBUDDY

1. INTRODUCTION

The GOLFBUDDY Voice 2S+ is a compact and versatile talking GPS rangefinder designed to enhance your golf game. It provides precise distances to the front, center, and back of the green, along with features like slope adjustment, shot distance measurement, and hazard information. This manual will guide you through the setup, operation, and maintenance of your device.



Figure 1: Front view of the GOLFBUDDY Voice 2S+ device displaying yardage information.

2. SETUP

2.1 Initial Charging

Before first use, fully charge your GOLFBUDDY Voice 2S+. Connect the device to a USB power source using the provided USB charging cable. A full charge provides up to 18 hours of battery life in golf mode with GPS enabled.

2.2 Power On/Off

To power on the device, slide the On/Off button located on the side. To power off, slide the button to the OFF position. The device features one-touch play, automatically searching for courses and recognizing holes when powered on.

Product Spec



Figure 2: The power switch location and the automatic course search screen.

2.3 Language Settings

The device supports 11 languages, with 8 preloaded. Refer to the on-screen menu or accompanying quick start guide for instructions on selecting your preferred language.

2.4 Course Updates

The GOLFBUDDY Voice 2S+ comes preloaded with over 40,000 courses worldwide. Free updates are available to ensure the most current course data. Visit the official GOLFBUDDY website for instructions on how to update your device.

3. OPERATING INSTRUCTIONS

3.1 Basic Distance Measurement

Press the main button once to hear and see the distances to the front, center, and back of the green. The device provides real-time distance information on both audio and screen interfaces.



Figure 3: Display indicating distances to the front, center, and back of the green.

3.2 Slope Mode

The Voice 2S+ includes an on/off slope feature that provides slope-adjusted distances for varying elevations, enhancing accuracy. Consult the device's menu or quick start guide to activate or deactivate this mode.

GOLF BUDDY®

▶ SLOPE ON MODE



- GB Voice 2S+ comes with an on/off slope feature that provides slope-adjusted distances for various elevations for more accuracy.

KEY FEATURES

- Slope mode on/off
- 18 hours in golf mode
- Distance readings to the front/center/back of the green
- Shot distance measurement
- Automatic course and hole recognition
- 11 languages, 8 preloaded
- Male / Female voice option
- 40,000 worldwide golf courses

Figure 4: The device display with the slope mode icon visible.

3.3 Shot Distance Measurement

To measure your shot distance:

1. Press the Mode button twice to initiate the shot distance measurement function.
2. Press the OK button to start the measurement at your current position.
3. Walk to your ball's landing spot and press the OK button again to complete the measurement. The device will display the distance traveled.



Figure 5: Visual guide for using the shot distance measurement feature.

3.4 Hazard Information

To view hazard information for the current hole, press the Mode button while on the distance information screen. The display will show distances to various obstacles, marked with L/R for left/right and F/B for front/back.



Figure 6: Display showing distances to hazards like bunkers and water.

3.5 Wearing Options and Reverse Mode

The GOLFBUDDY Voice 2S+ can be conveniently clipped onto your hat or belt. When worn on a belt, you can utilize the reverse mode to easily read the display without removing the device.

▶ ONE-TOUCH PLAY

Automatic course search and hole recognition when power is turned on.



Figure 7: Comparison of Standard Mode and Reverse Mode display when worn on a belt.

4. FEATURES OVERVIEW

- **One-Button Precision:** Provides distances to the front, center, and back of the green with a simple button press.
- **Slope Mode:** On/off slope feature for adjusted distances based on elevation.
- **Automatic Course & Hole Recognition:** Seamlessly identifies your course and current hole.
- **Shot Distance Measurement:** Accurately measures the distance of your shots.
- **Voice Guidance:** Convenient audio feedback for distances.
- **Display:** Clear 1-inch LCD showing distances simultaneously.
- **Waterproofing:** IPX3 level for protection against splashes.
- **Battery Life:** Up to 18 hours in golf mode (GPS enabled).
- **Preloaded Courses:** Access to over 40,000 courses worldwide with free updates.
- **Multilingual Support:** Supports 11 languages, 8 preloaded.
- **Compact Design:** Lightweight (1.1 oz) and small (1.8 x 1.8 x 0.5 inches) for easy portability.

- **Detachable Unit:** Offers versatility in how it's carried.

5. MAINTENANCE

5.1 Cleaning

Wipe the device with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals or abrasive cleaners, as these can damage the device's finish or screen.

5.2 Battery Care

To maximize battery life, avoid fully discharging the device frequently. Charge the device regularly, especially if it will be stored for an extended period. Store in a cool, dry place.

5.3 Storage

When not in use, store the GOLFBUDDY Voice 2S+ in a protective case or a safe place to prevent scratches or damage. Avoid extreme temperatures.

6. TROUBLESHOOTING

- **Device Not Powering On:** Ensure the battery is charged. Connect to a USB power source and attempt to power on.
- **Inaccurate Distances:** Ensure the device has a clear view of the sky for optimal GPS signal reception. Verify that the correct course and hole are recognized.
- **Battery Drains Quickly:** Ensure the device is fully charged before use. If the issue persists, the battery may be nearing the end of its lifespan.
- **Device Does Not Turn Off While Charging:** This can be an indication of a software or hardware issue. Disconnect from charger, power off, and try charging again. If the problem continues, contact customer support.
- **No Audio Output:** Check the volume settings. Ensure the device is not in silent mode.

For further assistance, refer to the official GOLFBUDDY support resources.

7. SPECIFICATIONS



Figure 8: Diagram illustrating key product dimensions and features.

Specification	Detail
Model Number	Voice 2S+
Item Weight	3.52 ounces (100g)
Product Dimensions	1.8 x 1.8 x 0.5 inches (45.7 x 45.7 x 12.7 mm)
Display Size	1 Inch LCD
Battery Type	1 Lithium Ion battery (required)
Battery Life	Up to 18 Hours (in golf mode with GPS)
Waterproofing	IPX3 Level
Connectivity	USB

Specification	Detail
Map Type	Worldwide (40,000+ courses preloaded)
Included Components	Voice 2S+ device

8. WARRANTY AND SUPPORT

8.1 Warranty Information

The GOLFBUDDY Voice 2S+ comes with a 1-Year Limited Warranty from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

8.2 Customer Support

For technical support, warranty claims, or general inquiries, please visit the official GOLFBUDDY website or contact their customer service department. Contact information can typically be found on the manufacturer's website or in the product packaging.