

[Manuals.plus](#) /

› [Dobe](#) /

› Dobe TP4-002 Dual Charging Dock for PS4 Wireless Controllers User Manual

Dobe TP4-002

Dobe TP4-002 Dual Charging Dock for PS4 Wireless Controllers

Model: TP4-002

Brand: Dobe

PRODUCT OVERVIEW

The Dobe TP4-002 Dual Charging Dock is designed to provide a convenient and efficient charging solution for your PlayStation 4 wireless controllers. This dock allows you to charge two controllers simultaneously, ensuring they are always ready for your gaming sessions. Its compact design makes it an ideal accessory for any gaming setup, minimizing clutter while maximizing charging capability.



Figure 1: Front view of the Dobe TP4-002 Dual Charging Dock, showing the two controller slots with micro USB connectors.

SETUP INSTRUCTIONS

1. **Unpack the Device:** Carefully remove the charging dock and the included Micro USB cable from its packaging.
2. **Connect to Power:** Insert the Micro USB end of the provided cable into the Micro USB port located at the rear of the charging dock.
3. **Connect to Power Source:** Connect the standard USB-A end of the cable to a compatible 5V DC power source. This can be a USB port on your PlayStation 4 console, a desktop computer, or a dedicated USB wall adapter (not included). Ensure the power source provides sufficient current (at least 1A for single controller, 2A for dual charging).
4. **Placement:** Place the charging dock on a stable, flat surface, away from direct sunlight, heat sources, and moisture.



Figure 2: The included Micro USB cable used to power the charging dock.

OPERATING INSTRUCTIONS

1. **Insert Controllers:** Gently align the Micro USB port on your PlayStation 4 wireless controller with the Micro USB connector in one of the charging slots on the dock. Push down firmly until the controller is securely seated.
2. **Charging Indication:** The LED indicator on the controller (or the dock, if applicable) will typically illuminate to indicate that charging has begun. Refer to your PS4 controller's manual for specific LED behavior during charging.
3. **Charging Time:** Charging time may vary depending on the controller's battery level and the power source. Charging two controllers simultaneously may extend the charging duration compared to charging a single controller.
4. **Remove Controllers:** Once charging is complete, gently lift the controller from the dock.



Figure 3: Close-up view of one of the micro USB charging ports on the dock, where the controller connects.

MAINTENANCE

- **Cleaning:** To clean the charging dock, disconnect it from the power source. Use a soft, dry cloth to wipe down the surface. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the plastic.
- **Storage:** When not in use for extended periods, store the charging dock in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Handling:** Avoid dropping the device or subjecting it to strong impacts, which can damage internal components.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Controller not charging	Loose connection; Insufficient power; Damaged cable/dock; Controller issue	Ensure controller is seated correctly. Try a different USB port or power adapter. Check cable for damage. Test with another controller.
Slow charging	Low current power source; Charging two controllers simultaneously	Use a power source with higher current output (e.g., 5V/2A adapter). Charge one controller at a time if faster charging is needed.
Dock not powering on	No power; Faulty cable/dock	Verify power source is active. Try a different USB cable. Ensure the cable is fully inserted into the dock.

SPECIFICATIONS

- Brand:** Dobe
- Model:** TP4-002
- Compatible Devices:** PlayStation 4 Wireless Controllers
- Input Voltage:** DC 5V
- Input Current:** 500mA x 2
- Material:** ABS
- Color:** Grey
- Number of USB Ports:** 2 (for controllers)
- Power Source:** Corded Electric (via Micro USB)
- USB Cable Length:** 80 cm
- Product Dimensions:** Approximately 16.8 x 9.2 x 4.1 cm
- Item Weight:** 90 grams
- Mounting Type:** Tabletop

WARRANTY INFORMATION

This Dobe product is covered by a standard manufacturer's warranty against defects in materials and workmanship. The specific duration and terms of the warranty may vary by region and retailer. Please retain your proof of purchase for warranty claims. For detailed warranty information, refer to the documentation provided with your purchase or contact the retailer.

CUSTOMER SUPPORT

For technical assistance, troubleshooting, or general inquiries regarding your Dobe TP4-002 Dual Charging Dock, please contact your point of purchase or refer to the official Dobe website for support resources. When contacting support, please have your product model number (TP4-002) and purchase details ready.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question