Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- VIBE /
- > VIBE LED Light Bar Multicolor with Remote Control User Manual

VIBE FB-BLD-BLK

VIBE LED Light Bar Multicolor with Remote Control

Model: FB-BLD-BLK

Introduction Safety Information Package

Contents Setup Operation Maintenance Troubleshooting Specifications Warranty & Support

1. Introduction

This manual provides essential information for the safe and effective use of your VIBE LED Light Bar. This multicolor LED light bar is designed to enhance indoor environments with customizable lighting effects, controlled conveniently via a remote.



Figure 1: The VIBE LED Light Bar with its remote control and USB power cable.

2. SAFETY INFORMATION

Please read and understand all safety instructions before using this product. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Indoor Use Only: This product is designed for indoor use in dry locations. Do not expose to water or moisture.
- **Electrical Safety:** Ensure the power source voltage matches the product's requirements (120V). Do not overload electrical outlets.
- Avoid Water: This product is *not* water resistant. Do not use near sinks, bathtubs, or in damp environments.

- Ventilation: Do not cover the light bar or obstruct its ventilation.
- Children and Pets: Keep out of reach of children and pets.
- **Handling:** Handle with care. While the base provides stability, the light bar can be top-heavy and may tip if not placed securely.
- Cleaning: Disconnect from power before cleaning. Use a soft, dry cloth.

3. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- VIBE LED Light Bar (Model: FB-BLD-BLK)
- Remote Control
- USB Power Cable
- 2 x AAA Batteries (for remote control)



Figure 2: The VIBE LED Light Bar packaging, indicating included components.

4. SETUP

- 1. Unpack: Carefully remove all components from the packaging.
- 2. **Install Remote Batteries:** Open the battery compartment on the back of the remote control. Insert the 2 AAA batteries, ensuring correct polarity (+/-). Close the compartment.
- 3. **Connect Power:** Insert the small end of the USB power cable into the port on the base of the LED Light Bar. Plug the larger USB end into a compatible USB power adapter (not included) or a powered USB port (e.g., on a computer or wall charger).

4. **Placement:** Place the LED Light Bar on a stable, flat surface. For wall mounting, ensure the surface is suitable and secure. Due to its design, ensure the light bar is placed in a location where it will not be easily knocked over.

5. OPERATING INSTRUCTIONS

The VIBE LED Light Bar is controlled using the included remote control.

- Power On/Off: Press the Green Power Button to turn the light bar ON. Press the Red Power Button to turn the light bar OFF.
- Color Selection: The remote features a variety of colored buttons. Press any colored button to change the light bar
 to that specific color.
- Brightness Adjustment: Use the ▲ (up arrow) and ▼ (down arrow) buttons to increase or decrease the brightness of the selected color.
- Dynamic Modes: The remote includes several dynamic lighting modes:
 - FLASH: Rapidly cycles through colors.
 - SMOOTH: Smoothly transitions between colors.
 - FADE: Gradually fades between colors.
 - STROBE: Flashes colors on and off.
- Mode Speed Adjustment: For dynamic modes, use the gear-shaped buttons (**) to adjust the speed of the color transitions or flashes.

6. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your LED Light Bar.

- Cleaning: Always disconnect the light bar from the power source before cleaning. Use a soft, dry, lint-free cloth to wipe the surface. Do not use abrasive cleaners, solvents, or harsh chemicals.
- Storage: When not in use for extended periods, store the light bar in a cool, dry place, away from direct sunlight and
 extreme temperatures.
- Battery Replacement: If the remote control's functionality diminishes, replace the 2 AAA batteries.

7. TROUBLESHOOTING

If you encounter issues with your VIBE LED Light Bar, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Light bar does not turn on.	No power, loose connection, remote battery dead.	Ensure USB cable is securely connected and plugged into a working power source. Check remote batteries and replace if necessary.
Remote control is not working.	Dead batteries, remote not aimed at sensor, interference.	Replace remote batteries (2 AAA). Ensure direct line of sight between remote and light bar sensor. Remove any obstructions.
Light bar is stuck on one color or flashing.	Incorrect mode selected, remote malfunction.	Press a specific color button on the remote to exit dynamic modes. If the remote is unresponsive, try replacing its batteries. Unplug the light bar for 30 seconds and plug it back in to reset.

Problem	Possible Cause	Solution
Light bar is unstable or tips over easily.	Unstable surface, light bar is top-heavy.	Place the light bar on a firm, level, and stable surface. Ensure it is not in a high-traffic area where it could be accidentally bumped.


8. SPECIFICATIONS

Feature	Detail
Brand	VIBE
Model Number	FB-BLD-BLK
Product Dimensions	3.5 x 2 x 11 inches
Item Weight	6.6 ounces (0.41 Pounds)
Light Source Type	LED
Color	Black (housing), Multicolor (light)
Material	Plastic
Finish Type	Polished
Power Source	Corded Electric (USB)
Voltage	120 Volts
Controller Type	Remote Control
Connectivity Technology	RF (Radio Frequency)
Indoor/Outdoor Usage	Indoor
Water Resistance Level	Not Water Resistant
Batteries Required	2 AAA (included for remote)

9. WARRANTY & SUPPORT

For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official VIBE website. Keep your purchase receipt for warranty claims.

© 2023 VIBE. All rights reserved.

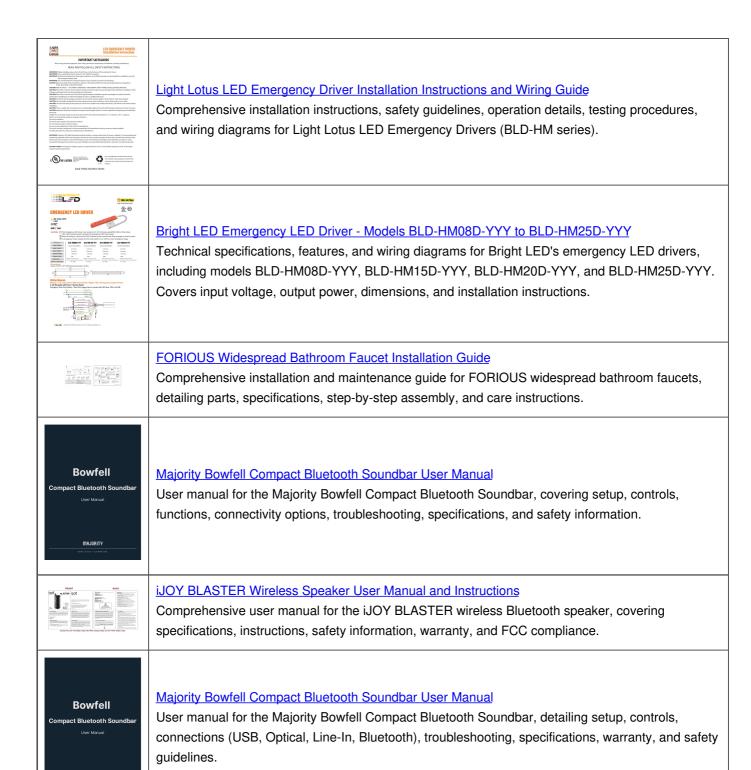

MAJORITY