



Manuals.plus /

- › Lemax /
- › LEMAX Santa's Sleigh Spinners Model 14833 Instruction Manual

Lemax 14833

LEMAX Santa's Sleigh Spinners Model 14833 Instruction Manual

Your guide to setting up, operating, and maintaining your festive animated display.

INTRODUCTION

The LEMAX Santa's Sleigh Spinners Model 14833 is a delightful addition to any Christmas village collection. This animated and lighted electronic component features spinning reindeers and riders that revolve, rise, and fall, creating a dynamic and festive display. Lights around the platform flash on and off alternately, enhancing the visual appeal. This unit is designed for indoor use and operates with an included adaptor.



Image: The LEMAX Santa's Sleigh Spinners Model 14833, showcasing its festive design with spinning reindeers and revolving sleighs around a central Christmas tree structure.

SAFETY INFORMATION

- Always ensure the product is placed on a stable, flat surface to prevent tipping.
- Keep the unit away from water or excessive moisture to prevent electrical hazards.
- Use only the provided power adapter. Using an incorrect adapter may damage the unit or pose a fire risk.
- Do not attempt to open or repair the unit yourself. Refer to qualified service personnel for any repairs.
- Keep out of reach of small children and pets to prevent accidental damage or injury due to small moving parts.
- Unplug the unit from the power source when not in use or before cleaning.

PACKAGE CONTENTS

Verify that all items are present in the package:

- LEMAX Santa's Sleigh Spinners Model 14833 unit

- Power Adapter
- Instruction Manual (this document)

SETUP

1. **Unpacking:** Carefully remove the Santa's Sleigh Spinners unit from its packaging. Retain all packaging materials for future storage or transport.
2. **Placement:** Place the unit on a flat, stable, and dry surface. Ensure there is enough space around the unit for its animated features to operate without obstruction.
3. **Power Connection:** Locate the power input port on the unit. Connect the provided power adapter to the unit, then plug the adapter into a standard electrical outlet.

OPERATING INSTRUCTIONS

1. **Power On/Off:** The unit features a control switch for all functions. Locate this switch, typically on the back or side of the base. Flip the switch to the "ON" position to activate the unit.
2. **Animation:** Once powered on, the reindeers will begin spinning, and the sleighs with riders will revolve, rise, and fall.
3. **Lighting:** The lights around the platform will flash on and off alternately, creating a festive light display.
4. **Volume Control:** If your unit includes sound, use the volume control knob or switch (if present) to adjust the audio level to your preference.
5. **Power Off:** To turn off the unit, flip the control switch to the "OFF" position and unplug the power adapter from the electrical outlet.

MAINTENANCE

- **Cleaning:** Gently dust and clean the unit with a soft, dry cloth as needed. Do not use liquid cleaners or abrasive materials, as these may damage the finish or electronic components.
- **Storage:** When not in use, store the unit in its original packaging in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Inspection:** Periodically inspect the power cord and adapter for any signs of damage. If damage is found, discontinue use and replace the adapter with an approved LEMAX replacement.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not power on.	Power adapter not connected or faulty.	Ensure the power adapter is securely plugged into both the unit and the electrical outlet. Test the outlet with another device.
Animation is not working.	Obstruction in moving parts or internal malfunction.	Check for any visible obstructions around the spinning reindeers or revolving sleighs. If none, power cycle the unit. If the issue persists, contact customer support.
Lights are not flashing.	Loose connection or faulty LED.	Ensure all connections are secure. If individual lights are out, they may be faulty. Contact customer support if multiple lights fail.
Sound is not working or is distorted.	Volume too low or speaker issue.	Adjust the volume control. Ensure the unit is not placed in an enclosed space that might muffle the sound.

SPECIFICATIONS

- **Model Number:** 14833
- **Brand:** Lemax
- **Material:** Electronic Component, Ceramic Porcelain, Resin
- **Approximate Dimensions (H x W x D):** 10.83 x 10.63 x 11.61 inches (27.5 x 27 x 29.5 cm)
- **Current Draw:** Approximately 460mA at 4.5V DC
- **Control:** Volume Control and Power Switch for all functions
- **Power:** Adaptor included
- **Year Released:** 2021
- **Item Weight:** 3.81 pounds
- **UPC:** 728162148339

WARRANTY AND SUPPORT

For warranty information, product support, or to purchase replacement parts, please refer to the official Lemax website or contact their customer service directly. Keep your proof of purchase for warranty claims. For further assistance, visit the Lemax Store on Amazon.