

[Manuals.plus](#) /

› [XINJIA](#) /

› XINJIA XJ-852 Electronic Watch User Manual

XINJIA XJ-852

XINJIA XJ-852 Electronic Watch User Manual

Model: XJ-852

1. INTRODUCTION

This manual provides essential instructions for the operation and maintenance of your XINJIA XJ-852 Electronic Watch. This watch is designed for outdoor sports and leisure, featuring a clear LCD display, luminous backlight, and water resistance. It offers various functions including time display, stopwatch, alarm, and hourly chime.



Figure 1.1: Front view of the XINJIA XJ-852 Electronic Watch. This image displays the watch face with its digital time display and various indicators.

2. PRODUCT OVERVIEW

2.1 Key Functions

The XINJIA XJ-852 watch features four primary control buttons located on its sides. Understanding their functions is crucial for operating the watch.

- **M (MODE) Key:** Used to cycle through different modes (Time, Alarm, Stopwatch).
- **S (START) Key:** Used to increment numbers during setting or to start/stop the stopwatch.
- **R (RESET) Key:** Used to change selection during setting or to reset the stopwatch.
- **L (LIGHT) Key:** Activates the cold light backlight for visibility in low-light conditions.



Figure 2.1: Front view of the XINJIA XJ-852 watch, highlighting the button labels (LIGHT, MODE, START, RESET) on its sides.

3. OPERATING INSTRUCTIONS

3.1 Time Display

The watch displays hour, minute, second, day of the week, day, and month. The time accuracy is approximately ± 45 seconds per month.

3.2 Setting Time and Date

To set the time and date:

1. Press the **M (MODE)** key repeatedly until the time setting mode is activated (usually indicated by flashing digits).
2. Use the **R (RESET)** key to select the digit or setting you wish to adjust (e.g., hours, minutes, month, day).
3. Use the **S (START)** key to increment the selected digit or setting.
4. Once all settings are correct, press the **M (MODE)** key again to exit the setting mode.

3.3 Cold Light Function

In low-light conditions, press the **L (LIGHT)** key to activate the cold light backlight, illuminating the display for clear visibility.

3.4 Stopwatch Function

The watch includes a stopwatch with segment timing.

1. Press the **M (MODE)** key to navigate to the stopwatch mode.
2. Press the **S (START)** key to begin timing.
3. Press the **S (START)** key again to pause timing.
4. Press the **R (RESET)** key to reset the stopwatch to zero.
5. To return to time display, press the **M (MODE)** key.

3.5 Alarm and Hourly Chime

The watch features an alarm and an hourly chime function.

1. Press the **M (MODE)** key to navigate to the alarm setting mode.
2. Use the **R (RESET)** key to select the hour or minute to set.
3. Use the **S (START)** key to adjust the selected value.
4. To activate or deactivate the alarm and hourly chime, typically a combination of **R (RESET)** and **S (START)** or a dedicated button press in alarm mode is used. Refer to on-screen indicators for confirmation.
5. Press the **M (MODE)** key to exit the alarm setting mode.

4. CARE AND MAINTENANCE

4.1 Water Resistance Guidelines

- **"Water Resistant" (e.g., WR30M):** This indicates resistance to splashes and rain. Do not immerse the watch in water.
- **"30 M Water Resistant (3 BAR)":** Suitable for swimming and car washing. *Do not operate buttons while the watch is submerged in water.*
- **"50 M Water Resistant (5 BAR)":** Suitable for swimming and pool diving. *It is still not recommended to operate buttons while the watch is submerged in water.*



Figure 4.1: Rear view of the XINJIA XJ-852 Electronic Watch, displaying the stainless steel case back with water resistance markings.

4.2 Environmental Precautions

- Avoid exposing the watch to extreme temperatures (heat or cold) and strong vibrations.
- Keep the watch away from strong electric fields, static electricity, and high-frequency environments.
- Do not expose the watch to gasoline, detergents, sprays, adhesives, paints, or other chemicals.

4.3 Cleaning

To clean the watch surface, use a soft cloth and clean water. Do not use chemical cleaners.

4.4 Servicing

This watch contains precision electronic components. Do not attempt to open the back cover or perform repairs yourself. Contact qualified personnel for servicing.

5. TROUBLESHOOTING

If you encounter issues with your XINJIA XJ-852 watch, please consider the following:

- **Display is blank:** The battery may be depleted. Contact a service center for battery replacement.
- **Incorrect time:** Refer to Section 3.2 "Setting Time and Date" to adjust the time.
- **Buttons not responding:** Ensure the watch is not in a locked mode (if applicable, though not specified for this model). If the issue persists, contact customer support.

For problems not covered here, please contact the seller or manufacturer for assistance.

6. SPECIFICATIONS

Model Number	XJ-852
Product Dimensions	25 x 4.4 x 1.4 cm
Item Weight	150 g
Time Accuracy	±45 seconds/month
Water Resistance	WR30M (Water Resistant 30M) - Refer to Section 4.1 for details.
Manufacturer	Wuhan Prisco

7. WARRANTY AND SUPPORT

Specific warranty information for the XINJIA XJ-852 Electronic Watch is not provided in this manual. Please refer to the product packaging or contact your retailer or the manufacturer directly for warranty details and customer support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question