

NC XJ-878

Xinjia Camouflage Outdoor Leisure Running Sports Digital Watch XJ-878 User Manual

Model: XJ-878 | Brand: NC

INTRODUCTION

This manual provides comprehensive instructions for the operation, maintenance, and care of your Xinjia Camouflage Outdoor Leisure Running Sports Digital Watch, model XJ-878. Please read this manual thoroughly to ensure proper use and to maximize the lifespan of your watch.

PRODUCT OVERVIEW

The Xinjia XJ-878 is a robust digital watch designed for outdoor activities, featuring a camouflage design, 50-meter water resistance, and various digital functions.



Figure 1: Front view of the Xinjia XJ-878 digital watch in black camouflage, showing the digital display and button labels.



Figure 2: Two Xinjia XJ-878 watches, black and green camouflage, illustrating the design variations.

KEY DESCRIPTIONS

The XJ-878 watch features four primary buttons for operation:

- **M—MODE:** Used to cycle through different modes (Time, Alarm, Stopwatch).
- **S—START:** Used to adjust values, start/stop stopwatch, or turn on/off alarm/hourly chime.
- **R—RESET:** Used to select digits for adjustment or reset stopwatch.
- **L—LIGHT:** Activates the cold light function for illumination.

SETUP AND INITIAL CONFIGURATION

Setting Time and Date:

1. From the normal time display mode, press the **MODE (M)** button three times to enter time setting mode. The seconds will begin to flash.
2. Press the **RESET (R)** button to cycle through the settings: Seconds → Hour → Minute → Month → Day → Day of the Week.
3. While a digit is flashing, press the **START (S)** button to adjust the value. Hold **START (S)** to rapidly advance the numbers.
4. Once all settings are complete, press the **MODE (M)** button to return to the normal time display.

12/24 Hour Format:

In the normal time display mode, press the **START (S)** button to toggle between 12-hour (AM/PM indicator) and 24-hour formats.

OPERATING INSTRUCTIONS

Using the Cold Light Function:

Press the **LIGHT (L)** button at any time to illuminate the display. The cold light will remain on for a few seconds.

Setting and Using the Alarm:

1. From the normal time display, press the **MODE (M)** button twice to enter alarm setting mode. The hour digits will flash.
2. Press the **RESET (R)** button to switch between setting the hour and minute.
3. Press the **START (S)** button to adjust the flashing hour or minute.
4. Once the desired alarm time is set, press the **MODE (M)** button to exit alarm setting mode.
5. To turn the alarm ON/OFF, in alarm mode, press the **START (S)** button. An alarm icon will appear/disappear on the display.

6. To turn the hourly chime ON/OFF, in alarm mode, press the**RESET (R)** button. A chime icon will appear/disappear.

When the alarm sounds, press any button to stop it.

Using the Stopwatch:

- 1. From the normal time display, press the**MODE (M)** button once to enter stopwatch mode.
- 2. Press the **START (S)** button to begin timing.
- 3. Press the **START (S)** button again to pause timing.
- 4. Press the **RESET (R)** button to reset the stopwatch to zero while it is paused.
- 5. To record split times (lap times), press the**RESET (R)** button while the stopwatch is running. The display will show the split time, but the stopwatch continues to run in the background. Press **RESET (R)** again to return to the running stopwatch display.
- 6. Press the **MODE (M)** button to exit stopwatch mode and return to normal time display.

MAINTENANCE AND CARE

Proper care will ensure the longevity and optimal performance of your Xinjia XJ-878 watch.

- **Cleaning:** Do not use chemical cleaners on the watch surface. Use a soft cloth and clean water to wipe the watch clean.
- **Temperature Extremes:** Avoid exposing the watch to environments with extreme heat or severe cold.
- **Vibration and Fields:** Avoid strong vibrations, strong electric fields, static electricity, and high-frequency environments.
- **Chemical Exposure:** Keep the watch away from gasoline, detergents, sprays, adhesives, paints, and similar chemicals.
- **Opening the Watch:** This watch contains precision electronic parts. Do not attempt to open the back cover unless you are a qualified professional.

WATER RESISTANCE GUIDELINES

The Xinjia XJ-878 watch is designed with specific water resistance capabilities. Please adhere to the following guidelines:

- **"Water Resistant" (No Meter Rating):** Indicates resistance to splashing water, rain, etc. *Do not submerge the watch in water.*
- **"30 M Water Resistant (3 BAR)":**Suitable for swimming and car washing. *Do not operate buttons while the watch is submerged in water.*
- **"50 M Water Resistant (5 BAR)":**Suitable for swimming and pool diving. *It is still not recommended to operate buttons while the watch is submerged in water.*

The Xinjia XJ-878 is rated for 50 meters water resistance, making it suitable for swimming and pool diving. However, avoid pressing buttons underwater to prevent water ingress.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Low battery.	Replace the battery. Contact a professional if unsure.

Problem	Possible Cause	Solution
Buttons are unresponsive.	Watch may be in an incorrect mode or internal issue.	Try pressing the MODE button repeatedly to cycle modes. If issue persists, contact support.
Time accuracy issues (significant deviation).	Extreme temperature exposure or internal malfunction.	Ensure watch is used within recommended temperature ranges. If problem continues, professional inspection may be needed.
Water inside the watch.	Buttons pressed underwater or seal compromised.	Immediately stop using the watch and seek professional repair to prevent further damage.

SPECIFICATIONS

- **Model:** XJ-878
- **Type:** Six-digit cold light sports watch
- **Display Functions:** Hour, Minute, Second, Day of the Week, Day, Month
- **Additional Functions:** Cold Light, Stopwatch (segment timing), Alarm, Hourly Chime
- **Time Accuracy:** ±45 seconds per month
- **Water Resistance:** 50 Meters (5 BAR)
- **Product Dimensions:** 24.4 x 4.4 x 1.75 cm
- **Weight:** 141 g
- **Manufacturer:** Wuhan Prisco

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided at the time of purchase or contact your retailer. As this product is composed of precision electronic parts, any repairs or internal inspections should only be performed by qualified professionals.

For further assistance, please visit the official website of the brand NC or contact their customer service.

© 2024 NC. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question