

[Manuals.plus](#) /

› [CHAUVET DJ](#) /

› CHAUVET DJ Intimidator Beam Q60 Stage Light User Manual

CHAUVET DJ Intimidator Beam Q60

CHAUVET DJ Intimidator Beam Q60 Stage Light User Manual

Model: Intimidator Beam Q60

Brand: CHAUVET DJ

INTRODUCTION

The CHAUVET DJ Intimidator Beam Q60 is a compact, high-performance moving head stage light designed to produce dynamic beam effects. Featuring a 60-watt RGBW LED, this unit offers continuous 360-degree pan and tilt movement, allowing for versatile and engaging light shows. Its robust design includes powerCON-compatible input/output connections for power linking and a quick-release 1/4-turn hanging bracket for easy installation and removal. This manual provides essential information for the safe and effective use of your Intimidator Beam Q60.

SAFETY INFORMATION

Read all instructions carefully before installation, operation, or maintenance. Keep this user manual for future reference.

- **Electrical Safety:** Always connect the unit to a grounded circuit. Ensure the power source voltage matches the unit's requirements. Disconnect power before cleaning or servicing.
- **Heat Management:** This unit generates heat. Ensure adequate ventilation around the fixture. Do not block ventilation openings. Maintain a minimum distance of 0.5 meters (1.6 feet) from flammable materials.
- **Mounting:** Securely mount the fixture using appropriate hardware and safety cables. Ensure the mounting surface can support the unit's weight.
- **Eye Safety:** Avoid direct eye exposure to the light source. The light output can be intense.
- **Handling:** Do not operate the unit if the housing is damaged. Refer all servicing to qualified personnel.

WHAT'S IN THE BOX

Verify that all components are present and in good condition upon unpacking.

- Intimidator Beam Q60 fixture
- Omega bracket

- Power cord
- Quick Reference Guide

SETUP

Follow these steps to set up your Intimidator Beam Q60 for operation.

1. **Unpacking:** Carefully remove the fixture and all accessories from the packaging. Inspect for any signs of damage during transit.
2. **Mounting:**



Image: Front view of the Intimidator Beam Q60, showing its compact design and light output lens.

The Intimidator Beam Q60 can be mounted in various orientations (e.g., truss, floor). Use the included Omega bracket to securely attach the fixture to a suitable mounting surface. Always use a safety cable (not included) as a secondary attachment. Ensure the fixture is stable and cannot vibrate loose.

3. **Power Connection:** Connect the supplied power cord to the powerCON-compatible input on the rear of the fixture. Plug the other end into a suitable grounded power outlet. For power linking multiple units, use powerCON-compatible cables (sold separately) to connect the power output of one unit to the power input of the next.
4. **DMX Connection (Optional):**



Image: Rear view of the Intimidator Beam Q60, highlighting the powerCON input/output and DMX in/out ports.

If controlling the unit via DMX, connect a DMX cable from your DMX controller's output to the DMX IN port on the Intimidator Beam Q60. For multiple units, daisy-chain DMX cables from the DMX OUT of one unit to the DMX IN of the next. Terminate the last unit in the chain with a DMX terminator.

OPERATING INSTRUCTIONS

The Intimidator Beam Q60 offers various operating modes, including standalone, sound-activated, master/slave, and DMX control.

- **Power On:** Once connected to power, the unit will initialize. The display will show the current mode or address.
- **Menu Navigation:** Use the control panel buttons (Menu, Up, Down, Enter) to navigate through the settings and select desired modes or parameters.
- **Standalone Mode:** The unit can run pre-programmed shows without an external controller. Select a desired program from the menu.
- **Sound-Activated Mode:** The unit can react to music via its built-in microphone. Adjust sensitivity as needed.
- **Master/Slave Mode:** Connect multiple units via DMX cables. Set one unit as 'Master' and others as 'Slave' to synchronize their operation.
- **DMX Control:** Set the DMX address for each fixture. Refer to the Quick Reference Guide for DMX channel assignments and control parameters. This mode allows for precise control over pan, tilt, color, dimmer, strobe, and other functions.
- **Totem Mode:** This built-in feature keeps the light beam focused on and over the dance floor, preventing it from shining into the audience's eyes when continuous 360-degree movement is not desired. Activate this mode via the menu settings.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your Intimidator Beam Q60.

- **Cleaning:** Periodically clean the exterior housing and optical lenses with a soft, lint-free cloth. Do not use harsh chemicals or abrasive materials. Ensure the unit is powered off and cool before cleaning.

- **Inspection:** Regularly inspect power cables, DMX cables, and mounting hardware for any signs of wear, damage, or loose connections. Replace damaged components immediately.
- **Ventilation:** Ensure ventilation openings remain clear of dust and debris to prevent overheating.

TROUBLESHOOTING

If you encounter issues with your Intimidator Beam Q60, refer to the following common problems and solutions.

- **No Power:**
 - Check the power cord connection at both the fixture and the power outlet.
 - Verify the power outlet is active.
 - Ensure the power cable is not damaged.
- **No Light Output:**
 - Check dimmer settings in DMX mode or standalone program.
 - Ensure the unit is not in a blackout mode.
 - Verify the LED is functioning (if accessible and safe to check).
- **No Movement (Pan/Tilt):**
 - Check DMX connections and address if in DMX mode.
 - Ensure the unit is not in a frozen or static position program.
 - Verify there are no physical obstructions to movement.
- **Erratic Behavior:**
 - Check DMX signal integrity; ensure DMX cables are good and a terminator is used.
 - Try resetting the unit by power cycling.

If problems persist, contact CHAUVET DJ customer support.

SPECIFICATIONS

Detailed technical specifications for the Intimidator Beam Q60.

Feature	Specification
Model	Intimidator Beam Q60
Light Source	1 x 60W RGBW LED
Light Source Type	Light Emitting Diode
Maximum Compatible Light Source Wattage	60 Watts
Power Source	Corded Electric
Amperage	0.7 Amps
Product Dimensions (L x W x H)	5.9" x 8.8" x 12.6"
Item Weight	14.27 pounds
Color	Black
Material	Glass (Shade Material)
Mounting Type	Floor Mount (with Omega bracket for truss mounting)
Certification	CE



Image: Diagram showing the dimensions of the Intimidator Beam Q60: 5.9 inches (L), 8.8 inches (W), and 12.6 inches (H).

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official CHAUVET DJ website or contact their customer service department. Keep your proof of purchase for any warranty claims.

Online Resources: Visit the [CHAUVET DJ Store on Amazon](#) for additional product information and accessories.

© 2023 CHAUVET DJ. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B091SG4HDG>

More documents and user manuals: <https://manuals.plus/>