

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Samsung](#) /

› [SAMSUNG Jet 60 Pet Cordless Stick Vacuum Cleaner User Manual \(Model VS15A6032R7\)](#)

Samsung VS15A6032R7

SAMSUNG Jet 60 Pet Cordless Stick Vacuum Cleaner User Manual

Model: VS15A6032R7

INTRODUCTION

This manual provides essential instructions for the safe and efficient use of your SAMSUNG Jet 60 Pet Cordless Stick Vacuum Cleaner. Please read this manual thoroughly before operating the appliance and retain it for future reference.

IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with a damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without dust bin and/or filters in place.

- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance.
- Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- Use appliances only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.
- When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
- Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
- Do not use a battery pack or appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- Do not expose a battery pack or appliance to fire or excessive temperature. Exposure to fire or temperature above 130°C (265°F) may cause explosion.
- Follow all charging instructions and do not charge the battery pack or appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
- Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
- Do not modify or attempt to repair the appliance or the battery pack (as applicable) except as indicated in the instructions for use and care.

PACKAGE CONTENTS

Verify that all components are present in your package:



The SAMSUNG Jet 60 Pet Cordless Stick Vacuum Cleaner, shown with its main body, extension pipe, Jet Fit brush, and various accessories.



Collects more dust, dirt and debris

Fully washable, 0.8-liter high-capacity dust bin collects more dirt, dust and debris.



A diagram illustrating the components included in the box: Jet 60 Pet main unit, Combination Tool, Long-Reach Crevice Tool, Mini Motorized Tool, Battery, and Charger.

- **Jet 60 Pet Main Unit:** The primary vacuum body with motor and dustbin.
- **Jet Fit Brush:** Main cleaning head for various floor types.
- **Extension Pipe:** Connects the main unit to the cleaning head.
- **Combination Tool:** For dusting and upholstery.
- **Long-Reach Crevice Tool:** For tight corners and narrow spaces.
- **Mini Motorized Tool:** Reduces fine dust and pet hair from tight spaces.
- **Removable Battery:** Lithium-Ion battery for cordless operation.
- **Charger:** For recharging the battery.

SETUP AND ASSEMBLY

1. Assembling the Vacuum

1. Insert the extension pipe into the main body until it clicks securely.
2. Attach the desired cleaning head (e.g., Jet Fit Brush) to the other end of the extension pipe until it clicks.
3. Ensure the battery is fully charged before first use. Slide the battery into the slot on the main unit until it clicks.





The SAMSUNG Jet 60 Pet Cordless Stick Vacuum fully assembled, ready for use.

2. Charging the Battery

The battery can be charged while attached to the vacuum or separately. A full charge provides up to 40 minutes of runtime at minimum power with a non-motorized tool.

- **On-Vacuum Charging:** Connect the charger directly to the charging port on the main unit.
- **Off-Vacuum Charging:** Remove the battery from the main unit by pressing the release button and sliding it out. Connect the battery to the standalone charger.

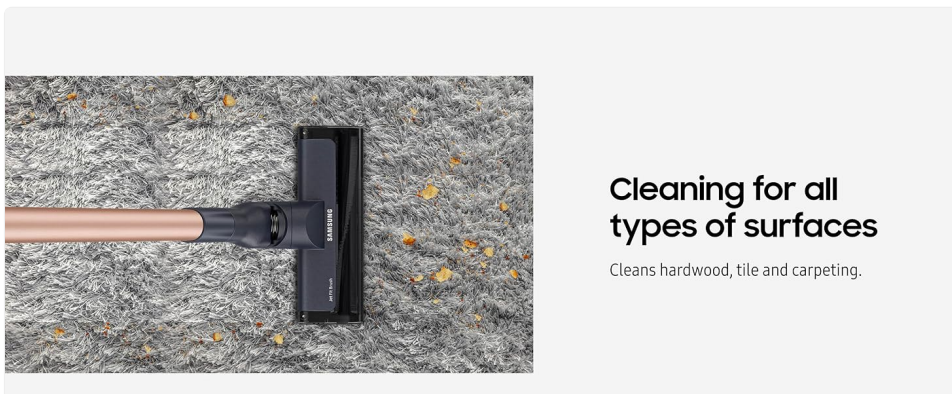


Illustration of the removable battery and charging options, including a battery level indicator showing up to 40 minutes of runtime.

3. Mounting Options

The vacuum can be mounted on a wall or stored upright using the charging stand.



The SAMSUNG Jet 60 Pet Cordless Stick Vacuum mounted on a wall for storage and charging, with accessories placed nearby.

OPERATING INSTRUCTIONS

1. Power On/Off and Suction Control

Press the power button to turn the vacuum on or off. Use the '+' and '-' buttons to adjust the suction power according to your cleaning needs.



Close-up of the vacuum's control panel, showing the power button and '+' / '-' buttons for suction adjustment.

2. Cleaning Different Surfaces

The Jet Fit Brush is designed for effective cleaning on hardwood, tile, and carpeting.



The Jet 60 Pet vacuum cleaning a carpeted surface, demonstrating its versatility for various floor types.

3. Using Attachments

Select the appropriate attachment for specific cleaning tasks:

- **Combination Tool:** Ideal for dusting furniture, shelves, and delicate surfaces.
- **Long-Reach Crevice Tool:** Perfect for narrow gaps, corners, and along baseboards.
- **Mini Motorized Tool:** Effectively removes pet hair and fine dust from upholstery, stairs, and car interiors.

Up to 40 mins, no recharge needed

Conveniently remove battery for flexible charging and swap for a spare for extended cleaning.



A user cleaning a sofa with the SAMSUNG Jet 60 Pet vacuum using the Mini Motorized Tool, suitable for pet hair removal.


MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

1. Emptying and Cleaning the Dust Bin

The 0.8-liter dust bin should be emptied regularly. It is fully washable for thorough cleaning.

1. Detach the dust bin from the main unit.
2. Open the dust bin and empty its contents into a waste receptacle.
3. Rinse the dust bin with water if necessary and allow it to dry completely before reattaching.

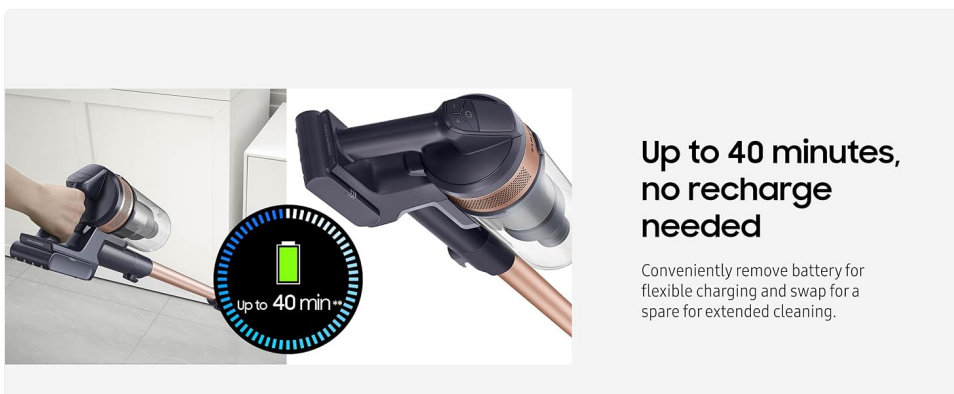

Up to 40 minutes, no recharge needed

Conveniently remove battery for flexible charging and swap for a spare for extended cleaning.

A hand emptying collected dust and debris from the vacuum's 0.8-liter capacity dust bin into a trash can.


2. Filter Maintenance

The vacuum features a multi-layered filtration system, including a metal mesh grille filter, Jet Cyclone system, washable microfilter, and fine dust filter. Regular cleaning of these filters is crucial for maintaining suction power and air quality.

1. Remove the dust bin and access the internal filters.
2. Clean the metal mesh grille filter and the Jet Cyclone system by tapping out debris.
3. The washable microfilter can be rinsed under running water. Ensure it is completely dry before reinstallation.
4. The fine dust filter should also be cleaned periodically.



An exploded view of the vacuum's filtration system, showing the dust bin, metal mesh filter, Jet Cyclone assembly, and fine dust filter components.

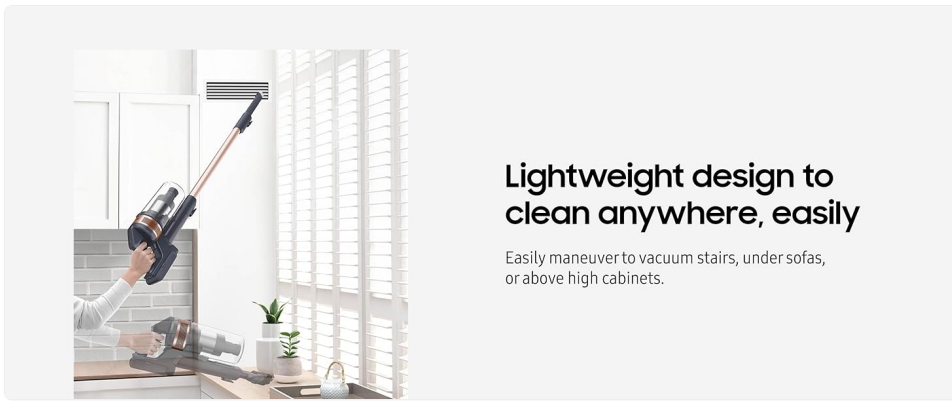

Lightweight design to clean anywhere, easily

Easily maneuver to vacuum stairs, under sofas, or above high cabinets.

A detailed diagram illustrating the 5-step filtration process: Main Cyclone, Metal Mesh Grille Filter, Jet Cyclone, Washable Micro Filter, and Fine Dust Filter, designed to trap 99.999% of microdust.

3. Brush Maintenance

Periodically check the Jet Fit Brush for tangled hair or debris. Remove any obstructions to ensure effective cleaning.

TROUBLESHOOTING

Refer to the table below for common issues and their solutions.

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is not charged or not properly inserted.	Ensure battery is fully charged and securely inserted into the main unit.
Low suction power.	Dust bin is full; filters are clogged; brush roll is obstructed.	Empty the dust bin. Clean all filters. Remove any tangled hair or debris from the brush roll.
Battery runtime is short.	Battery not fully charged; using high power mode; battery degradation.	Ensure battery is fully charged. Use lower power settings for longer runtime. Consider purchasing a spare battery if needed.
Brush roll not spinning.	Obstruction in the brush roll; brush head not properly attached.	Check for and remove any obstructions. Ensure the brush head is securely attached to the extension pipe.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Samsung
Model Name	Jet 60 Pet
Model Number	VS15A6032R7
Special Feature	Bagless, Lightweight Design
Filter Type	Disk, Multi-cyclonic, Fine Dust Filter

Feature	Detail
Included Components	Jet Fit Brush, Combination Tool, Long-Reach Crevice Tool, Mini Motorized Tool, Battery, Charger
Cordless	Yes
Dust Bin Capacity	0.2 Gallons (0.8 Liters)
Wattage	150 Air Watts (Max Suction Power)
Recommended Uses	Hardwood, Tile Floor, Carpet, Home
Form Factor	Stick
Color	Rose Gold (as per product title, though spec says Gold)
Product Dimensions	9.8"L x 8"W x 44.2"H
Battery Type	Lithium-Ion
Battery Life	Up to 40 minutes (minimum power, non-motorized tool)
Noise Level	60 Decibels
Item Weight	5.7 pounds
Control Method	Push Button, Touch

WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the warranty card included with your product or visit the official Samsung support website. Keep your proof of purchase for warranty claims.

Online Support: www.samsung.com/us/support/

