



[Manuals.plus](#) /

› [Eureka](#) /

› Eureka PowerSpeed NEU181A Upright Vacuum Cleaner User Manual

Eureka NEU181A

Eureka PowerSpeed NEU181A Upright Vacuum Cleaner User Manual

Model: NEU181A | Brand: Eureka

INTRODUCTION

The Eureka PowerSpeed NEU181A is a lightweight and powerful upright vacuum cleaner designed for efficient cleaning of carpets and hard floors. Its versatile features and included accessories make it suitable for various household cleaning tasks, including pet hair removal.

Lightweight and Compact

Carry around the house at ease. Great for everyday use.



10 Lbs



Figure 1: The Eureka PowerSpeed NEU181A, demonstrating its lightweight and portable design (approximately 10 lbs).

IMPORTANT SAFETY INFORMATION

WARNING:

- Always unplug the vacuum cleaner from the electrical outlet before performing any maintenance or cleaning.
- Do not use the vacuum cleaner on wet surfaces or to pick up liquids.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- When using the vacuum cleaner, the floor brush may become clogged by hairs and dirt. It is recommended to clean the roller brush and the belt every 2 weeks to prevent malfunction, overheating, or belt breakage.
- Use only as described in this manual. Use only manufacturer's recommended attachments.

WHAT'S IN THE BOX

Your Eureka PowerSpeed NEU181A package includes the following components:



Vacuum Cleaner Main Unit

Accessories

Three tools included to clean your home top to bottom.



Accessories (Dusting Brush, Pet Tool, Crevice Tool, Upholstery Tool)

Figure 2: Components included with your Eureka PowerSpeed NEU181A.

ASSEMBLY

Assembling your Eureka PowerSpeed NEU181A is quick and straightforward:

1. Insert the handle into the main vacuum body until it clicks securely into place.
2. Connect the hose to the designated port on the vacuum cleaner. Ensure it is firmly attached to prevent loss of suction.
3. Store the included accessories (crevice tool, dusting brush, pet tool) on the onboard storage clips for easy access.

Simple Assembly

Insert the handle, Secure the hose. And you are good to go.



Figure 3: Visual guide for simple assembly of the vacuum cleaner.

OPERATING INSTRUCTIONS

Powering On/Off

To turn the vacuum cleaner on or off, press the power button located on the main unit.

Height Adjustment

The Eureka PowerSpeed NEU181A features 5 height adjustment settings to optimize cleaning performance on different floor types. To adjust the height, ensure the handle is NOT in the upright locked position. Release the handle as if you are ready to vacuum, then turn the height adjustment knob located on the cleaner head to select the appropriate setting:

- Lowest settings: For bare floors and low-pile carpets.
- Higher settings: For medium-pile to high-pile carpets.



Figure 4: The vacuum effectively cleaning a carpet, suitable for various pile heights with proper adjustment.

Using Attachments

The vacuum comes with several tools for specialized cleaning:

- **Crevice Tool:** Ideal for cleaning tight spaces, corners, and along edges.
- **Dusting Brush:** Use for dusting furniture, blinds, lampshades, and other delicate surfaces.
- **Upholstery Tool:** Designed for cleaning upholstery, curtains, and car interiors.
- **Pet Tool:** Specifically designed to effectively pick up pet hair from various surfaces.

To use an attachment, detach the hose from the main unit and connect the desired tool to the end of the hose.

Detachable Handle

Reach hard to reach spots
both above and below.



Figure 5: The detachable handle allows for extended reach, useful for cleaning high or low areas.

Zero Maintenance Cost

Washable filter and bagless design ensures long-term performance and easy maintenance, providing efficient and hassle-free cleaning for your home.



Figure 6: The included pet tool is highly effective for removing pet hair from various surfaces.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner.

Emptying the Dust Cup

The extra-large 2.6L dust cup should be emptied regularly, especially when the debris reaches the "Max Fill" line. To empty:

1. Press the release button on the top handle to detach the dust cup from the main unit.
2. Position the dust cup over a trash bin.
3. Press the bottom release button to open the dust cup and empty its contents.
4. Close the bottom flap securely and reattach the dust cup to the vacuum.

Easy Empty Dust Cup

Clean up the dust cup with just one press. Get rid of the mess without a dirt on your hand!



Figure 7: Easy-empty dust cup design for convenient disposal of collected debris.

Cleaning the Filter

The washable foam filter helps maintain suction power and should be cleaned periodically. For best results, clean the filter every 2 weeks or as needed:

1. Remove the dust cup.
2. Carefully remove the foam filter from the dust cup assembly.
3. Rinse the filter under cool running water until the water runs clear.
4. Allow the filter to air dry completely for at least 24 hours before reinserting it into the vacuum. Do not use a dryer or other heating methods.
5. Reassemble the filter and dust cup, then reattach to the vacuum.

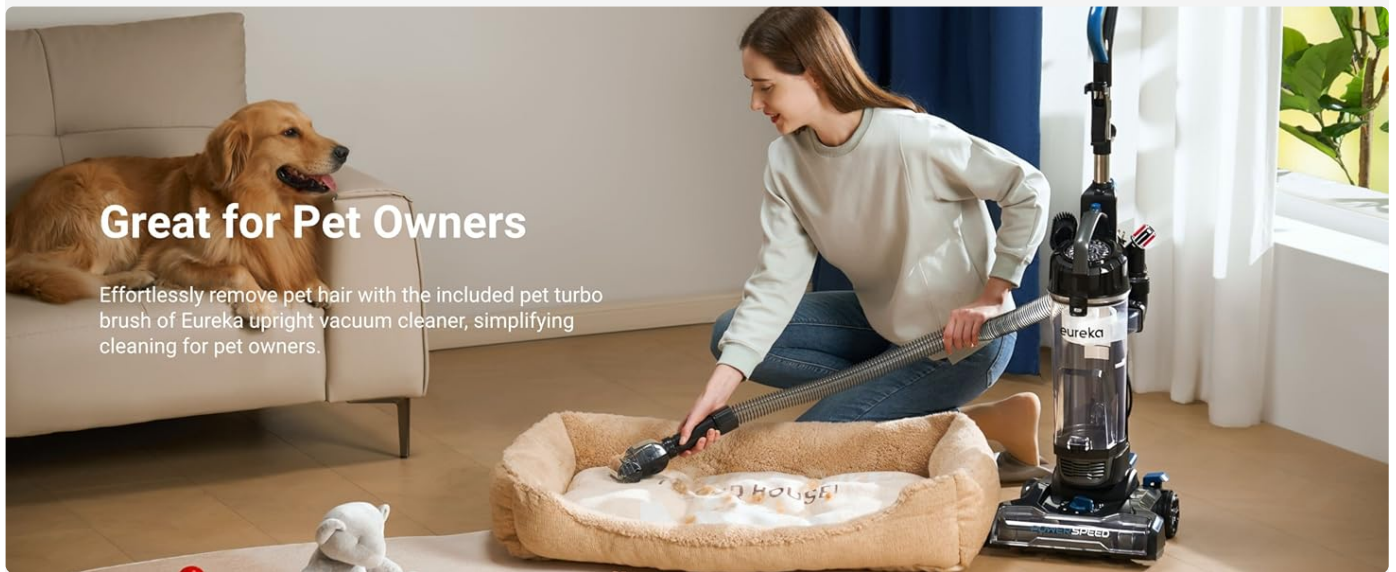


Figure 8: The washable filter ensures zero maintenance cost and prolonged vacuum life.

Cleaning the Brush Roll

Inspect the brush roll regularly for tangled hair, strings, or debris. To clean:

1. Unplug the vacuum cleaner.
2. Turn the vacuum over to access the brush roll.
3. Use scissors to carefully cut away any tangled hair or debris from the brush roll.
4. Ensure the brush roll spins freely before resuming operation.

Regular cleaning of the brush roll prevents clogs and maintains optimal cleaning performance.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Vacuum does not turn on.	Not plugged in; Power outlet not working.	Ensure power cord is securely plugged into a working outlet.
Loss of suction.	Dust cup full; Filter clogged; Hose or brush roll clogged.	Empty dust cup; Clean or replace filter; Clear any blockages from hose or brush roll.

Problem	Possible Cause	Solution
Vacuum not picking up debris.	Height adjustment incorrect; Brush roll not spinning.	Adjust height setting for floor type; Check brush roll for obstructions and clean.
Unusual noise.	Obstruction in fan or brush roll; Worn belt.	Inspect for and remove obstructions; Contact customer service if belt is worn.

SPECIFICATIONS

Feature	Detail
Brand	Eureka
Model Name	PowerSpeed Lightweight Upright Vacuum Cleaner for Carpet and Hard Floor
Model Number	NEU181A
Color	Blue
Form Factor	Upright
Special Features	Portable, Lightweight, Bagless, Washable Filter
Filter Type	Foam
Included Components	Dusting Brush, Pet Tool, Crevice Tool
Capacity	2.6 Liters (Dust Cup)
Wattage	960 watts
Amperage	8 Amps
Hose Length	2.1 Feet
Recommended Uses	Carpet, Hard Floor, Upholstery
Product Dimensions	13.4"L x 14"W x 44.5"H
Item Weight	10 pounds
Noise Level	88 dB
Country of Origin	Vietnam

WARRANTY AND SUPPORT

Your Eureka PowerSpeed NEU181A vacuum cleaner comes with a **2-year limited warranty**.

For any questions, technical assistance, or warranty claims, please contact Eureka customer service:

Phone: 1-800-282-2886

Online Support: Visit the official Eureka website for FAQs and support resources.

