

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Sram](#) /

› [Sram GX Eagle AXS Rear Derailleur Instruction Manual](#)

Sram GX Eagle AXS

Sram GX Eagle AXS Rear Derailleur Instruction Manual

INTRODUCTION

This manual provides essential information for the installation, operation, and maintenance of your Sram GX Eagle AXS Rear Derailleur. The Sram GX Eagle AXS system offers precise and reliable electronic shifting for an enhanced cycling experience. Please read this manual thoroughly before installation and use to ensure proper function and safety.

PACKAGE CONTENTS

Verify that all items listed below are present in your package:

- Sram GX1 Eagle AXS 12-speed Lunar Max 52 Rear Derailleur
- Documentation (this manual)
- *Note: Battery for the AXS derailleur is not included and must be purchased separately.*

SETUP AND INSTALLATION

Proper installation is crucial for the performance and longevity of your Sram GX Eagle AXS Rear Derailleur. If you are unsure about any step, consult a professional bicycle mechanic.

Tools Required

- Hex key set (e.g., 5mm)
- Torque wrench
- Chain tool
- Sram B-gap adjustment tool (recommended for optimal setup)
- Bicycle stand

Installation Steps

1. **Mount the Derailleur:** Securely attach the Sram GX Eagle AXS Rear Derailleur to your bicycle's derailleur hanger using the appropriate hex key. Tighten to the manufacturer's specified torque.

- 2. Install the Chain:** Route the chain correctly through the derailleur and connect it according to your chain manufacturer's instructions.
- 3. Install AXS Battery:** Insert a charged Sram AXS battery (sold separately) into the derailleur. Ensure it clicks securely into place.
- 4. Pair with Shifter:** Turn on your AXS shifter and derailleur. Press and hold the AXS button on both components until the LED flashes, then release. They should pair automatically.
- 5. Adjust B-Gap:** Use the Sram B-gap adjustment tool to set the correct distance between the upper pulley and the largest cog on your cassette. This is critical for smooth shifting.
- 6. Set Limit Screws:** Adjust the high (H) and low (L) limit screws to prevent the chain from over-shifting off the cassette.
- 7. Micro-Adjustments:** Fine-tune shifting performance using the micro-adjustment feature on your AXS shifter. Refer to the Sram AXS user guide for detailed instructions on micro-adjustments.



Image: The Sram GX Eagle AXS Rear Derailleur, showcasing its robust design and electronic components. This image illustrates the main product for installation reference.

OPERATION

The Sram GX Eagle AXS system provides intuitive electronic shifting.

Shifting

- **Upshift:** Press the designated upshift button on your AXS shifter to move the chain to a smaller cog (harder gear).
- **Downshift:** Press the designated downshift button on your AXS shifter to move the chain to a larger cog (easier gear).
- **Multi-Shift:** Some AXS shifters allow for multi-shifting by holding down a button. Refer to your shifter's manual for specific settings.

Battery Status

The LED indicator on the derailleuer provides information about the battery charge level:

- **Green LED:** Full to high charge.
- **Red LED:** Low charge.
- **Flashing Red LED:** Very low charge, recharge immediately.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your derailleuer.

- **Cleaning:** Keep the derailleuer, jockey wheels, and chain clean from dirt and debris. Use a mild degreaser and brush, then rinse and dry thoroughly.
- **Lubrication:** Lubricate your chain regularly with appropriate chain lubricant. Avoid getting lubricant on the derailleuer body or battery contacts.
- **Inspection:** Periodically inspect the derailleuer for any signs of damage, loose bolts, or excessive wear on the jockey wheels. Replace worn parts as needed.
- **Battery Care:** Keep battery contacts clean and dry. Store batteries in a cool, dry place when not in use.
- **Firmware Updates:** Use the Sram AXS app to check for and install any available firmware updates for your derailleuer.

TROUBLESHOOTING

Here are some common issues and their potential solutions:

- **Shifting is sluggish or inconsistent:**
 - Check battery charge level.
 - Verify B-gap adjustment.
 - Ensure limit screws are correctly set.
 - Check for bent derailleuer hanger.
 - Clean and lubricate the drivetrain.
- **Derailleuer not responding to shifter:**
 - Confirm battery is charged and properly installed.
 - Re-pair the derailleuer with the shifter.
 - Check for any physical obstructions preventing movement.
- **LED on derailleuer is flashing red rapidly:**
 - Battery is critically low. Recharge or replace the battery immediately.

SPECIFICATIONS

Feature	Detail
Brand	Sram
Model Number	2137901199
Product Dimensions	21L x 21W x 10H cm
Item Weight	830 g (1.83 lbs)
Material	Steel Alloy
Color	Black
Mounting Type	Braze-on Mount
Sport	Cycling

WARRANTY AND SUPPORT

For detailed warranty information, technical support, and service inquiries, please visit the official Sram website or contact your authorized Sram dealer. Keep your proof of purchase for warranty claims.

Official Sram Website: www.sram.com