

[Manuals.plus](#) /

› [AEG](#) /

› AEG FSB32610Z Fully Integrated Built-in Dishwasher User Manual

AEG 911539270

AEG FSB32610Z Fully Integrated Built-in Dishwasher User Manual

Model: FSB32610Z

1. INTRODUCTION

This manual provides comprehensive instructions for the installation, operation, and maintenance of your new AEG FSB32610Z Fully Integrated Built-in Dishwasher. Please read this manual carefully before using the appliance to ensure safe and efficient operation. This appliance is designed for household use only.

2. SAFETY INFORMATION

Always observe the following safety precautions to prevent injury or damage to the appliance:

- Ensure the appliance is properly earthed before use.
- Do not allow children to play with or operate the dishwasher.
- Sharp items (knives, etc.) should be loaded with the sharp points down to prevent injury.
- Only use detergents and rinse aids specifically designed for automatic dishwashers.
- Do not open the door during operation, especially during the hot wash or drying cycle, as hot steam may escape.
- In case of malfunction, switch off the appliance and disconnect it from the power supply before attempting any troubleshooting.
- Installation and repairs should only be performed by a qualified technician.

3. PRODUCT OVERVIEW

The AEG FSB32610Z is a fully integrated built-in dishwasher designed for seamless integration into your kitchen cabinetry. It features a robust stainless steel interior and offers efficient cleaning with its 5 wash programs and AirDry technology for superior drying results.

Main Components



Figure 3.1: Front view of the AEG FSB32610Z fully integrated dishwasher, showing the control panel at the top edge of the door.



Figure 3.2: Close-up of the dishwasher's control panel, located on the top edge of the door, displaying program indicators and control buttons.



Figure 3.3: Interior view of the dishwasher, showing the upper and lower baskets, and the removable cutlery basket.



Figure 3.4: View of the bottom interior of the dishwasher, highlighting the lower spray arm and the filter system.

4. SETUP AND INSTALLATION

Proper installation is crucial for the performance and longevity of your dishwasher. It is recommended that installation be performed by a qualified professional.

4.1 Unpacking

Carefully remove all packaging materials. Inspect the dishwasher for any signs of damage during transit. Report any damage to your retailer immediately.

4.2 Placement

The dishwasher is designed to be built into a standard kitchen cabinet. Ensure the cabinet dimensions match the appliance's requirements. The appliance should be placed near water inlet and outlet points, and an electrical socket.

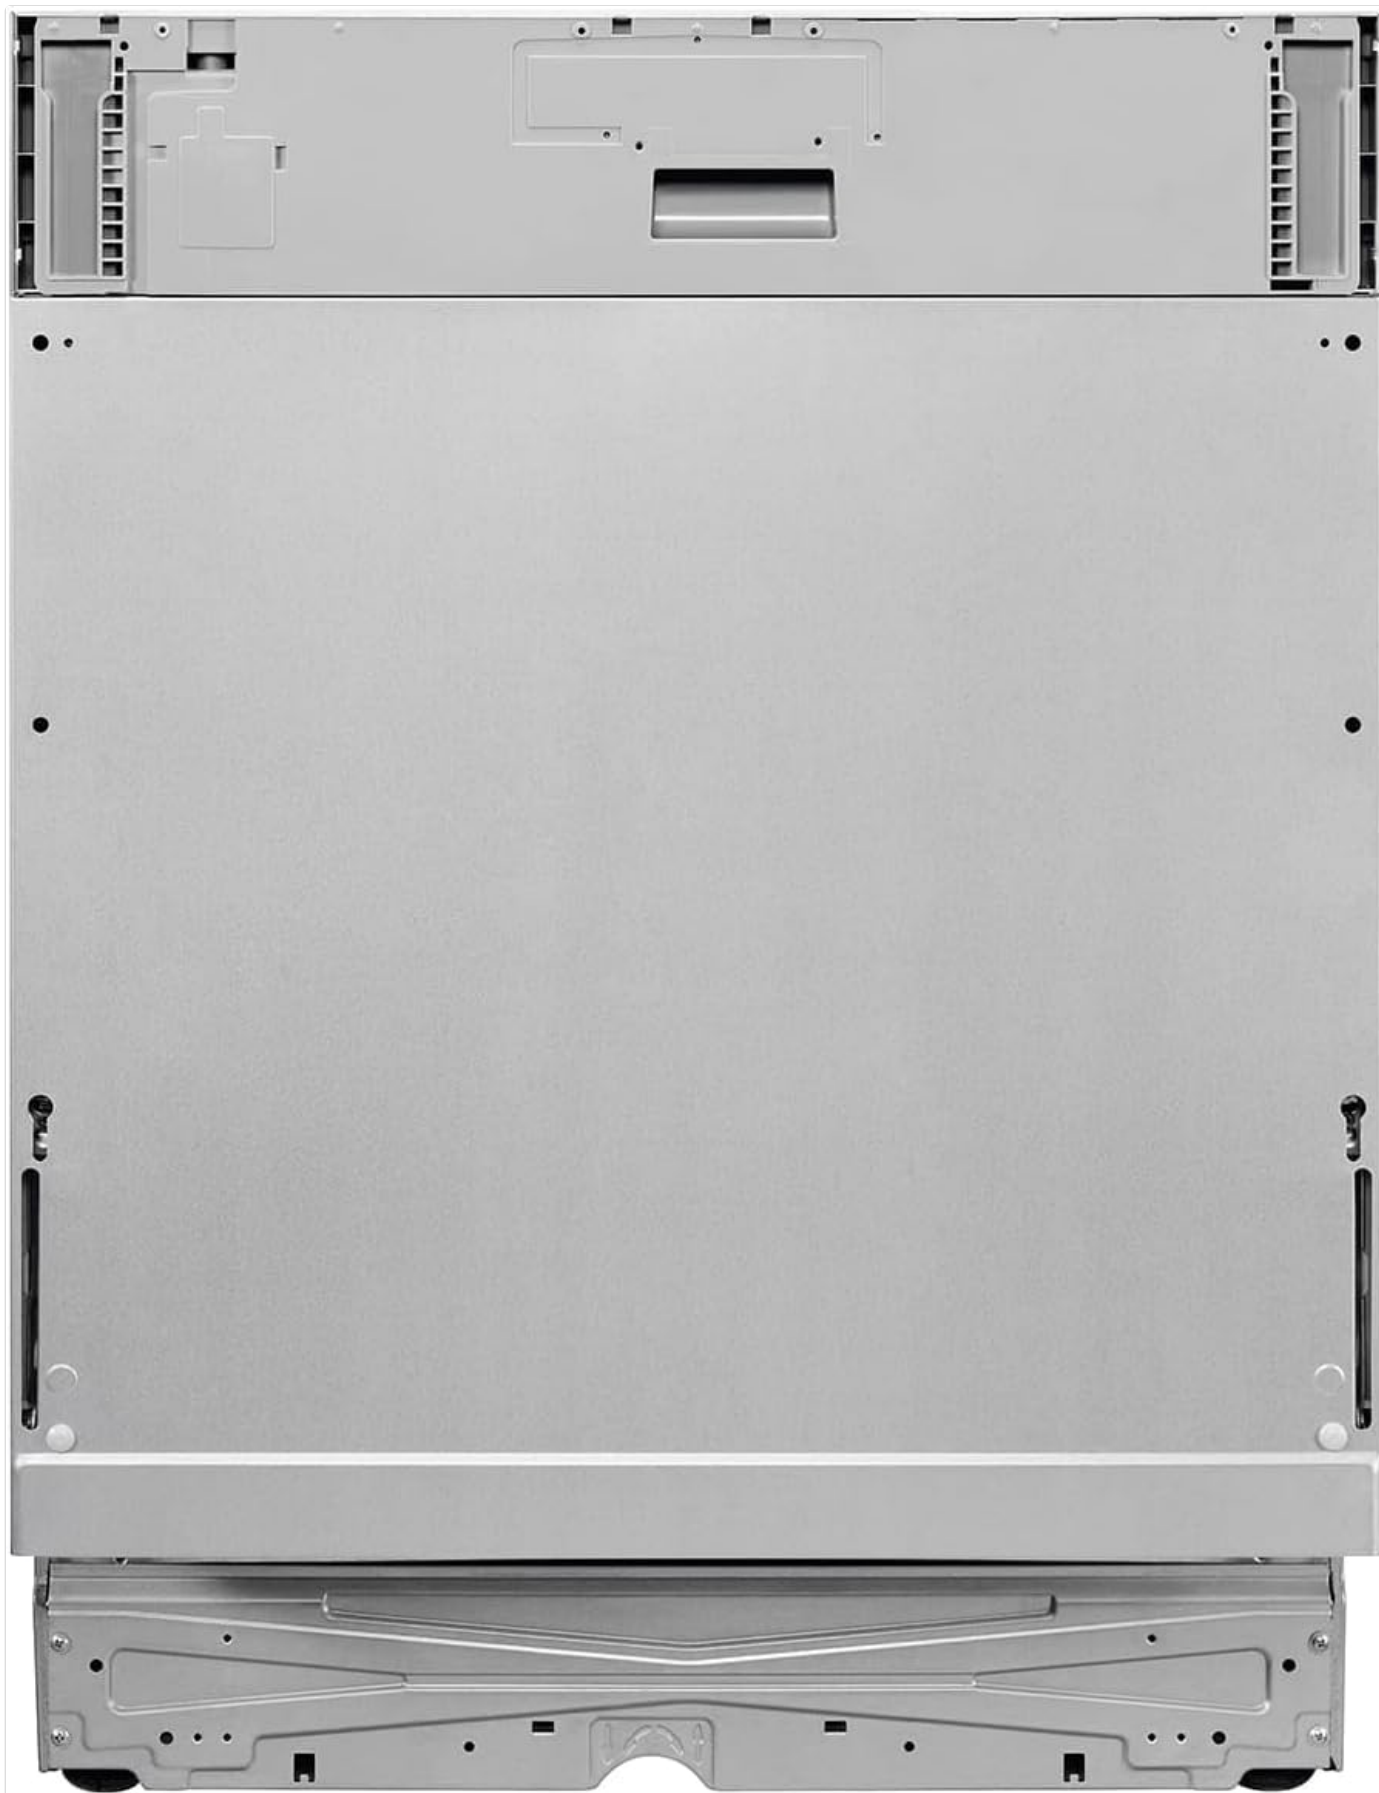


Figure 4.1: Rear view of the dishwasher, showing the mounting brackets and general structure for built-in installation.

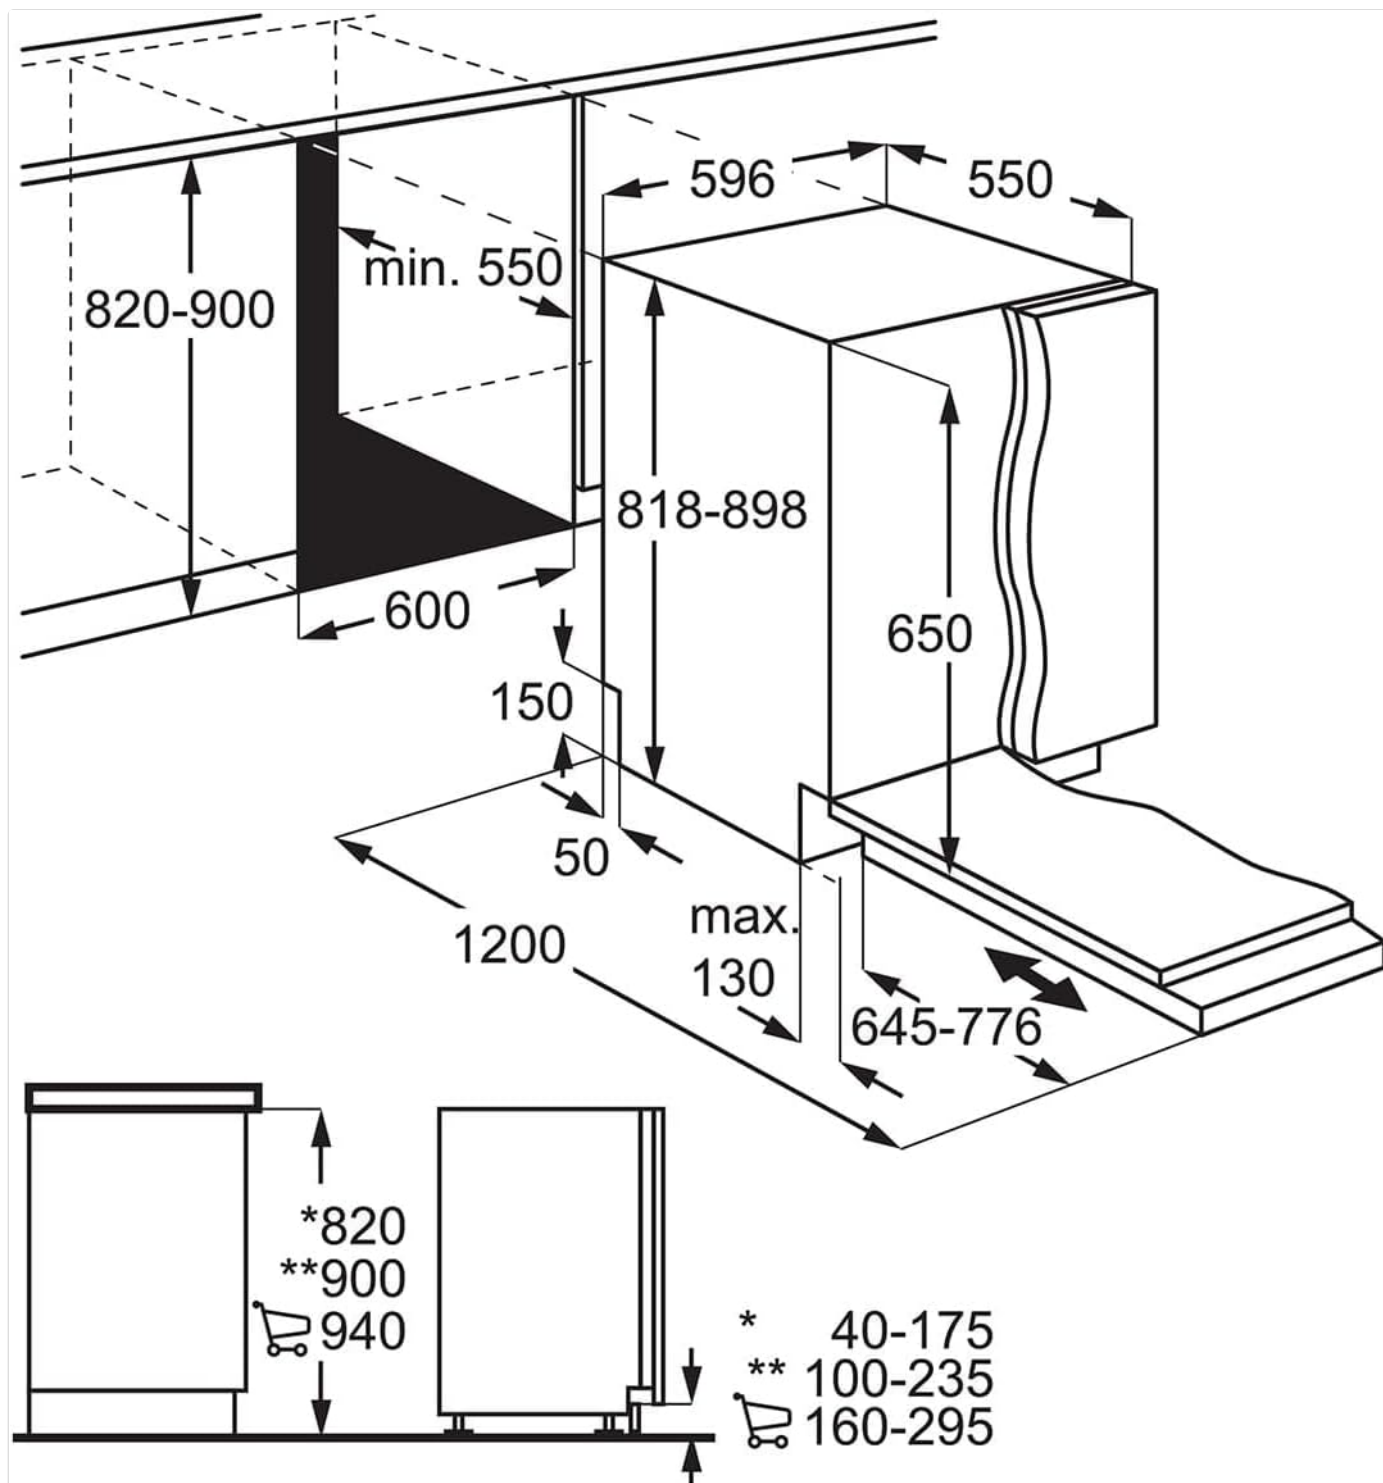


Figure 4.2: Technical diagram illustrating the precise dimensions for installing the AEG FSB32610Z dishwasher within a kitchen cabinet, including height, width, and depth requirements.

4.3 Connecting Water and Power

Connect the water inlet hose to a cold water tap with a 3/4" thread. Ensure the drain hose is properly connected to a suitable drain pipe or sink trap. The electrical connection must comply with local regulations and be performed by a qualified electrician. The appliance operates on 230 Volts.

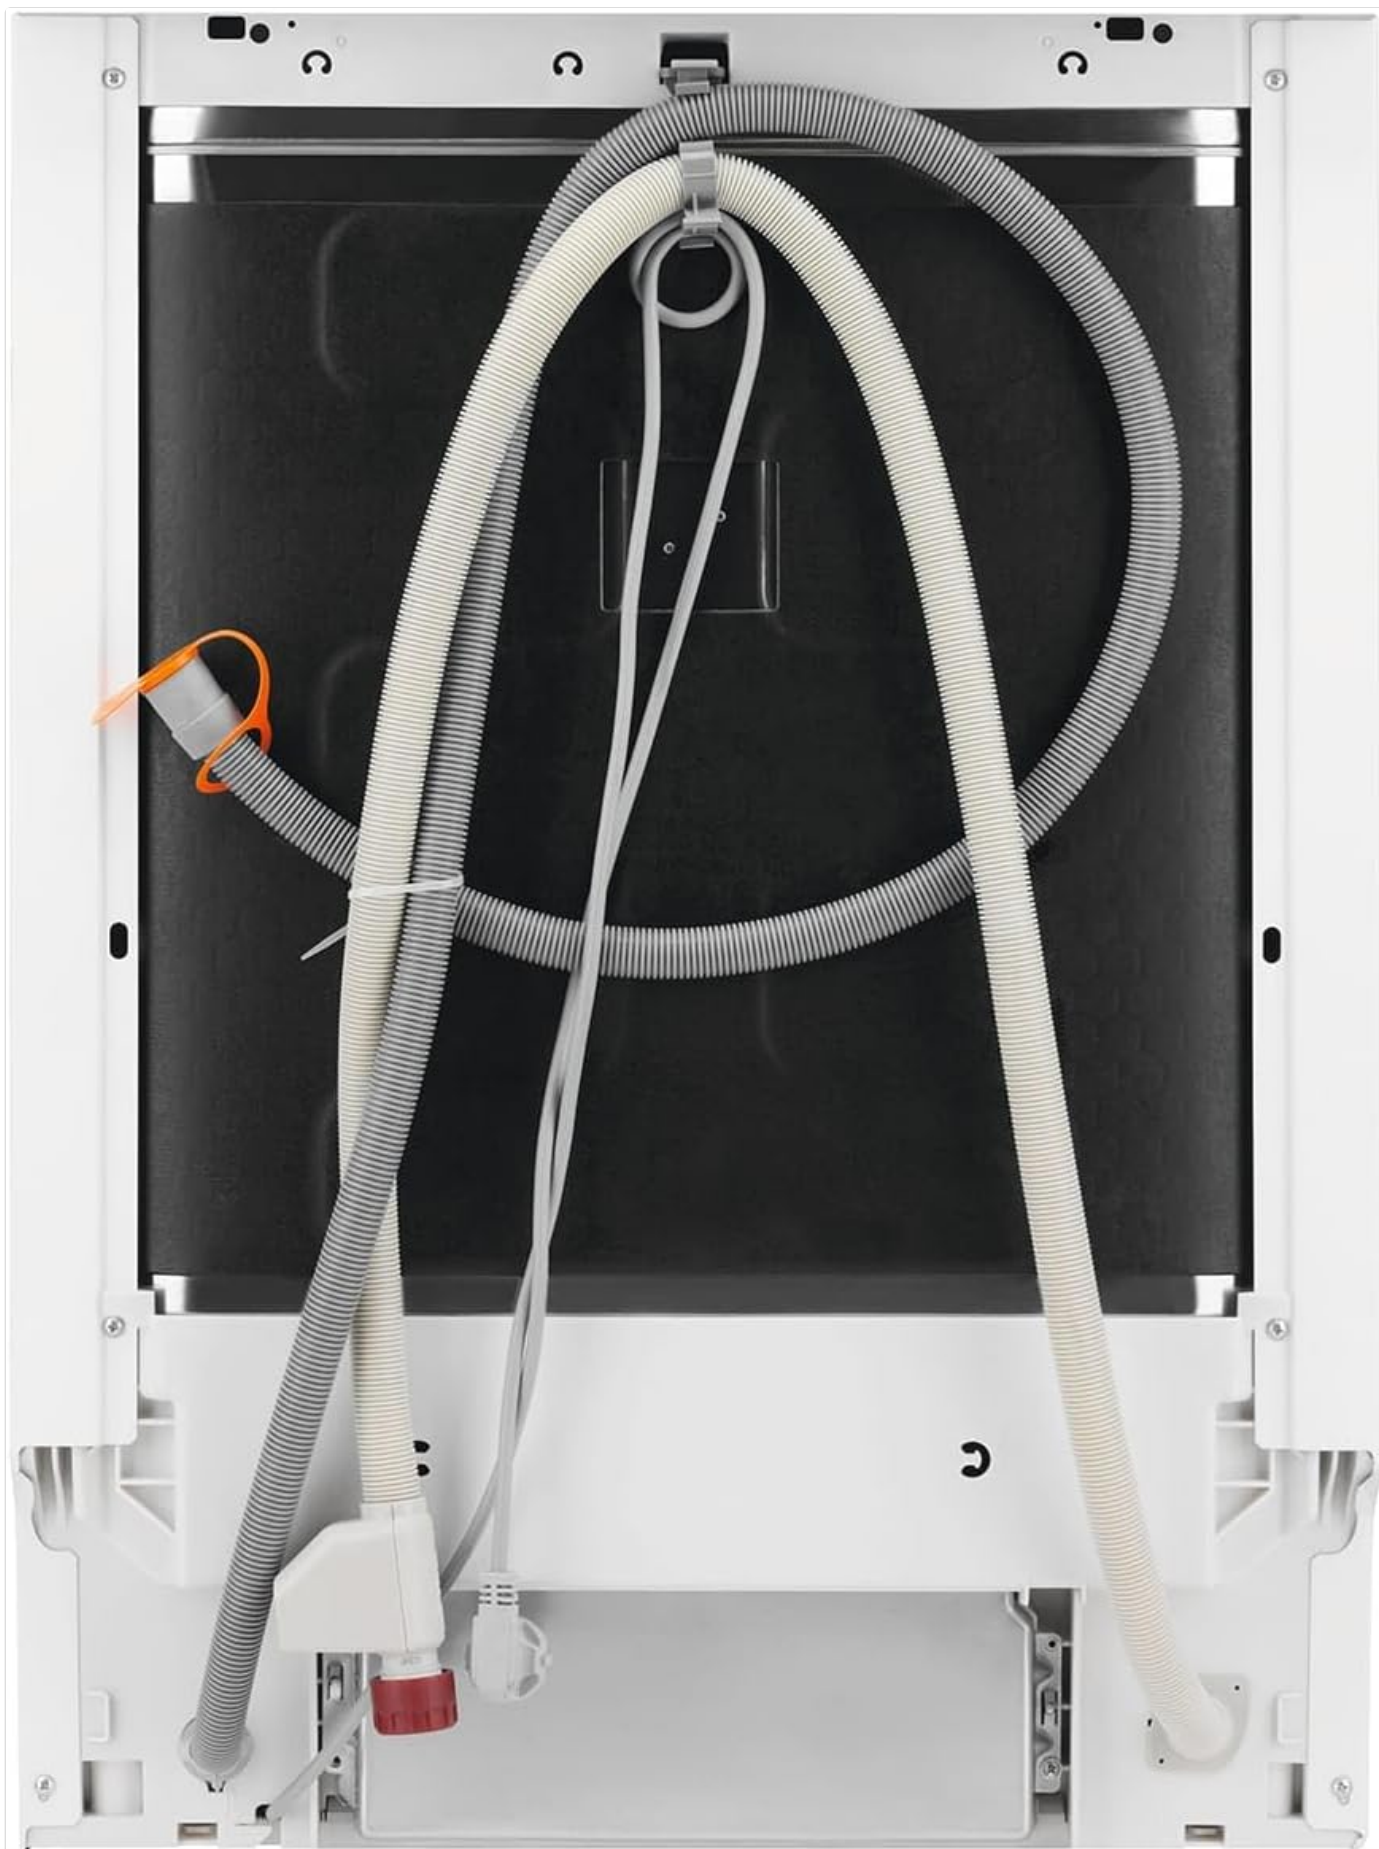


Figure 4.3: Rear view of the dishwasher showing the water inlet hose (white) and drain hose (grey) connections, along with the power cable.

5. OPERATING INSTRUCTIONS

Follow these steps for optimal washing results:

5.1 Loading the Dishwasher

Scrape off large food particles from dishes. Load items securely, ensuring spray arms can rotate freely. Place larger items in the lower basket and delicate items in the upper basket. The dishwasher has a nominal capacity of 13 place settings.

5.2 Adding Detergent and Rinse Aid

Fill the detergent dispenser with the appropriate amount of dishwasher detergent. Check the rinse aid indicator and refill the rinse aid dispenser if necessary. Rinse aid helps with drying and prevents streaks.

5.3 Selecting a Program

The AEG FSB32610Z offers 5 wash programs to suit various needs:

- **ECO Program:** Energy-efficient program for normally soiled dishes.
- **Normal 65° Program:** Standard program for daily use with normally soiled dishes.
- **Intensive 70° Program:** For heavily soiled dishes and pots.
- **Quick Program:** For lightly soiled dishes that need a fast wash.
- **Rinse & Hold Program:** For rinsing dishes that will be washed later.

Select the desired program using the control panel buttons.

5.4 Starting a Program

Close the dishwasher door firmly. The selected program will start automatically. Some models may require pressing a 'Start' button.

5.5 AirDry Technology

This dishwasher features AirDry technology, which automatically opens the door by approximately 10 cm during the drying phase. This allows natural air to circulate, providing perfect drying results and reducing energy consumption. Do not close the door manually during the AirDry phase.

6. MAINTENANCE AND CARE

Regular maintenance ensures optimal performance and extends the lifespan of your dishwasher.

6.1 Cleaning Filters

The filter system should be cleaned regularly to prevent blockages and ensure efficient washing. Twist the cylindrical filter counter-clockwise to remove it, then remove the fine filter. Rinse all filter components under running water. Reassemble and reinsert them correctly.

6.2 Cleaning Spray Arms

Check the spray arm nozzles for blockages. If necessary, remove the spray arms and clean the holes with a thin, pointed object. Reattach them securely.

6.3 Exterior and Interior Cleaning

Wipe the exterior with a soft, damp cloth. For the interior, run a dishwasher cleaning cycle periodically using a specialized dishwasher cleaner. Do not use abrasive cleaners or solvents.

7. TROUBLESHOOTING

Before contacting service, check the following common issues:

Problem	Possible Cause	Solution
Dishwasher does not start	No power; Door not closed properly; Program not selected.	Check power supply; Ensure door clicks shut; Select a program and press start.
Dishes not clean	Improper loading; Clogged spray arms/filters; Insufficient detergent; Incorrect program.	Reload dishes correctly; Clean spray arms and filters; Add more detergent; Select a more intensive program.
Water not draining	Clogged drain hose/filter; Drain pump malfunction.	Clean filter system; Check drain hose for kinks; If problem persists, contact service.
Excessive noise	Dishes rattling; Foreign object in pump; Improper installation.	Rearrange dishes; Check pump area for objects; Ensure dishwasher is level.

8. TECHNICAL SPECIFICATIONS

Feature	Specification
Model Name	FSB32610Z
Form Factor	Built-in
Installation Type	Built-in
Material	Stainless Steel
Noise Level	44 dB
Control Type	Semi-integrated
Special Feature	Compact
Item Weight	1 Kilogram
Voltage	230 Volt
Cycle Options	5 Programs (plus AirDry technology)
Number of Settings	5
Manufacturer	AEG
Product Dimensions (D x W x H)	55T x 60B x 81.8H cm (60 x 55 x 81.8 cm)
Nominal Capacity	13 Place Settings

Feature	Specification
Included Components	Cutlery Basket, Drying System

9. WARRANTY AND SUPPORT

Your AEG FSB32610Z dishwasher comes with a manufacturer's warranty. Please refer to the warranty card included with your appliance for specific terms and conditions. For technical support, spare parts, or service, please contact AEG customer service or visit the official AEG website. Keep your proof of purchase for warranty claims.

© 2023 AEG. All rights reserved. Model FSB32610Z.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question