

[Manuals.plus](#) /

› [WONNIE](#) /

› WONNIE 15.5-inch Portable DVD Player User Manual

WONNIE W-1318



WONNIE 15.5-inch Portable DVD Player

MODEL: W-1318 USER MANUAL

1. Introduction

Thank you for choosing the WONNIE 15.5-inch Portable DVD Player, Model W-1318. This device is designed to provide high-quality entertainment on the go, featuring a rotatable HD screen, long-lasting battery, and versatile media compatibility. This manual will guide you through the setup, operation, and maintenance of your new portable DVD player to ensure optimal performance and enjoyment.



Image: The WONNIE 15.5-inch Portable DVD Player, showcasing its large screen and included remote control.

2. Package Contents

Please check the package carefully to ensure all items are present:

- WONNIE 15.5-inch Portable DVD Player
- Remote Control
- AC Power Adapter (3-in-1 EU/UL/UK plug)
- Car Charger
- RCA Cable (AV cable for TV sync)
- Headrest Mount Bracket
- User Manual



Soporte para Reposacabeza



Reproductor de DVD Portátil



Manual de Usuario



Cargador de Coche



3 en 1 Adaptador



Mando



RCA Cable

Image: A visual representation of all items included in the WONNIE Portable DVD Player package, including the player, remote, various cables, and headrest mount.

3. Product Overview

Familiarize yourself with the various ports and controls of your portable DVD player.



Image: A detailed view of the WONNIE Portable DVD Player's side panel, highlighting the USB port, SD card slot, headphone jack, AV IN/OUT ports, and DC IN for power.

- **DC IN:** Power input port.
- **ON/OFF Switch:** Power on/off the device.
- **AV IN:** Audio/Video input for connecting external devices.
- **AV OUT:** Audio/Video output for connecting to a TV or larger display.
- **PHONE:** Headphone jack.
- **SD CARD:** Slot for SD/MMC memory cards (up to 32GB, FAT32 format).
- **USB:** USB port for flash drives (up to 32GB, FAT32 format).
- **Disc Tray:** For inserting DVDs and CDs.
- **Control Buttons:** Play/Pause, Stop, Skip, Volume, Menu, Setup, etc.

4. Setup

4.1 Initial Charging

Before first use, fully charge the built-in 4000mAh rechargeable battery. Connect the AC power adapter to the "DC IN" port on the player and plug it into a wall outlet. The charging indicator light will typically show the charging status. A full charge provides up to 6 hours of playback.



Batería Incorporada Recargable



3 en 1 AC Adaptador



Cargador de Coche

Image: Illustration of the portable DVD player's power options, including the built-in rechargeable battery, 3-in-1 AC adapter, and car charger for versatile power supply.

4.2 Connecting to a Power Source

- **AC Adapter:** For home use, connect the provided AC adapter to a standard wall outlet.
- **Car Charger:** For in-car use, connect the car charger to your vehicle's cigarette lighter socket.

4.3 Connecting to a TV (AV OUT)

To enjoy your media on a larger screen, use the provided RCA cable to connect the player to your television.

1. Connect one end of the RCA cable to the "AV OUT" port on the portable DVD player.
2. Connect the other end of the RCA cable to the corresponding AV input ports (usually yellow for video, white for left audio, red for right audio) on your TV.
3. Select the correct AV input source on your TV.

Sincronizar con TV por RCA Cable (incluido)



Image: The WONNIE Portable DVD Player connected to a television via an RCA cable, demonstrating its TV synchronization capability for a larger viewing experience.

4.4 Using the Headrest Mount

The included headrest mount allows for easy installation in a car, providing entertainment for passengers during travel.

1. Attach the headrest mount bracket to the back of a car seat headrest.
2. Securely place the portable DVD player into the mount. Ensure it is firmly in place before driving.

5. Operating Instructions

5.1 Powering On/Off

Slide the "ON/OFF" switch to the "ON" position to power on the player. Slide it to "OFF" to power off.



Image: A visual guide demonstrating the power on and off states of the portable DVD player.

5.2 Disc Playback

1. Open the disc tray and carefully place a DVD or CD onto the spindle, label side up.
2. Close the disc tray. The player will automatically begin reading the disc.
3. Use the Play/Pause, Stop, Skip, and Volume buttons on the player or remote control to manage playback.

5.3 USB/SD Card Playback

The player supports media files from USB drives and SD/MMC cards up to 32GB (FAT32 format).

1. Insert your USB drive into the USB port or your SD/MMC card into the SD CARD slot.
2. The player should automatically detect the media. If not, navigate to the media source using the "Source" or "Mode" button.
3. Browse and select your desired file for playback.



Image: An illustration highlighting the player's compatibility with USB drives and SD cards for expanded media playback options.

5.4 Supported Formats

The WONNIE Portable DVD Player is compatible with a wide range of formats:

- **Discs:** CD, DVD, DVD+R(-R), DVD+RW(-RW), VCD, SVCD(RW), CD-R(RW).
- **Media Files (USB/SD):** MP3, WMA, VOB, AVI, MPEG1, XVID, JPEG.

Note: This player does NOT support MP4 or Blu-ray formats.

Multiregion & Multiple Formatos & La función de Memoria



Reproducido



Apagado



Reproducido



- CD, DVD, DVD + R (-R), DVD + RW (-RW), VCD, SVCD-R (RW), CD-R (RW)
- VOB, AVI, MPEG, MP3, WMA, JPEG, TXT
- USB/SD CARD UP TO 32G and video pixels up to 720*576

Image: A graphic illustrating the player's multi-region and multi-format compatibility, including various disc types and digital file formats like MP3, WMA, AVI, and JPEG.

5.5 Screen Rotation

The 15.5-inch TFT LCD screen can rotate 270° horizontally and fold 180° to function as a tablet. This allows for flexible viewing angles and easy mounting in various scenarios.



Image: A diagram showing the 270-degree horizontal rotation and 180-degree folding capability of the player's screen.

5.6 Last Memory Function

The player features a "Last Memory" function, which allows it to resume playback from where it was last stopped, even after being powered off. This is particularly useful for long journeys or interrupted viewing sessions.

6. Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the player's surface. For the screen, use a specialized screen cleaning solution and a microfiber cloth. Do not use abrasive cleaners or solvents.
- **Disc Care:** Handle discs by their edges. Keep them clean and free of scratches. Store discs in their cases when not in use.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. If storing the player for an extended period, charge the battery to about 50% and recharge every few months.
- **Storage:** Store the player in a cool, dry place away from direct sunlight, extreme temperatures, and humidity.

7. Troubleshooting

Problem	Possible Cause	Solution
No power	Battery is depleted; Power adapter not connected properly.	Charge the battery; Ensure power adapter is securely connected to both the player and the outlet.
No disc playback	Disc is dirty or scratched; Disc format not supported; Disc inserted incorrectly.	Clean the disc; Check if the disc format is supported (not MP4/Blu-ray); Reinsert the disc correctly.
No picture on TV	RCA cable not connected properly; Incorrect TV input selected.	Ensure RCA cable is securely connected to both player and TV; Select the correct AV input on your TV.
USB/SD card not recognized	Card/drive not inserted correctly; Format not FAT32; Capacity exceeds 32GB.	Reinsert the card/drive; Ensure it is formatted to FAT32 and is 32GB or less.
No sound	Volume too low; Mute function activated; Headphones not fully plugged in.	Increase volume; Deactivate mute; Ensure headphones are fully inserted.

8. Specifications

Feature	Detail
Brand	WONNIE
Model Number	W-1318
Screen Size	15.5 Inches
Screen Type	HD TFT LCD
Screen Resolution	1280 x 800
Screen Rotation	270° Swivel, 180° Flip

Feature	Detail
Battery Capacity	4000mAh Lithium-ion
Battery Life	Up to 6 hours
Supported Disc Formats	CD, DVD, DVD+R(-R), DVD+RW(-RW), VCD, SVCD(RW), CD-R(RW)
Supported Media Formats (USB/SD)	MP3, WMA, VOB, AVI, MPEG1, XVID, JPEG
USB/SD Card Support	Up to 32GB (FAT32 format)
Connectivity	USB, SD Card, Headphone, AV IN, AV OUT, DC IN
Color	Black
UPC	756029706019

9. Warranty and Support

WONNIE offers comprehensive customer support for your product:

- **Money-Back Guarantee:** 30-day unconditional money-back guarantee.
- **Service Warranty:** 365-day after-sales service warranty.
- **Lifetime Support:** Free lifetime consultation service.

Your satisfaction is our top priority. For any questions, concerns, or technical assistance, please contact WONNIE customer support through the platform where you purchased the product or refer to the contact information provided in your product packaging.

