

[Manuals.plus](#) /

› [RUINUOKAI](#) /

› Portable Hanging Neck Fan User Manual

RUINUOKAI M3

Portable Hanging Neck Fan User Manual

Model: M3 | Brand: RUINUOKAI

INTRODUCTION

The RUINUOKAI M3 Portable Hanging Neck Fan is designed to provide personal cooling with powerful vertical airflow. Its lightweight and ultra-thin design allows for comfortable wear around the neck or use as a desktop fan. Featuring a built-in rechargeable battery and three adjustable speeds, this fan is ideal for various outdoor activities and daily use.

Hand Free Design

Cooling you wherever you are



The fan's hand-free design allows for convenient cooling while on the go.

SETUP

1. Charging the Fan

Before first use, fully charge the fan. Connect the provided USB charging cable to the fan's charging port and plug the other end into a compatible USB power source (e.g., adapter, computer, power bank, car charger). The charging indicator light will show the charging status.

Powerful Vertical Airflow

Built-in 2000mAh Rechargeable Battery

Continuous Quiet Work for up to 8 Hours



Power Bank



Adapter



Car Charger



Laptop

The fan can be charged using various USB power sources, including power banks, adapters, car chargers, and laptops.

2. Attaching the Lanyard

The fan comes with an adjustable lanyard for hands-free use. Attach the lanyard to the designated loops on the sides of the fan. Adjust the length of the lanyard for comfortable wear around your neck.

Adjustable Lanyard Suitable for Adults and Kids



Foldable bracket



Adjustable length



Removable lanyard



The fan features an adjustable lanyard for comfortable wear and a foldable bracket for desktop use.

3. Using the Foldable Bracket

For desktop use, locate the invisible foldable bracket on the back of the fan. Gently pull it out to prop the fan upright on a flat surface.

OPERATING INSTRUCTIONS

1. Power On/Off

To turn the fan **on**, press and hold the power button (located on the front) for 2 seconds. To turn the fan **off**, press and hold the power button again for 2 seconds.

2. Adjusting Fan Speed

The fan has three wind speeds: Low, Medium, and High. Once the fan is on, short press the power button to cycle through the speeds:

1. First short press: Low speed
2. Second short press: Medium speed
3. Third short press: High speed



The power button on the front controls both power and fan speed settings.

MAINTENANCE

1. Cleaning

To clean the fan, gently wipe the exterior with a soft, dry cloth. Do not use harsh chemicals or abrasive materials. Ensure the fan is turned off before cleaning.

2. Storage

When not in use, store the fan in a cool, dry place away from direct sunlight and extreme temperatures. Ensure the fan is fully charged before long-term storage to preserve battery life.

TROUBLESHOOTING

- **Fan not turning on:** Ensure the battery is charged. Connect the fan to a power source and allow it to charge for at least 30 minutes before attempting to turn it on again.
- **Weak airflow:** Check the fan speed setting. Short press the power button to increase the speed. Ensure the air inlet/outlet is not obstructed.
- **Fan making unusual noise:** Turn off the fan and check for any foreign objects obstructing the fan blades. If the noise persists, contact customer support.
- **Battery not holding charge:** Ensure you are using the original USB charging cable and a compatible power source. If the issue continues, the battery may need replacement or service.

SPECIFICATIONS

Feature	Detail
Brand	RUINUOKAI
Model Name	M3
Color	Black
Electric Fan Design	Wearable Fan
Power Source	Battery Powered (1 Lithium Ion battery included)
Product Dimensions	1.46"D x 4.25"W x 5.6"H
Item Weight	7.4 ounces
Special Features	Foldable, Lightweight, Portable
Number of Power Levels	3
Control Method	Touch
Blade Material	Plastic
Voltage	5 Volts
UPC	706597303745

Compact Slim Pocket Size for Travel

Weight: 5.1 oz



Detailed dimensions of the compact and slim fan.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact the manufacturer directly. Keep your purchase receipt for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question