

Timex TW4B19200IQ

Timex Contactless Payment Men's Casual Watch Pay Expedition Field Chrono 43mm User Manual

Model: TW4B19200IQ

1. PRODUCT OVERVIEW

The Timex Expedition Field Chrono 43mm watch combines classic analog timekeeping with modern contactless payment technology integrated directly into the watch strap. This timepiece features a durable brass case, mineral glass crystal, and Indiglo light-up dial for visibility in low light conditions. It is designed for daily wear and offers water resistance suitable for various activities.



Figure 1: Front view of the Timex Expedition Field Chrono 43mm watch. This image displays the watch face with its chronograph subdials, Arabic numerals, and brown leather strap.



Figure 2: Side view of the Timex Expedition Field Chrono 43mm watch, showing the crown and pushers for chronograph functions.





Figure 3: Back view of the Timex Expedition Field Chrono 43mm watch, highlighting the stainless steel case back.

2. SETUP AND TIMEX PAY ACTIVATION

The Timex Pay feature allows for contactless payments directly from your watch strap. This functionality does not require the watch to be charged or connected to a mobile app for transactions, as the payment chip is embedded in the strap itself.

2.1. Initial Setup

- 1. Download the Timex Pay App:** Download and install the official Timex Pay mobile application from your device's app store (Google Play or Apple App Store).
- 2. Register/Log In:** Launch the application and register a new account or log in with existing credentials.
- 3. Pair Your Watch:** From the app's home screen, tap the '+' button to begin the pairing process for your Timex Pay watch.
- 4. Connect the UPPU Clip:** Follow the on-screen instructions to connect the provided UPPU clip to your watch. This clip is essential for activating the payment feature. Ensure the clip is securely attached between the arrow markings on the watch strap.



Figure 4: The Timex Pay UPPU clip, used for connecting the watch to the mobile application for payment setup.



Figure 5: Close-up view of the Timex Pay watch strap, showing the integrated contactless payment chip and "Enabled by Tappy" branding.

2.2. Adding a Payment Card

- 1. Add Card:** Once your watch is detected and paired, tap the "Add Card" button in the app.
- 2. Enter Card Details:** Fill in your payment card information (Name, Card Number, Expiry, Security Code). Timex Pay currently requires a Chase Visa credit or debit card, including compatible Amazon Prime Visa cards.
- 3. Security and Virtual Card:** Your payment information is encrypted and transmitted securely. A virtual card (token) is generated and loaded onto your wearable. Your actual card information is never stored on the watch or by Timex Pay.
- 4. Additional Verification:** Your bank may require additional verification before the virtual card is activated. Follow the prompts in the app to complete this step.
- 5. Ready to Pay:** Once verified, your virtual card will be active, and you can begin using your watch for contactless payments.



CREDIT OR DEBIT CARD REQUIRED

Figure 6: Illustration showing the supported payment networks for Timex Pay, specifically Chase and Visa.

2.3. Timex Pay Setup Video Guide

Your browser does not support the video tag.

Video 1: A detailed guide on how to set up and activate the Timex Pay feature on your watch, including app installation, account registration, and adding a payment card.

3. OPERATING YOUR WATCH

3.1. Timekeeping and Chronograph Functions

The Timex Expedition Field Chrono 43mm is a traditional analog watch with chronograph capabilities. The watch features a black dial with a date window at 4 o'clock, Arabic numerals, and a 30-minute chronograph that measures to 1/20th second.

- **Setting Time and Date:** Use the crown on the side of the watch to adjust the time and date. Refer to the watch's specific movement instructions for detailed setting procedures.
- **Using the Chronograph:** The watch includes pushers on the side for starting, stopping, and resetting the chronograph function. The sub-dials track elapsed time.

- **Indiglo Night-Light:** Press the crown to activate the Indiglo light-up watch dial for illumination in low-light conditions.

3.2. Making Contactless Payments

Once your virtual card is activated, you can make payments at any terminal that accepts contactless payments.

- **Tap to Pay:** Simply tap the short end of the watch strap (where the payment chip is located) against the payment terminal.
- **No Power Needed:** The contactless payment feature does not require the watch battery to be charged or the watch to be connected to your phone.



Figure 7: Illustration demonstrating the contactless payment process with the Timex Pay watch, showing the watch being tapped against a payment terminal.

3.3. Managing Your Virtual Card

The Timex Pay app provides control over your virtual card:

- **Transaction History:** View your transaction history directly within the mobile application.
- **Lock/Unlock Card:** For additional security, you can lock or unlock your virtual card at any time using the mobile app.

- **Remove Card:** In case of a lost or stolen wearable, or if you wish to add a new payment card, you can delete the virtual card from your watch via the app.

4. MAINTENANCE

4.1. Water Resistance

This watch is water-resistant to 100 meters (330 feet). This rating generally makes it suitable for snorkeling and swimming, but it is **not recommended for diving**.

- Avoid operating the crown or pushers while the watch is wet or submerged.
- Rinse the watch with fresh water after exposure to salt water or chlorine and dry thoroughly.

4.2. Battery Replacement

The watch requires 1 Lithium Metal battery (included). When the watch stops functioning, the battery may need replacement. It is recommended to have battery replacement performed by a qualified watch technician to ensure water resistance is maintained.

4.3. Strap Care

The genuine leather strap should be kept dry and clean. Avoid prolonged exposure to direct sunlight, extreme temperatures, and moisture to preserve its quality and longevity.

5. TROUBLESHOOTING

- **Payment Not Working:**

- Ensure the payment terminal accepts contactless payments.
- Verify that your virtual card is active and not locked in the Timex Pay app.
- Confirm that your payment card is a supported Chase Visa card.
- Ensure the watch strap is tapped correctly against the terminal.

- **Watch Not Pairing with App:**

- Ensure the UPPU clip is correctly attached to the watch strap.
- Check that your mobile device's Bluetooth is enabled.
- Restart the Timex Pay app and try pairing again.

- **Indiglo Light Not Working:**

- Check the watch battery. A low battery may affect Indiglo functionality.

6. SPECIFICATIONS

Feature	Detail
Brand	Timex
Model Number	TW4B19200IQ

Case Diameter	43mm
Case Material	Brass
Crystal Material	Mineral Glass
Strap Material	Genuine Leather (20mm width, fits up to 8-inch wrist)
Dial Features	Black dial with date window at 4 o'clock, Arabic numerals, 30-minute chronograph (measures to 1/20th second)
Illumination	Indiglo light-up watch dial
Water Resistance	100m (330 ft) - Suitable for snorkeling and swimming, not diving.
Battery Type	1 Lithium Metal battery (included)
Payment Feature	Timex Pay (contactless payment integrated in strap, requires Chase Visa credit/debit card)

7. WARRANTY AND SUPPORT

For detailed warranty information, product support, or service inquiries, please refer to the official Timex website or contact Timex customer service directly. Keep your proof of purchase for warranty claims.

Online Support: www.timex.com/support

© 2024 Timex. All rights reserved. Information is subject to change without notice.