

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [Sylvania](#) /

> [Sylvania 10.1" Quad Core Tablet/Portable DVD Player Combo SLTDVD1024 User Manual](#)

## Sylvania SLTDVD1024

# Sylvania 10.1" Quad Core Tablet/Portable DVD Player Combo SLTDVD1024 User Manual

## 1. INTRODUCTION

This manual provides instructions for the Sylvania 10.1" Quad Core Tablet/Portable DVD Player Combo, model SLTDVD1024. This device combines the functionality of an Android tablet with a built-in DVD player, offering versatile entertainment and productivity options. Please read this manual thoroughly before using the device to ensure proper operation and to maximize its features.

## 2. PRODUCT FEATURES

- 10.1" Android 10.0 Go Tablet/DVD Combo
- Built-in DVD player compatible with DVD, VCD, CD, and MP3 discs
- 10-point multi-touchscreen with 1024 x 600 IPS resolution
- 16GB of onboard storage for media and applications
- 1GB DDR3 RAM for smooth performance
- Wi-Fi ready (802.11 B/G/N) and Bluetooth connectivity
- Micro USB port for data transfer and charging

## 3. DEVICE OVERVIEW

### Front View



Figure 3.1: Front view of the Sylvania tablet in operation, displaying the Android home screen.

### DVD Player and Side Ports



Figure 3.2: Side view of the device showing the DVD player compartment in the open position, ready for disc insertion.



Figure 3.3: Rear angled view highlighting the integrated kickstand for hands-free viewing and various input/output ports on the side.

- **Screen:** 10.1-inch multi-touch display.
- **Speakers:** Integrated stereo speakers located below the screen.
- **Power Button:** Located on the side, used to turn the device on/off or put it to sleep.
- **Volume Buttons:** Adjust audio output.
- **Micro USB Port:** For charging and connecting to a computer.
- **Headphone Jack:** 3.5mm audio output.
- **MicroSD Card Slot:** For expandable storage.
- **DVD Compartment:** Located on the side, for inserting discs.
- **Kickstand:** Integrated on the back for upright viewing.

## 4. SETUP

### 4.1 Charging the Device

Before initial use, fully charge the device. Connect the provided USB power adapter to the Micro USB port on the device and plug it into a wall outlet. The charging indicator will illuminate. A full charge typically takes several hours.

## 4.2 Powering On/Off

- **To Power On:** Press and hold the Power button until the Sylvania logo appears on the screen.
- **To Power Off:** Press and hold the Power button until a menu appears. Select "Power off" and confirm.
- **Sleep Mode:** Briefly press the Power button to put the device into sleep mode or wake it up.

## 4.3 Initial Android Setup

Upon first power-on, follow the on-screen prompts to complete the initial Android setup. This includes selecting your language, connecting to a Wi-Fi network, and setting up your Google account. A Google account is required to download apps from the Google Play Store.

## 4.4 Connecting to Wi-Fi

1. Go to **Settings > Network & internet > Wi-Fi**.
2. Toggle Wi-Fi **On**.
3. Select your desired Wi-Fi network from the list.
4. Enter the network password if prompted and tap **Connect**.

# 5. OPERATING THE TABLET

## 5.1 Navigating the Android Interface

- **Touchscreen:** Use your fingers to tap, swipe, pinch, and zoom.
- **Home Screen:** The central hub for your apps and widgets. Swipe left or right to access additional screens.
- **Notifications Bar:** Swipe down from the top of the screen to view notifications and quick settings.
- **Navigation Buttons:** Typically located at the bottom of the screen (Back, Home, Recent Apps).

## 5.2 Installing and Managing Apps

1. Open the **Google Play Store** app.
2. Search for the desired app.
3. Tap **Install** to download and install the app.
4. To uninstall, go to **Settings > Apps & notifications**, select the app, and tap **Uninstall**.

## 5.3 Connecting Bluetooth Devices

1. Go to **Settings > Connected devices > Bluetooth**.
2. Toggle Bluetooth **On**.
3. The device will scan for available Bluetooth devices. Select your device from the list to pair.

# 6. OPERATING THE DVD PLAYER

## 6.1 Inserting a Disc

1. Gently open the DVD compartment cover on the side of the device.
2. Carefully place the DVD, VCD, or CD onto the spindle with the label side facing up. Ensure the disc is securely seated.
3. Close the DVD compartment cover until it clicks into place.

## 6.2 Playing Media

- Once a disc is inserted, the device should automatically detect it and launch the DVD Player application.
- If the application does not launch automatically, locate and tap the "DVD Player" icon on your home screen or app drawer.
- Use the on-screen controls within the DVD Player app to play, pause, stop, skip tracks/chapters, and adjust volume.
- For MP3 CDs, the player will display a list of tracks for selection.

## 6.3 Ejecting a Disc

To eject a disc, ensure playback has stopped. Open the DVD compartment cover and carefully remove the disc from the spindle.

## 7. MAINTENANCE

### 7.1 Cleaning the Device

- Use a soft, lint-free cloth to clean the screen and exterior surfaces.
- Do not use liquid cleaners, aerosols, or abrasive materials.
- For stubborn marks, slightly dampen the cloth with water, then wipe dry immediately.

### 7.2 Battery Care

- Avoid exposing the device to extreme temperatures.
- For long-term storage, charge the battery to approximately 50% and power off the device completely.
- Use only the provided or approved charging accessories.

### 7.3 Software Updates

Periodically check for system updates in **Settings > System > Advanced > System update** to ensure optimal performance and security.

## 8. TROUBLESHOOTING

- **Device will not power on:** Ensure the battery is charged. Connect the charger and try again.
- **Wi-Fi connection issues:** Check if Wi-Fi is enabled in settings. Restart your router and the device. Ensure you have entered the correct password.
- **DVD not playing:** Ensure the disc is clean and free of scratches. Verify the disc is inserted correctly with the label side up. Try a different disc to rule out disc-specific issues.
- **Slow performance/lag:** Close unnecessary background applications. Clear cache for frequently used apps. Consider performing a factory reset if issues persist (*Note: This will erase all data on the device*).
- **Poor streaming video quality:** Ensure a strong and stable Wi-Fi connection. Close other applications that might be consuming bandwidth.
- **Screen viewing angle issues:** Adjust the device's position or the kickstand to find an optimal viewing angle, as the display may have limited vertical viewing angles.

## 9. SPECIFICATIONS

Feature	Specification
Brand	SYLVANIA
Model Number	SLTDVD1024

Feature	Specification
Screen Size	10.1 Inches
Display Type	LCD LED, IPS
Native Resolution	1024x600
Operating System	Android 10.0 Go
RAM	1GB DDR3
Storage	16GB (onboard)
Connectivity	Wi-Fi (802.11 B/G/N), Bluetooth
Ports	Micro USB, 3.5mm Headphone Jack, MicroSD Card Slot
Compatible Disc Types	DVD, VCD, CD, MP3 Compatible disc
Item Dimensions (L x W x H)	10"L x 5"W x 5"H
UPC	649661884033

## 10. WARRANTY AND SUPPORT

### 10.1 Limited Warranty

This Sylvania device comes with a 90-day limited warranty. Please refer to the warranty documentation included with your purchase for specific terms and conditions. This warranty typically covers manufacturing defects under normal use.

### 10.2 Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty claims, please contact Sylvania customer support. Refer to the contact information provided in your product packaging or visit the official Sylvania website for support resources.