

ARCADE1UP 195570000496

Arcade1Up Tempest Atari Legacy Edition Home Arcade Machine User Manual

Model: 195570000496

INTRODUCTION

Welcome to the Arcade1Up Tempest Atari Legacy Edition Home Arcade Machine. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your new arcade cabinet. Designed to bring an authentic arcade experience into your home, this machine features classic games and a retro cabinet design.



Figure 1: Arcade1Up Tempest Atari Legacy Edition Home Arcade Machine.

The Arcade1Up Tempest Atari Legacy Edition cabinet is a full-size, stand-up arcade machine that replicates the look

and feel of original arcade units. It includes licensed artwork, real-feel joysticks, buttons, a light-up marquee, and a printed coin door for an immersive gaming experience.

SETUP AND ASSEMBLY

Your Arcade1Up machine requires assembly. Please follow the instructions provided in the separate assembly guide included with your product packaging. Ensure all components are present and undamaged before beginning assembly.

Key Assembly Considerations:

- **Component Check:** Verify all parts are included as per the assembly guide's parts list.
- **Control Panel Wiring:** Ensure all control panel connectors are securely attached. Loose connections can lead to unresponsive buttons or controls.
- **Riser Attachment:** If your unit includes a riser, ensure it is securely attached to the main cabinet. Some users may find additional bolts beneficial for a more secure fit.
- **Placement:** Position the cabinet on a stable, level surface. The compact design allows it to fit seamlessly into various décors.
- **Power Connection:** Connect the machine to a standard 110V wall outlet.



Figure 2: Detailed view of the control panel, showing the trackball, spinner, and various buttons.

OPERATING INSTRUCTIONS

The Arcade1Up Tempest Atari Legacy Edition comes pre-loaded with 12 classic games, offering a wide range of entertainment. The machine features a 17-inch full-color high-resolution LCD screen and integrated speakers with adjustable volume for an authentic arcade audio-visual experience.

Game Selection and Controls:

- **Power On/Off:** Use the designated power switch to turn the machine on or off.
- **Game List:** Upon powering on, the machine will display a menu of available games.
- **Navigation:** Use the trackball or joystick to navigate through the game selection menu.
- **Select Game:** Press the 'A' button (or equivalent action button) to select a game.
- **Included Games:** The cabinet includes titles such as Asteroids, Centipede, Major Havoc, Missile Command, Crystal Castles, Tempest, and Millipede.
- **Volume Control:** Adjust the audio volume using the dedicated volume controls on the control panel.
- **Light-Up Marquee:** The marquee above the screen illuminates when the machine is powered on, enhancing the arcade aesthetic.



Figure 3: Front view of the arcade machine, highlighting the screen and control panel.

MAINTENANCE

To ensure the longevity and optimal performance of your Arcade1Up machine, regular maintenance is recommended:

- **Cleaning:** Use a soft, dry cloth to wipe down the cabinet and screen. Avoid abrasive cleaners or excessive moisture.
- **Control Panel:** Keep the control panel clean and free of dust and debris. The clear deck protector helps maintain its condition.
- **Ventilation:** Ensure adequate airflow around the cabinet to prevent overheating. Do not block ventilation openings.
- **Storage:** If storing the machine for an extended period, ensure it is in a dry, temperature-controlled

environment.

TROUBLESHOOTING

If you encounter issues with your Arcade1Up machine, refer to the following common troubleshooting tips:

Issue	Possible Cause	Solution
Buttons or Controls Unresponsive	Loose internal wiring or faulty components.	Ensure all internal wiring connections to the control panel are secure. If the issue persists, contact customer support for further assistance.
Trackball Not Functioning Correctly (e.g., poor diagonal movement)	Potential manufacturing defect or software calibration issue.	Ensure the trackball is clean and free of debris. Check for any available firmware updates from Arcade1Up. If the problem continues, contact customer support.
Game Audio Sync Issues	Software or emulation discrepancy.	This may be a known characteristic for certain emulated games (e.g., Asteroids). Ensure the machine's software is up to date.
Riser Not Attaching Securely	Improper alignment or insufficient fastening.	Re-check assembly steps for riser attachment. Ensure all screws are tightened appropriately.
Machine Plays by Itself / Ghost Inputs	Potential short circuit or faulty button.	Power cycle the machine. Inspect buttons for any physical damage or sticking. Contact customer support if the issue persists.

SPECIFICATIONS

Feature	Detail
Product Title	Arcade1Up Tempest Atari Legacy Edition Home Arcade Machine
Brand	ARCADE1UP
Model Number	195570000496
Included Games	12 classic games (e.g., Asteroids, Centipede, Major Havoc, Missile Command, Crystal Castles, Tempest, Millipede)
Screen Size	17-inch LCD

Feature	Detail
Assembled Dimensions	22.85 D x 18.90 W x 57.8 H inches
Product Weight	67.8 lbs (Product only), 79.5 lbs (Shipping weight)
Manufacturer	Tastemakers, LLC
Release Date	March 22, 2021

WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the documentation included with your product or visit the official Arcade1Up website. The manufacturer, Tastemakers, LLC, provides support for their products.

For customer support inquiries, please contact the manufacturer directly using the contact information provided in your product's packaging or on their official website.

© 2025 Arcade1Up. All rights reserved.
Atari and associated logos are trademarks of Atari Interactive, Inc.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

